




# INSTALLATION MANUAL CANOPY ISUZU D-MAX ALL NEW 2020

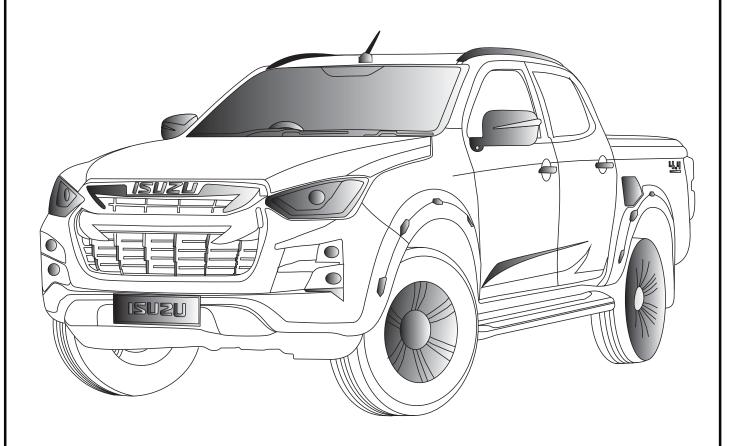


AEROKLAS CO., LTD.


62 Soi Bangna-Trad 25, Bangna-Trad Rd. Bangna, Bangkok 10260 THAILAND. Tel: (662) 7443020 Direct Line: (662) 7443034-5 Fax: (662) 7443033 www.aeroklas.com E-mail: webinfo@aeroklas.com

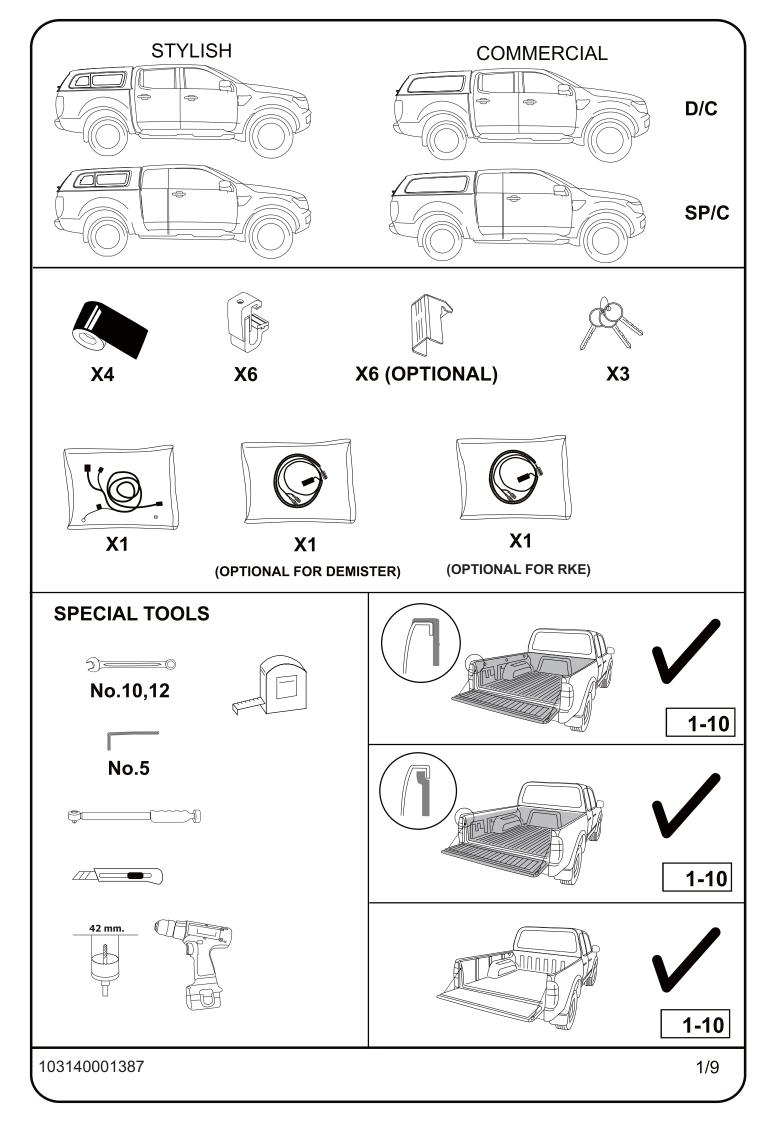

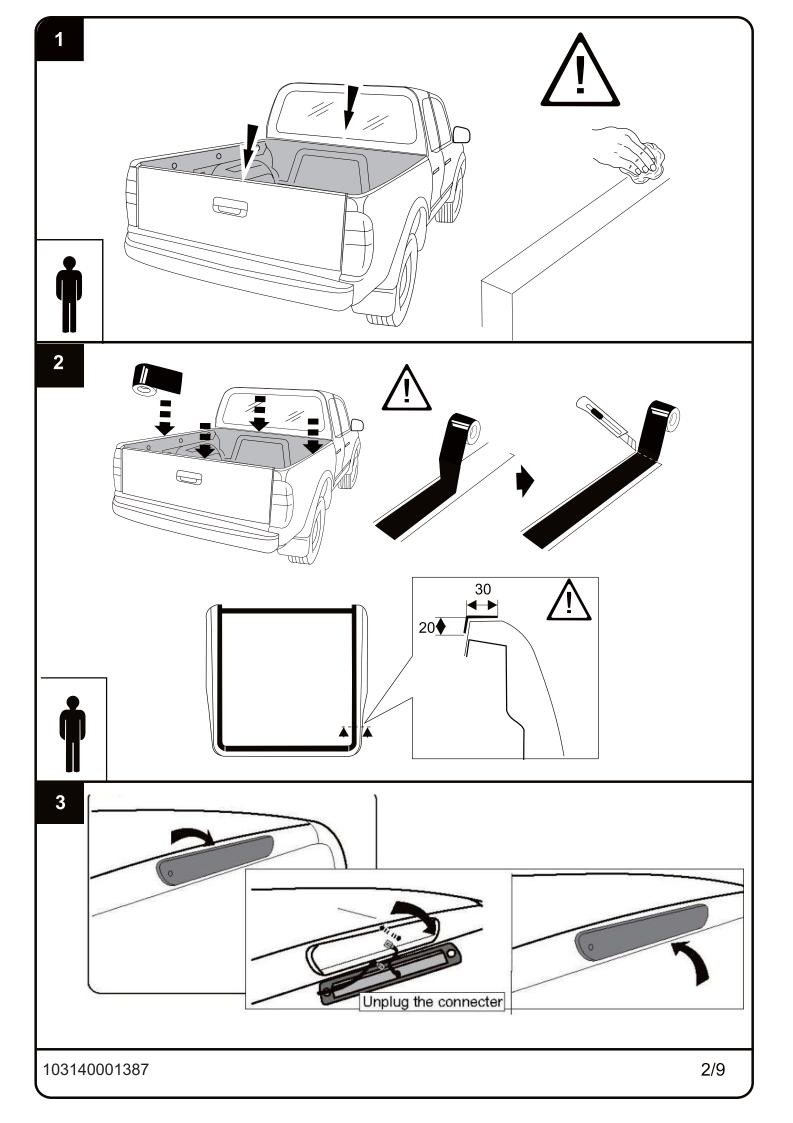

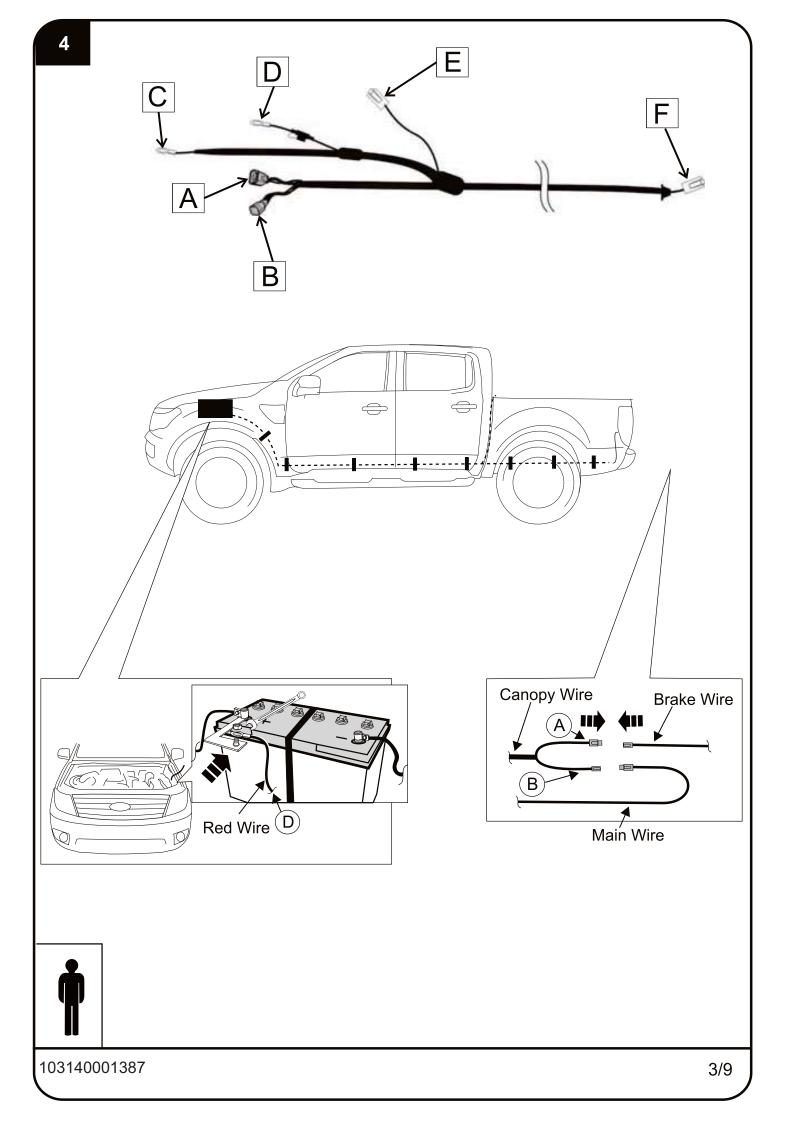




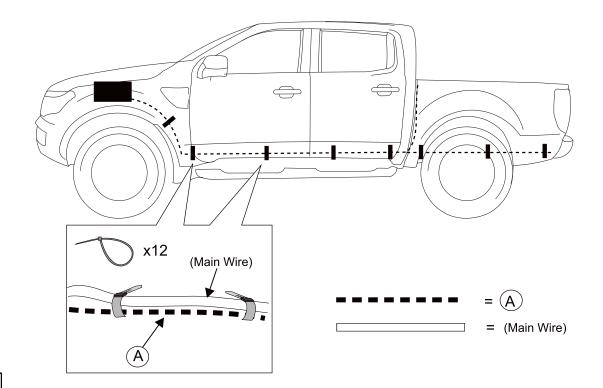




#### **4.2** OPTIONAL FOR DEMISTER

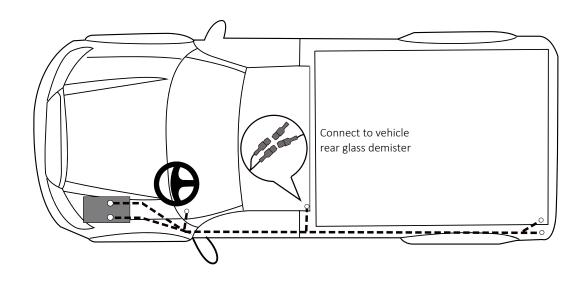






103140001387

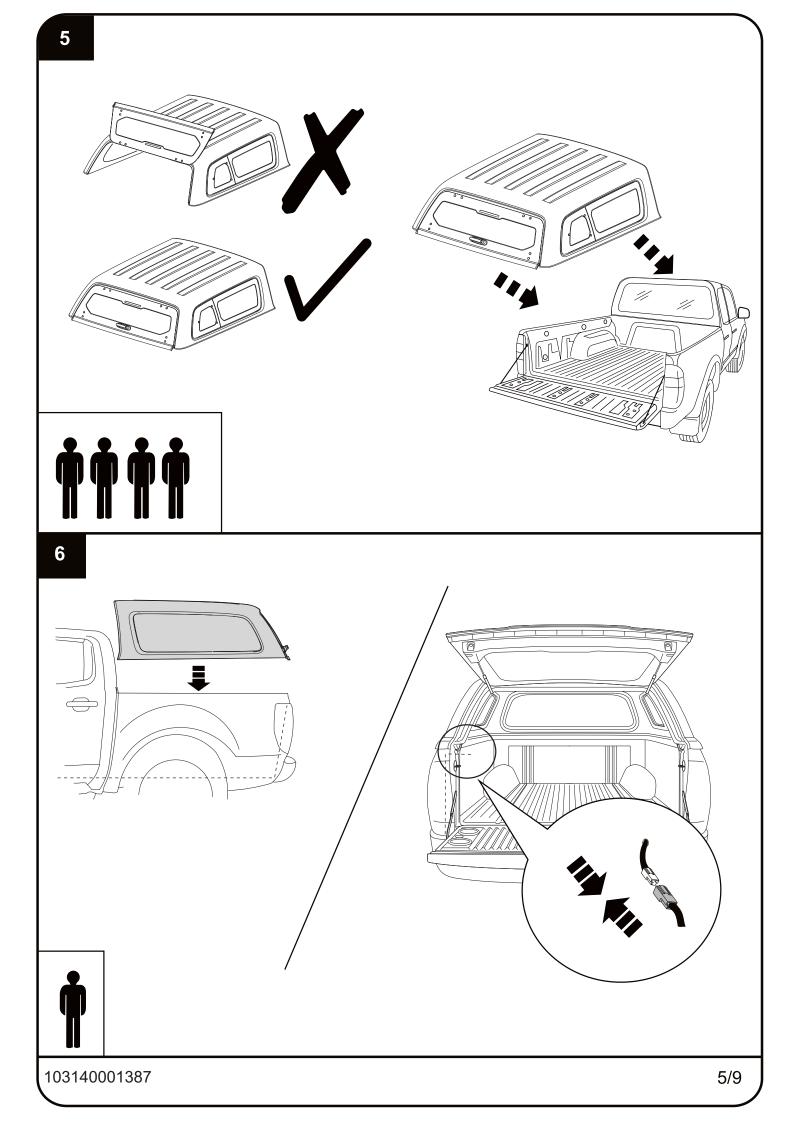




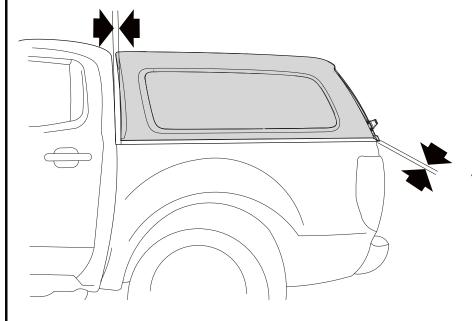

Tolerance ≤ 10 mm.


#### 6.2

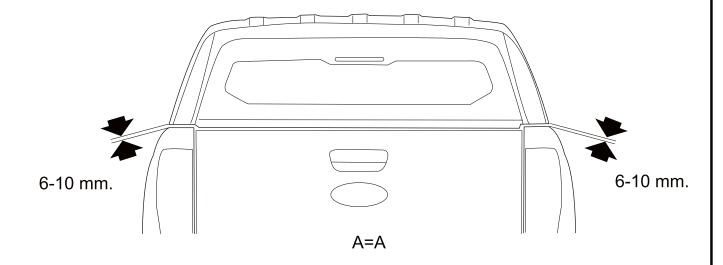






103140001387 6/9



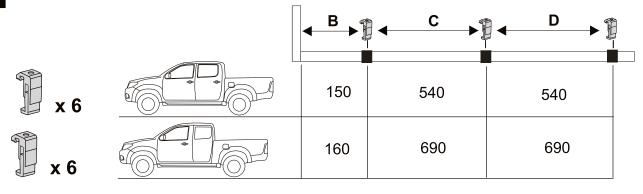

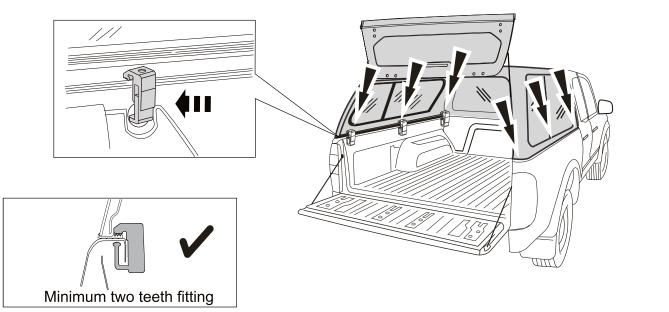


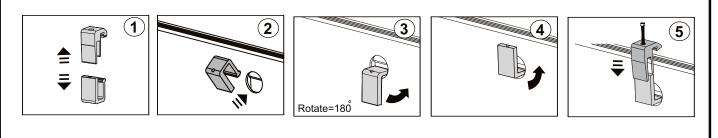

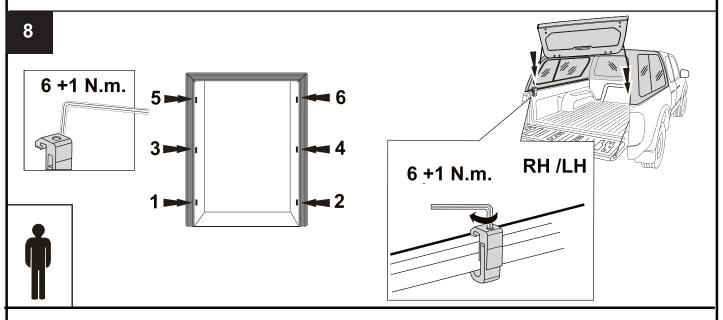


103140001387


7/9

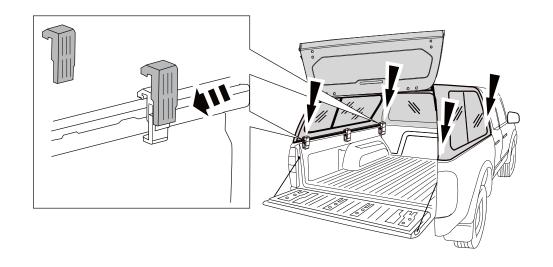



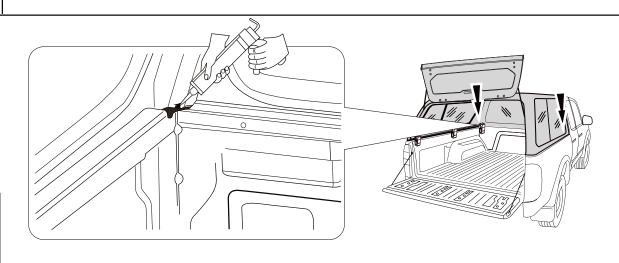



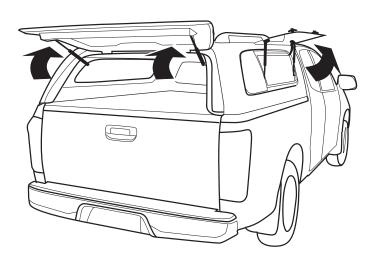




103140001387 8/9


### Wiring diagram for ISUZU D-MAX

#### Power electric wires

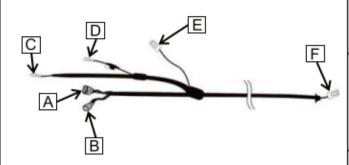



Demister (Optional)

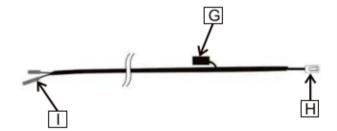


LU D-IVIAX			
Point	Photo	Function	Referancemaual
Α		Connect to Rear tail lamp	Canopy Wire Brake Wire
В		Connect to Rear tail lamp	Canopy Wire Brake Wire
С	P	Connect to Battery cathode	
D		Connect to Battery anode	
Е	4	Connect to Demister(H) (Optional)	
F	-	Connect to canopy	
G		Relay & Fuse	
Н		Connect to power Electricwires(E)	
Ι		Connect to Vehicle rear glass demister	

103140001387 9/9




## Remote Keyless Entry CANOPY ISUZU D-MAX ALL NEW 2020

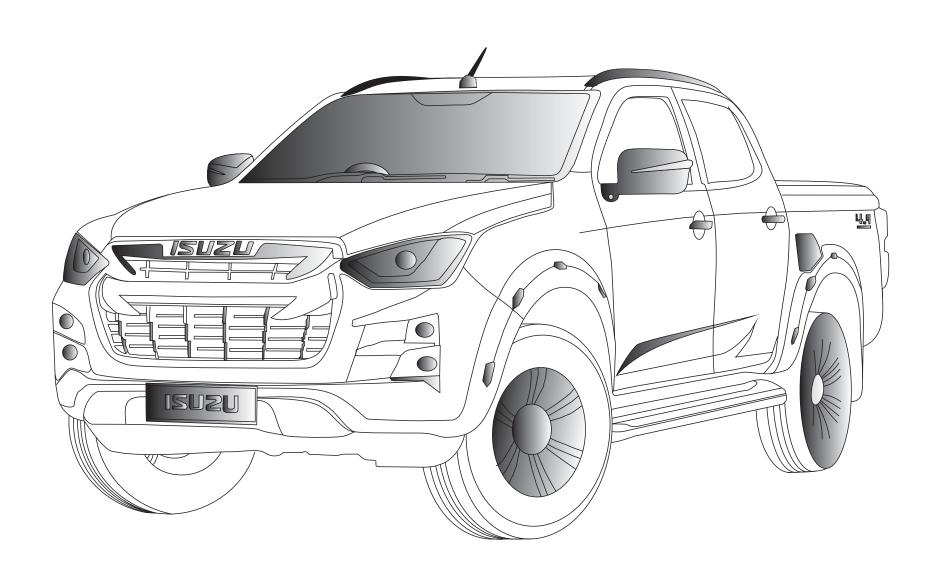



Always refer to the vehicle's Workshop Manual when removing vehicle components.


- · Note down all clock and radio settings.
- . In the engine bay, disconnect the negative battery terminal (1).

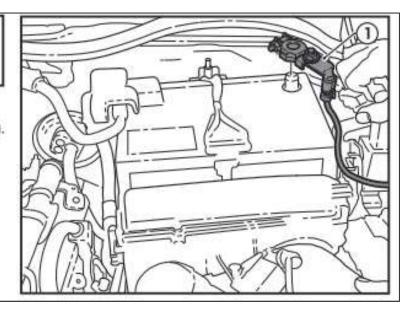




On RG-01 D-Max, remove the LHS kick panel under the steering-wheel.

#### Locate LHS door inline connector as shown

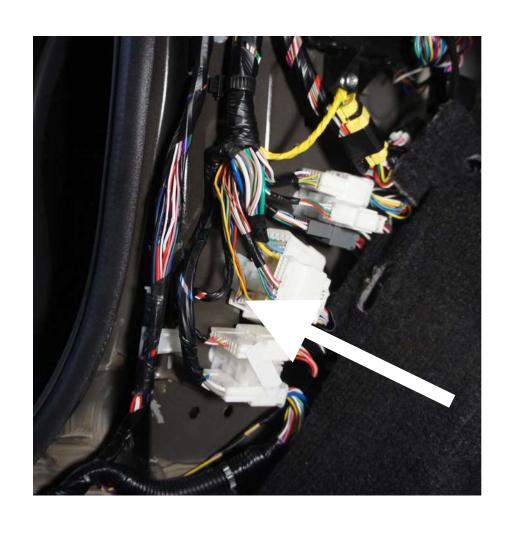

(A) Locate the LIGHT BROWN cable(1st down on left). Pale BLUE canopy cable "LOCK" using the scotch lock as shown.

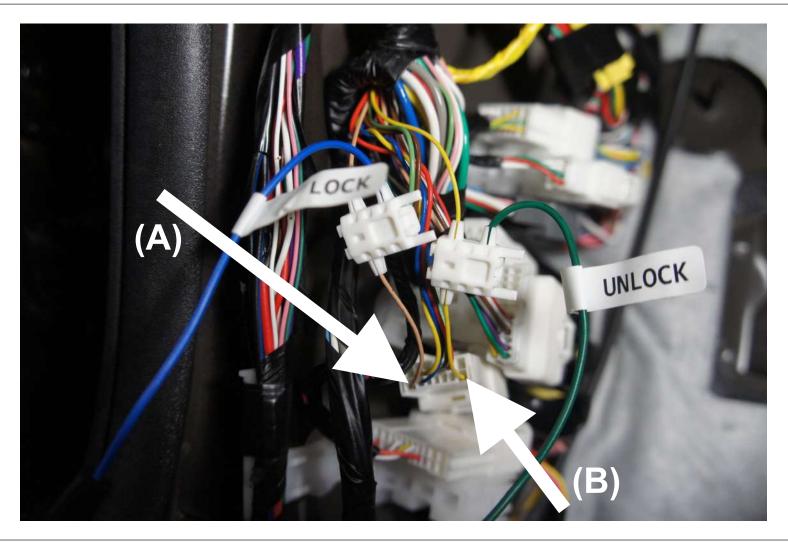

(B) Locate the YELLOW cable(1st down on right). Pale GREEN canopy cable "UNLOCK" using the scotch lock as shown.