


IMPORTANT:

No liability will be incurred by Industrial Specialised Applications company, for injury, death, or property damage caused by a product which has been set up, operated, and/or installed contrary to EZDown installation guide/ manual, or which has been subjected to misuse, negligence, or accident, or which has been repaired or altered by anyone other than Industrial Specialised Applications, or which has been used in a manner or for a purpose for which the product was not designed.

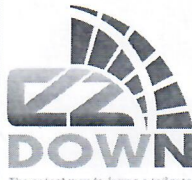

EZDown
The safest way to lower a tailgate


ED0802


ED0308


ED0801


ED0005



ED0303


ED0804


ED0304


ED0803

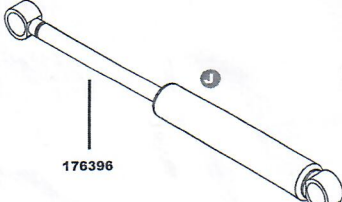


176396




EZDown Instruction


VW AMAROK - ED0800

www.ezdown.co.za **GENERATION 1**


1

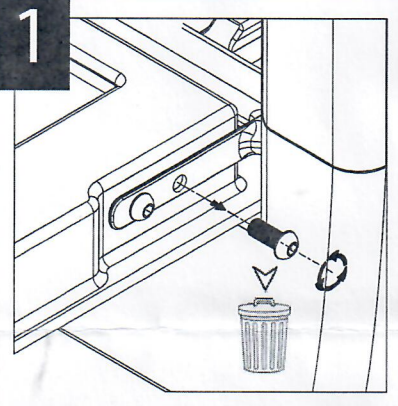


2

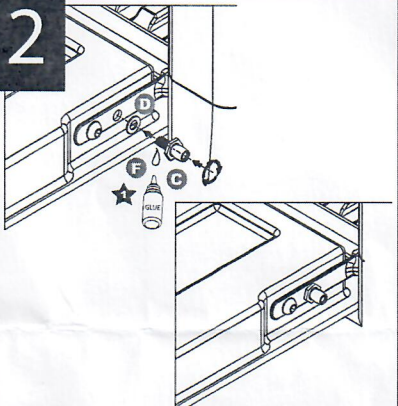


3

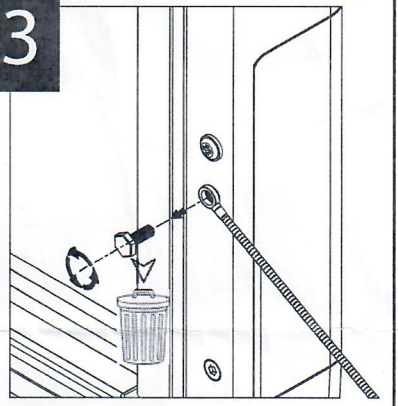


4

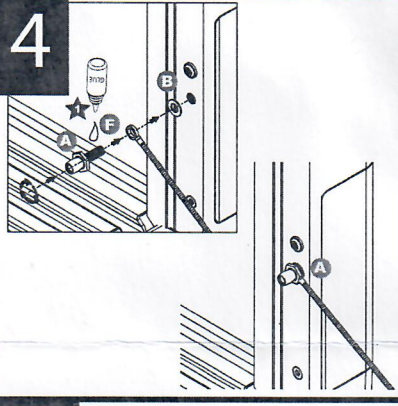


5

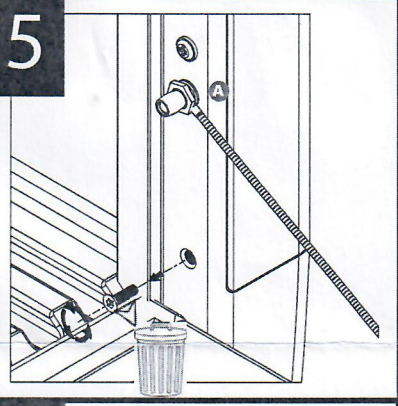


6

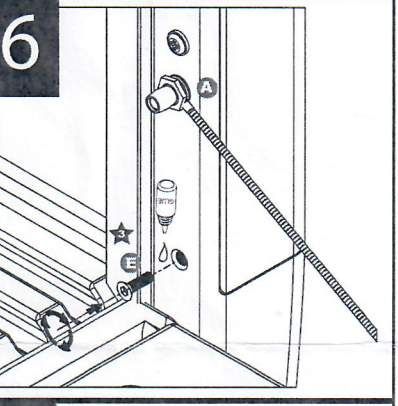


7

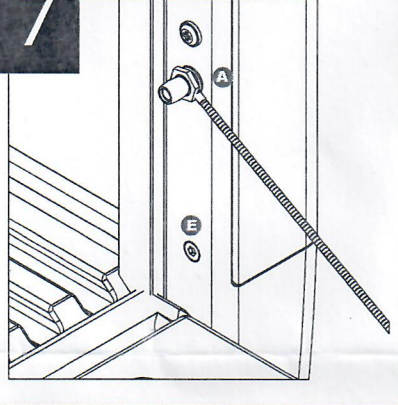


8

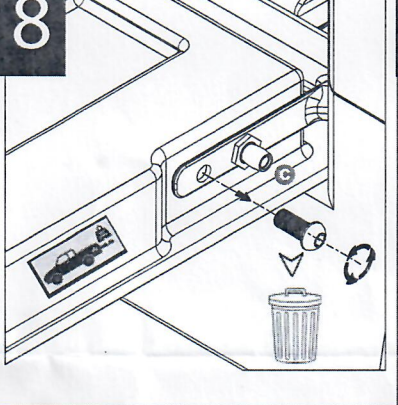


9

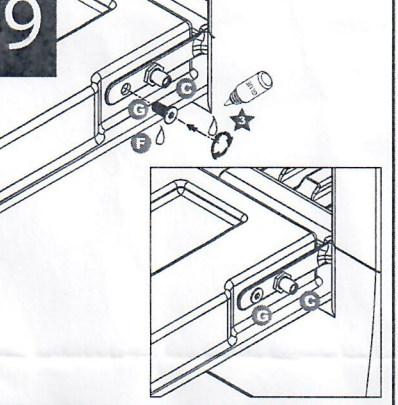


10

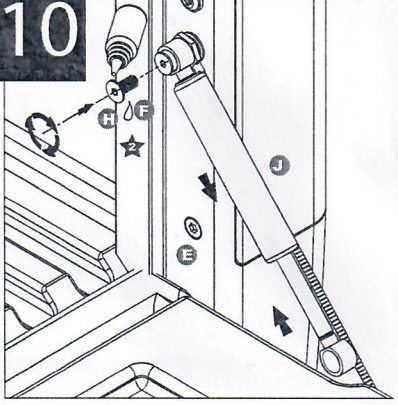

11

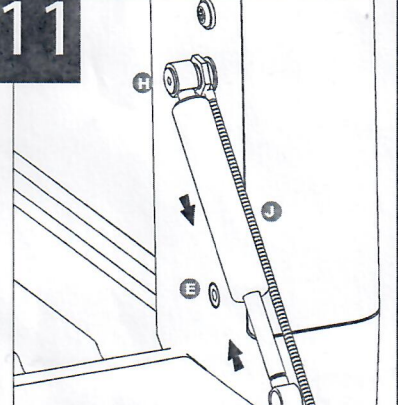

12

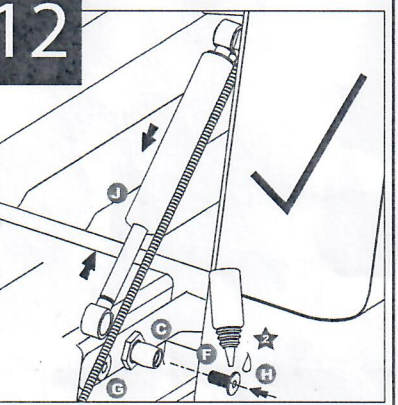

FITTING KIT CODE	MANUFACTURER	MODEL TYPE	YEAR	STOCKIST	PRODUCT	REVISION	LABOUR TIME	DATE	PAGE
ED0800	VOLKSWAGEN	AMAROK	2013 onwards	GENERAL USE	EZDOWN	3	20min	12/05/2017	1
TORQUE-N.m		★ 27N.m±2N.m		★ 15N.m±2N.m		★ 17N.m±2N.m			

NB: After installation please close tailgate gently to ensure that there is no interference with any hardware.