



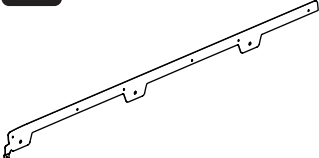
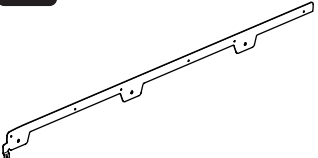
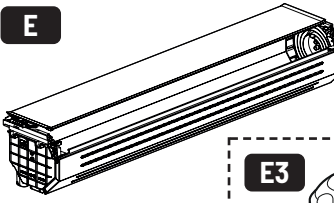

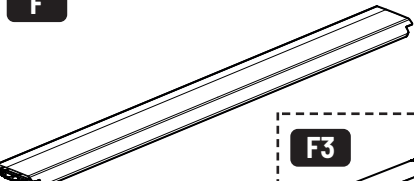

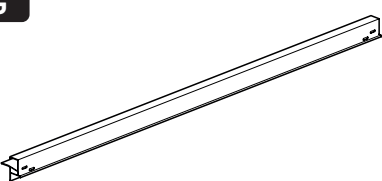
# MOUNTAIN TOP® EVOe ROLL COVER

Installation manual














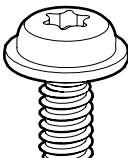
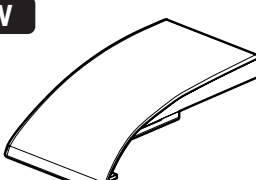
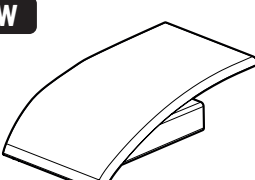




DOWNLOAD PDF




Parts



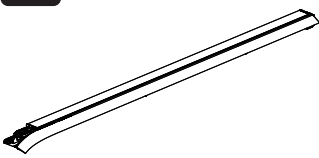
<p><b>A</b></p>  <p>x1</p>	<p><b>B</b></p>  <p>x1</p>	<p><b>C</b></p>  <p>x1</p>	<p><b>D</b></p>  <p>x1</p>
<p><b>E</b></p>  <p>x1</p> <div data-bbox="319 537 542 627" style="border: 1px dashed black; padding: 2px;"> <p><b>E3</b></p>  <p>x2</p> </div>	<p><b>F</b></p>  <p>x1</p> <div data-bbox="845 537 1021 627" style="border: 1px dashed black; padding: 2px;"> <p><b>F3</b></p>  <p>x1</p> </div>	<p><b>G</b></p>  <p>x1</p>	



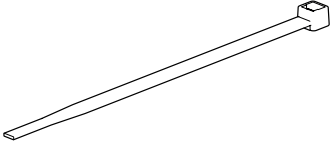
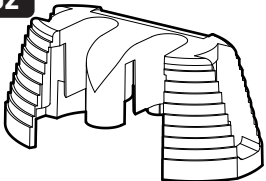
Kit

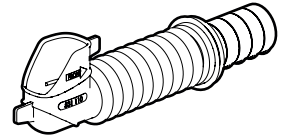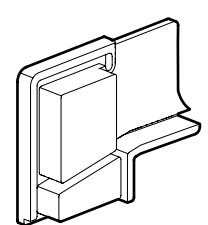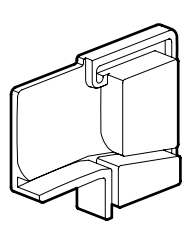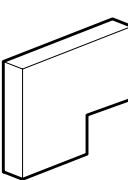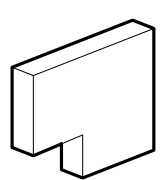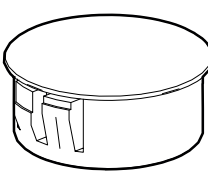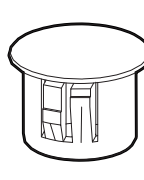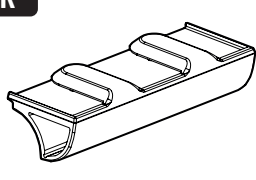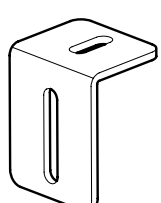

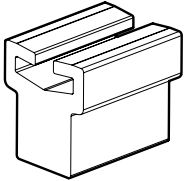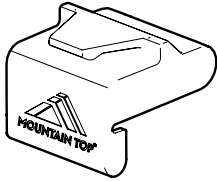
<p><b>H</b></p>  <p>x19</p>	<p><b>I</b></p>  <p>x12</p>	<p><b>J</b></p>  <p>x12</p>	<p><b>K</b></p>  <p>x2</p>
<p><b>L</b></p>  <p>x1</p>	<p><b>M</b></p>  <p>x1</p>	<p><b>N</b></p>  <p>x1</p>	<p><b>O</b></p>  <p>x1</p>
<p><b>P</b></p>  <p>x2</p>	<p><b>Q</b></p>  <p>x2</p>	<p><b>R</b></p>  <p>x2</p>	<p><b>S</b></p>  <p>x6</p>
<p><b>T</b></p>  <p>x1</p>	<p><b>U</b></p>  <p>x5</p>	<p><b>V</b></p>  <p>x1</p>	<p><b>W</b></p>  <p>x1</p>

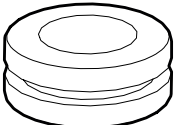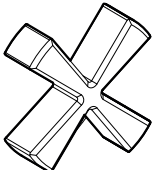Kit	
<b>X</b>  x1	<b>Y</b>  x2

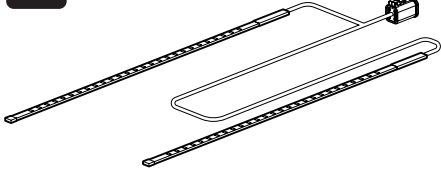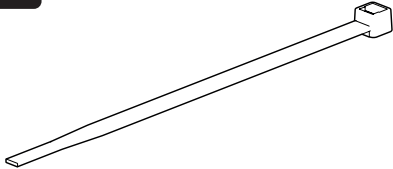
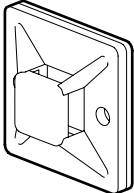


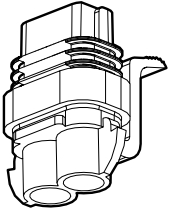





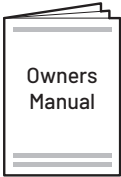



Kit		
<b>A2</b>  x2	<b>B2</b>  x1	<b>C2</b>  x2

Kit		
<b>D2</b>  x1	<b>E2</b>  x6	<b>F2</b>  x6

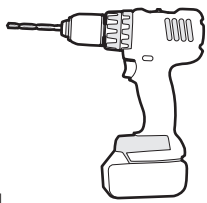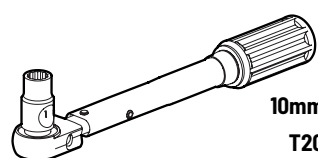
Power supply kit			
<b>G2</b>  x1	<b>H2</b>  x1	<b>I2</b>  x10	<b>J2</b>  x1

Kit		
 Manual x1	 TÜV x1	 Owners Manual x1
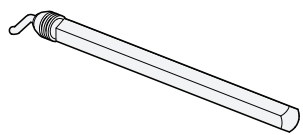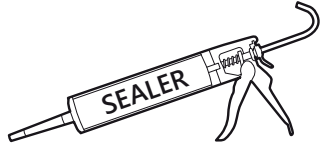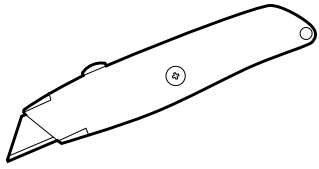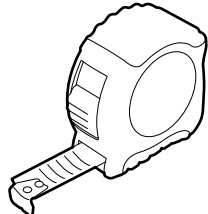
## Tools needed

 <p>Ø3.5MM Ø2.4MM</p>	<p>1 - 25 Nm</p>  <p>10mm  T20  T30 </p>	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	
			
			


## Applying rust protection

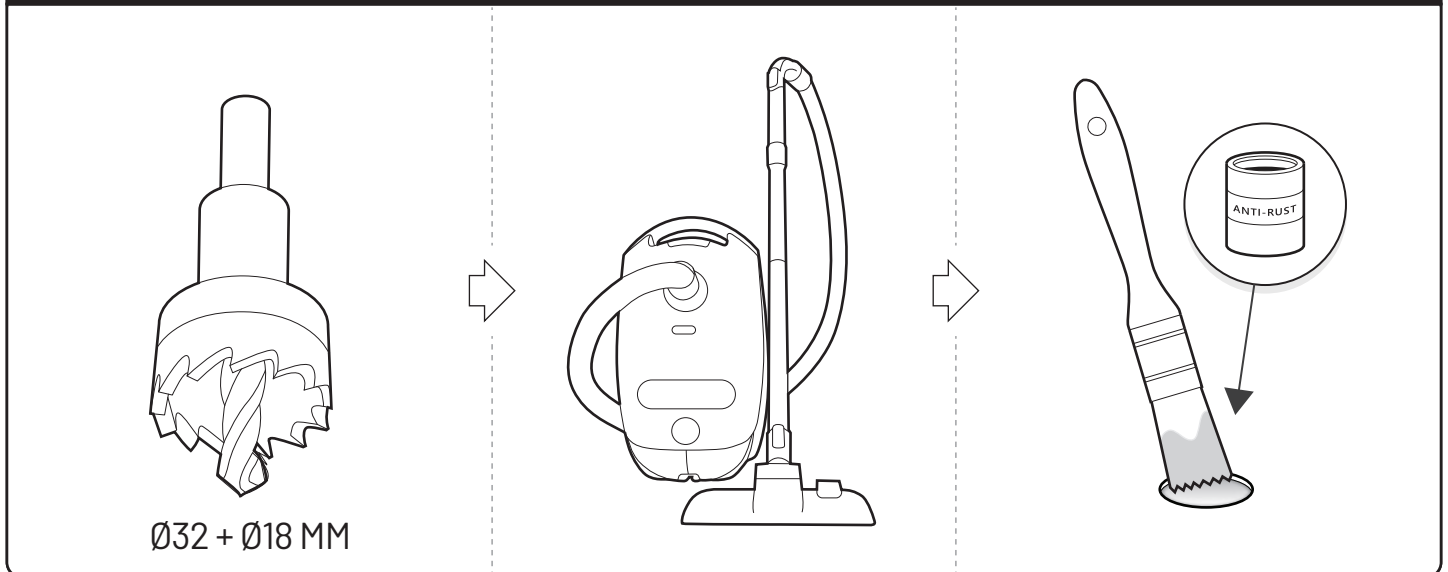


Sharp edge




1

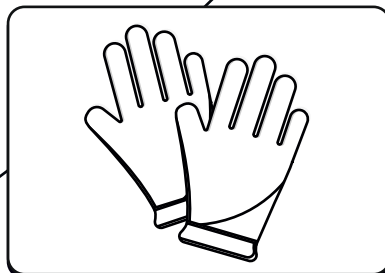


2

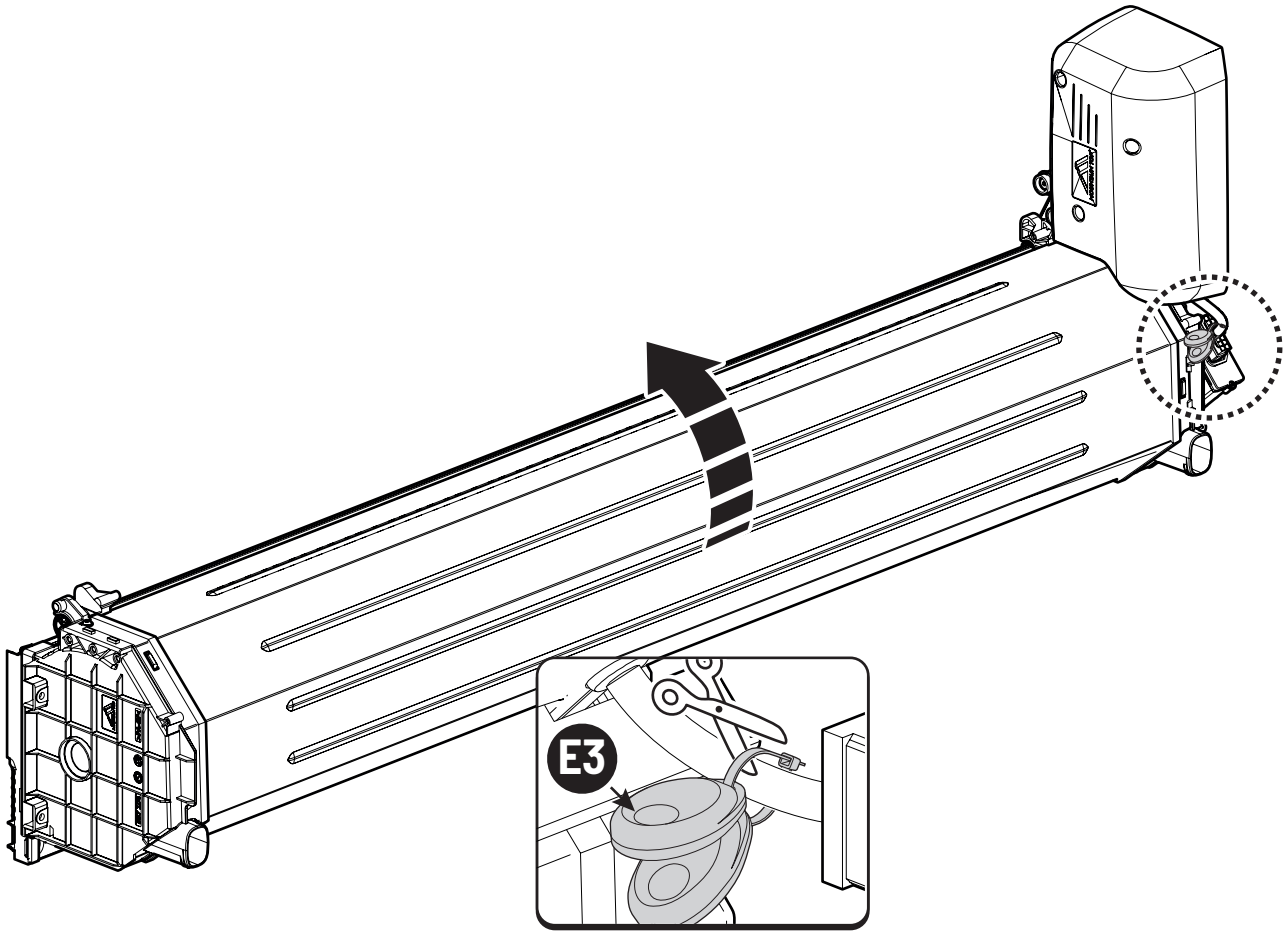



3


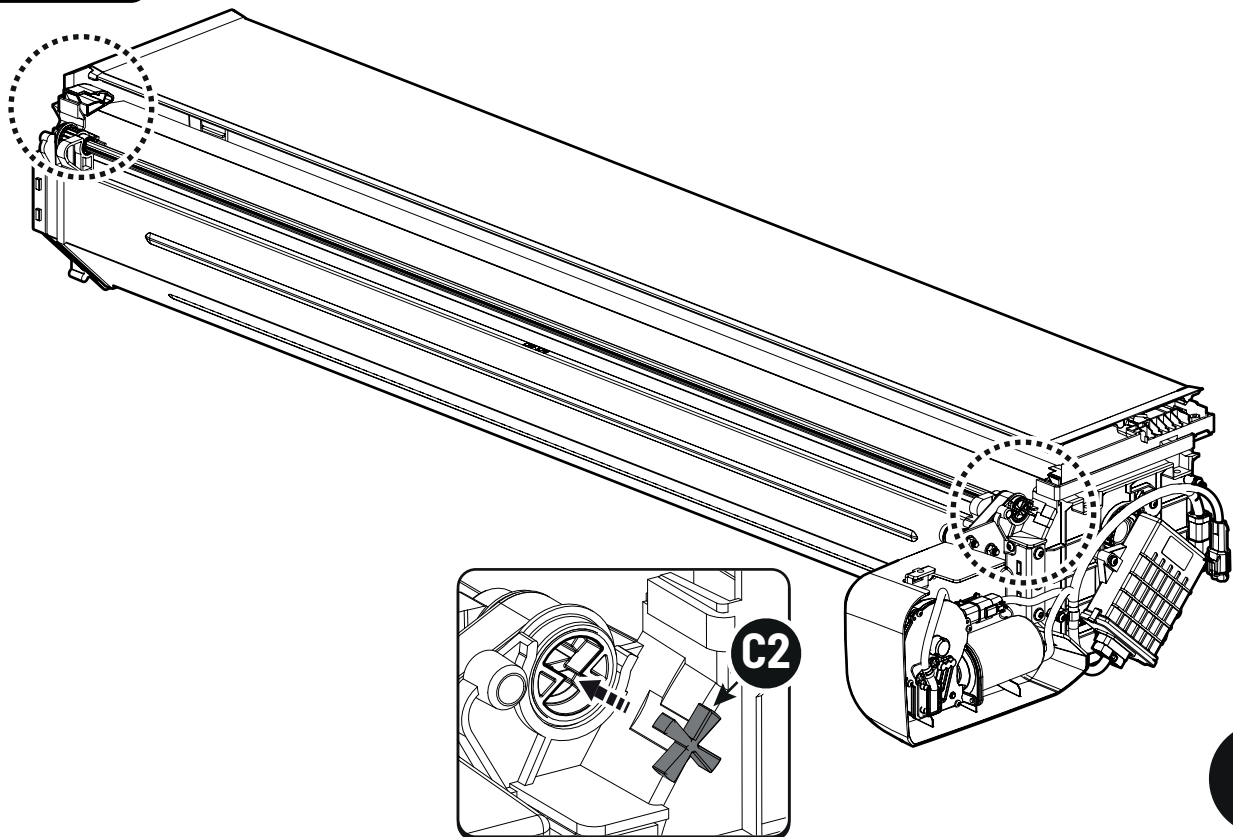


4


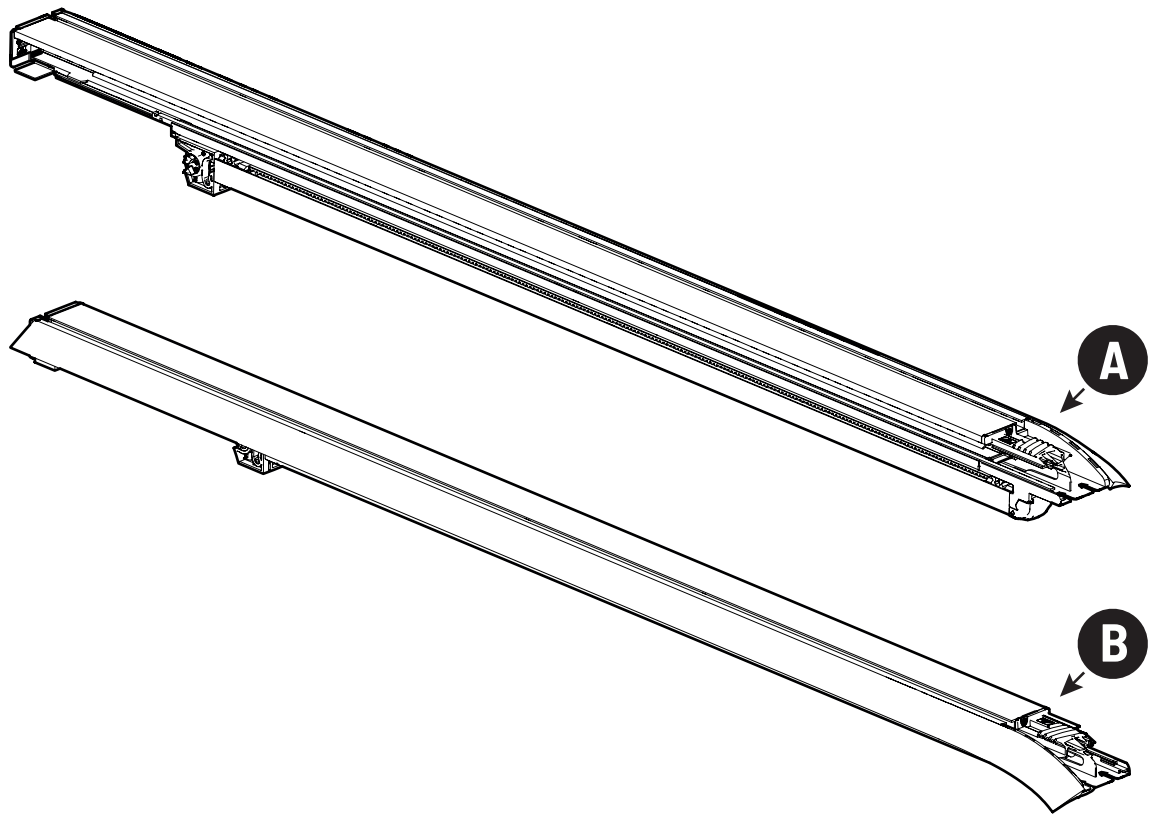




5

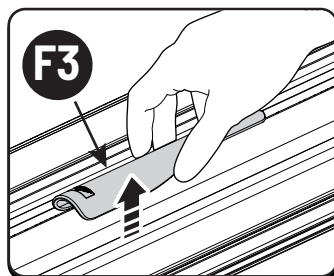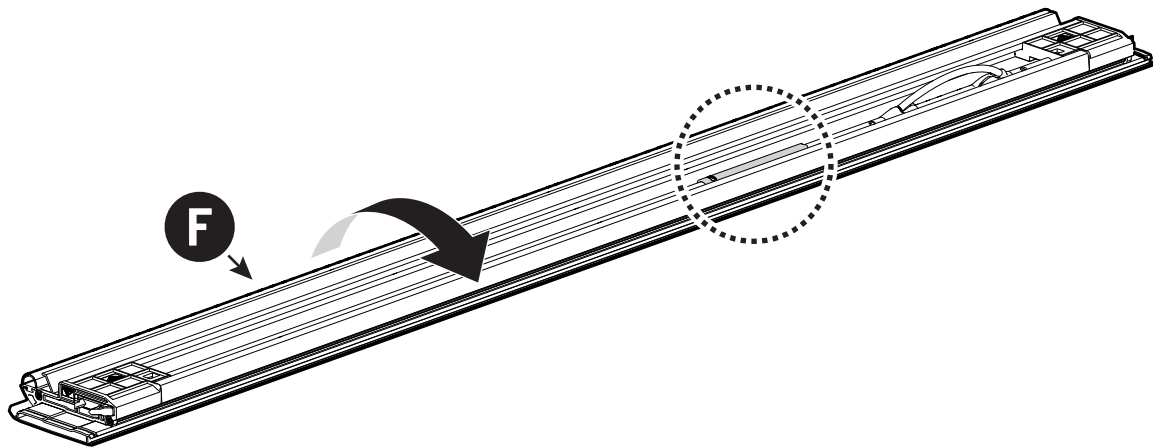

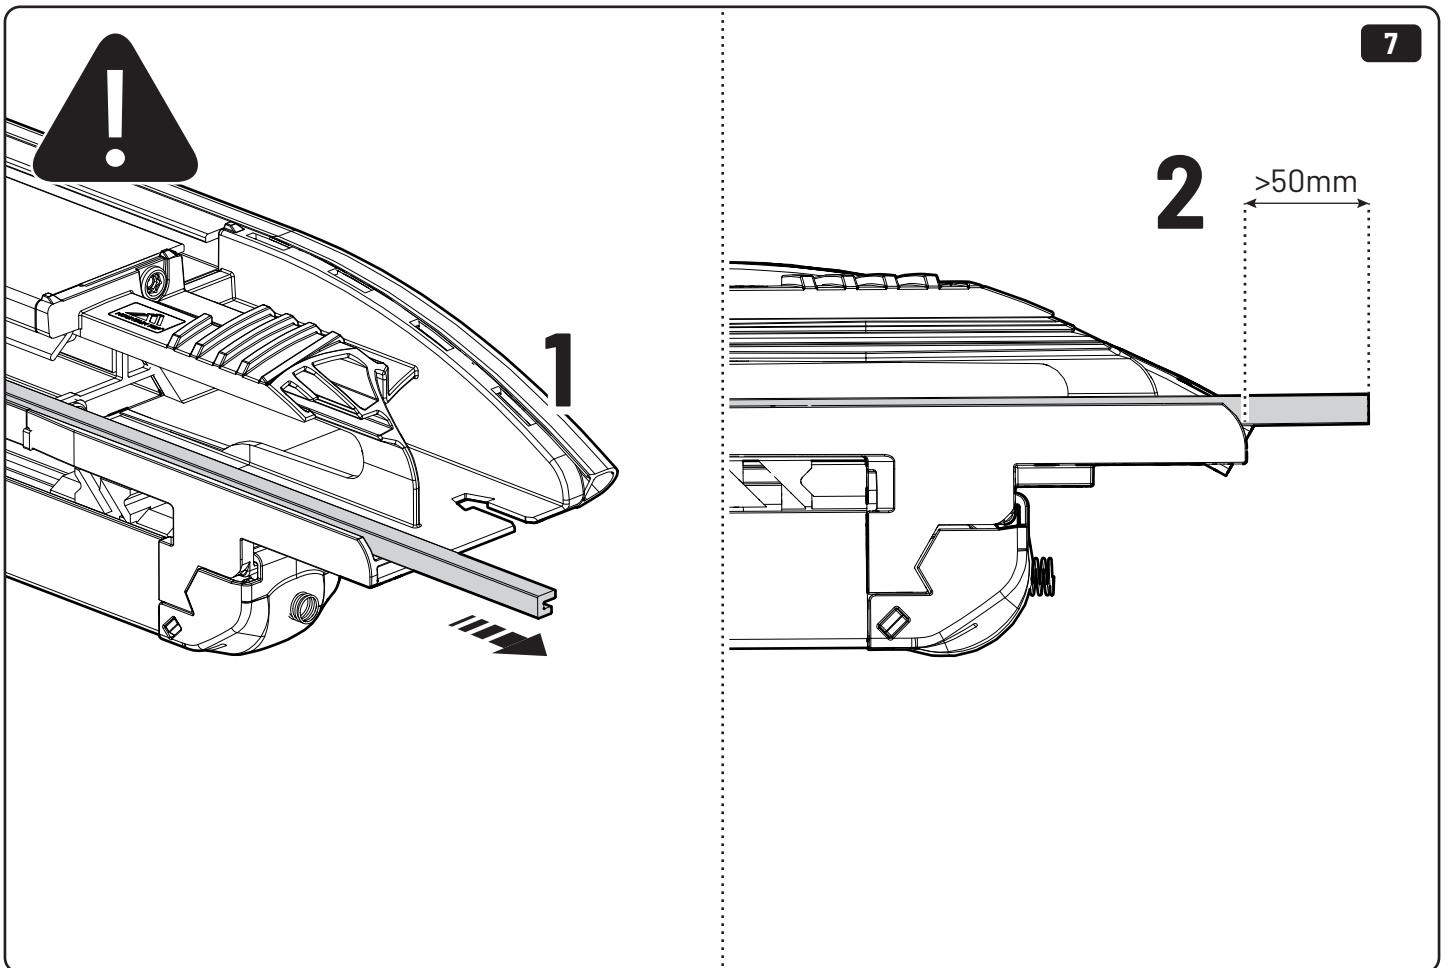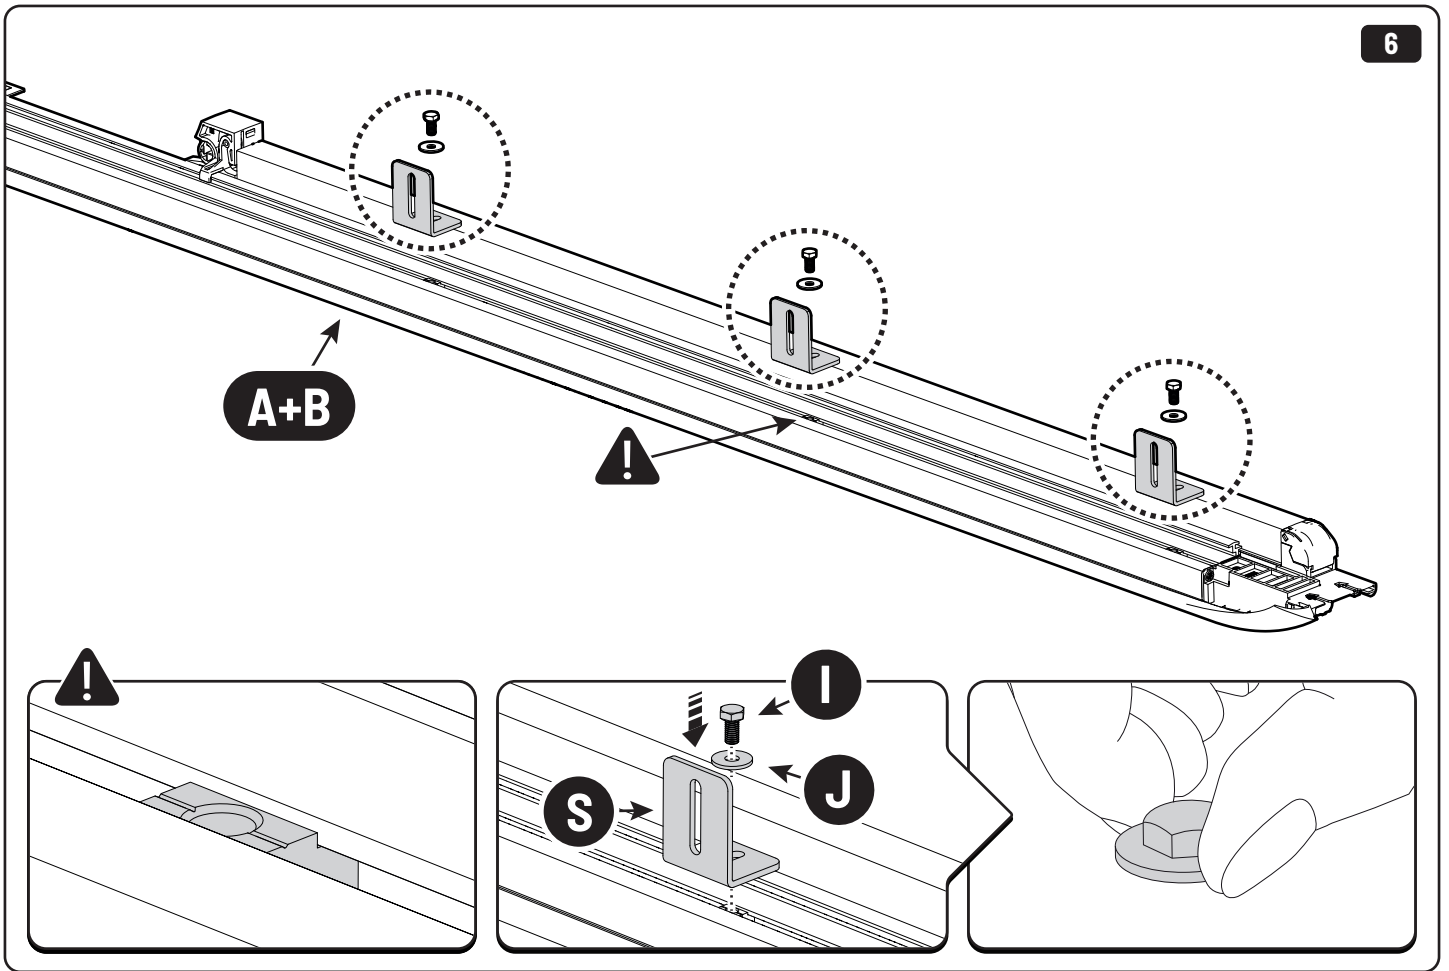




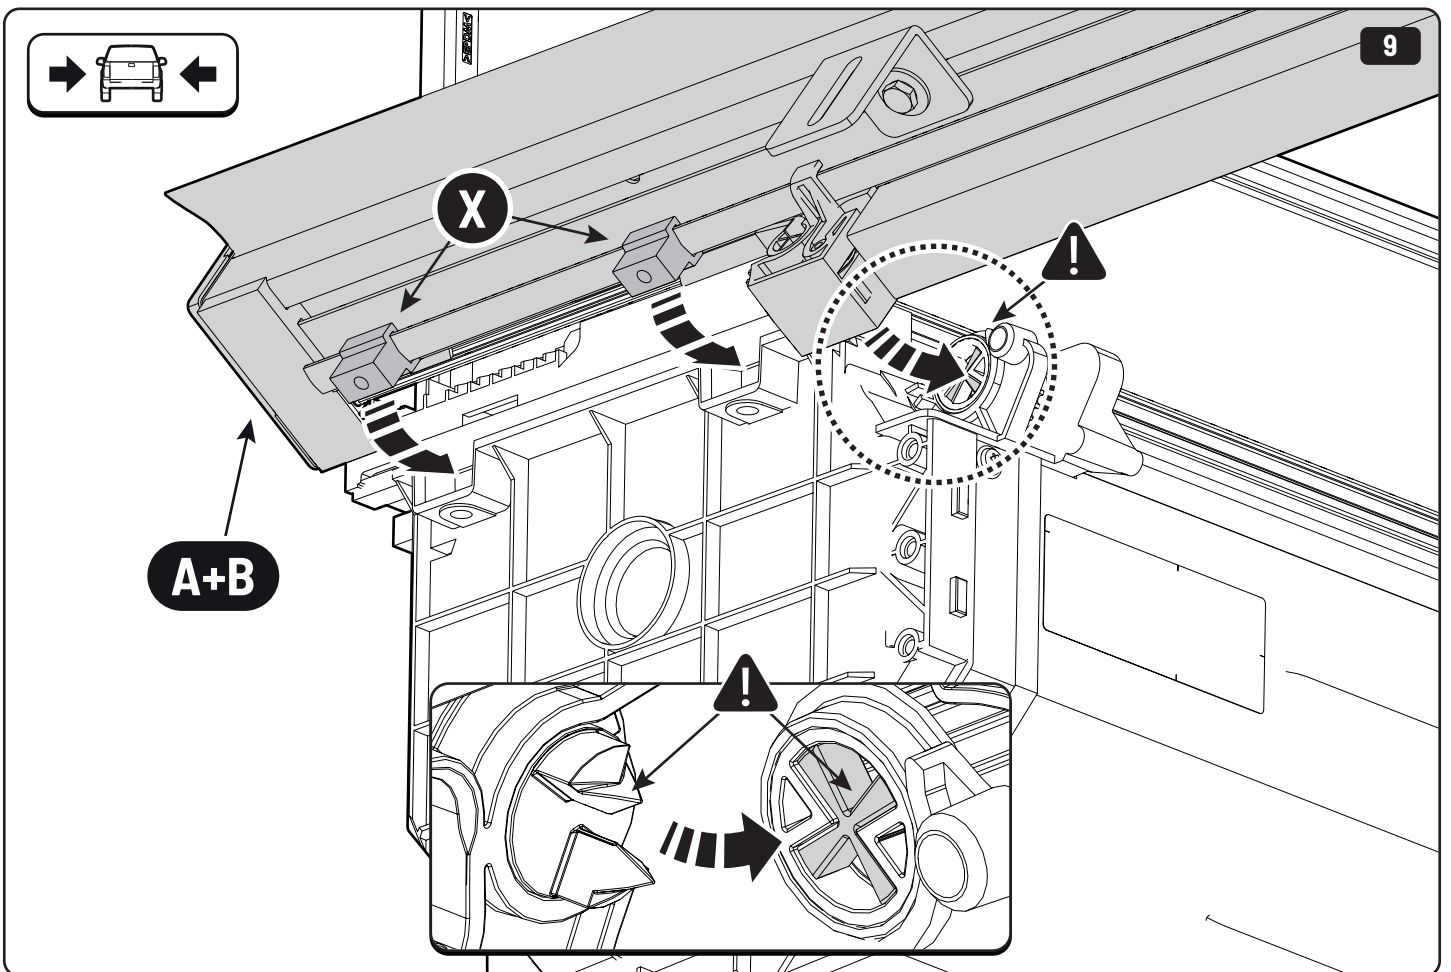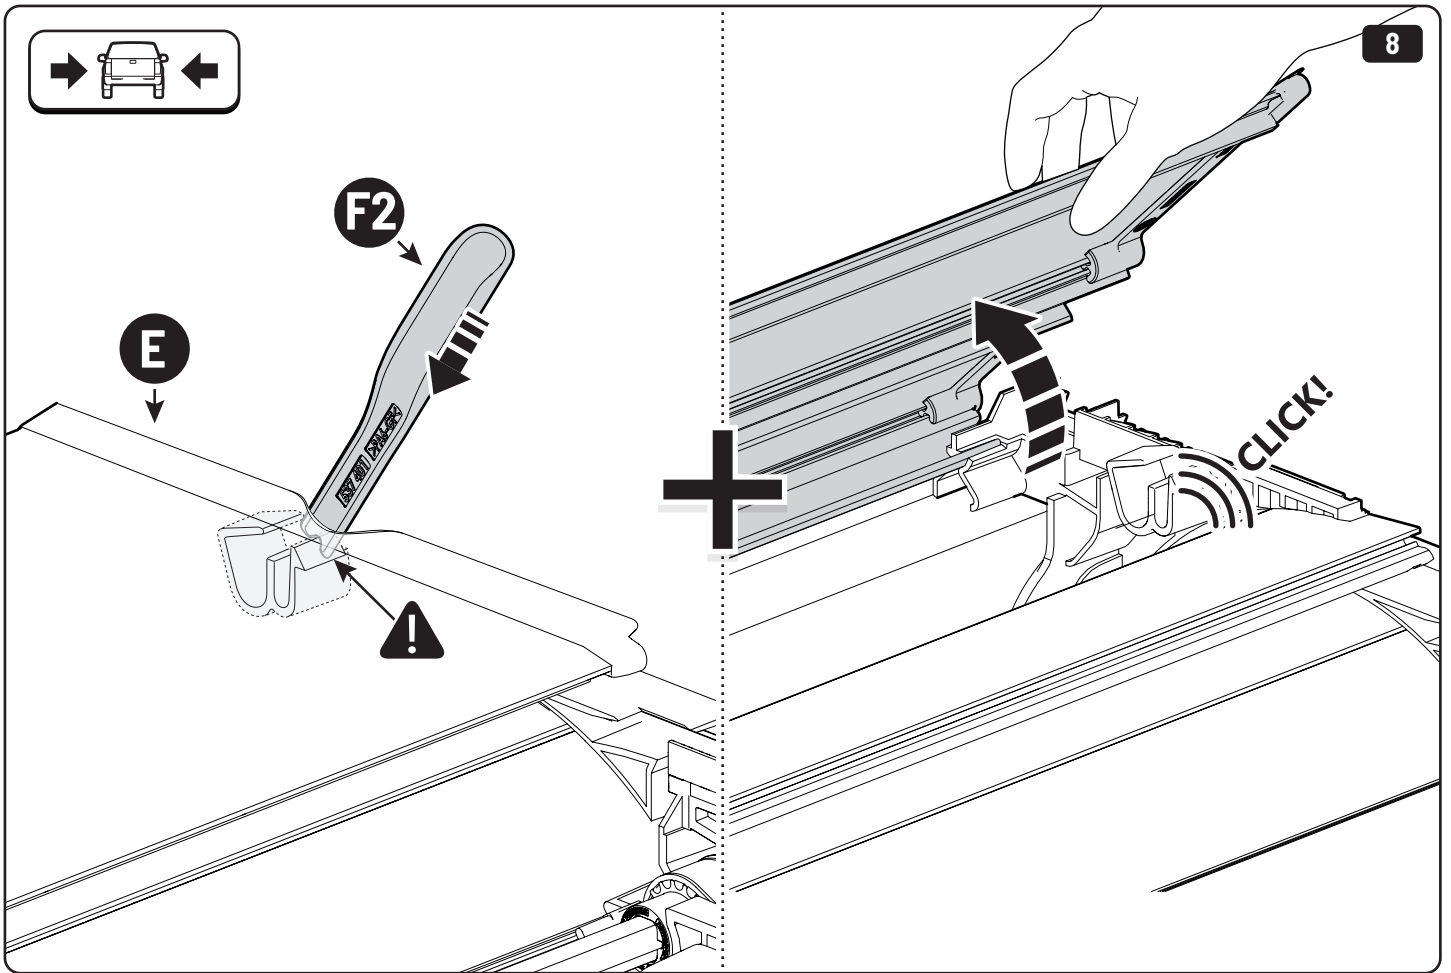

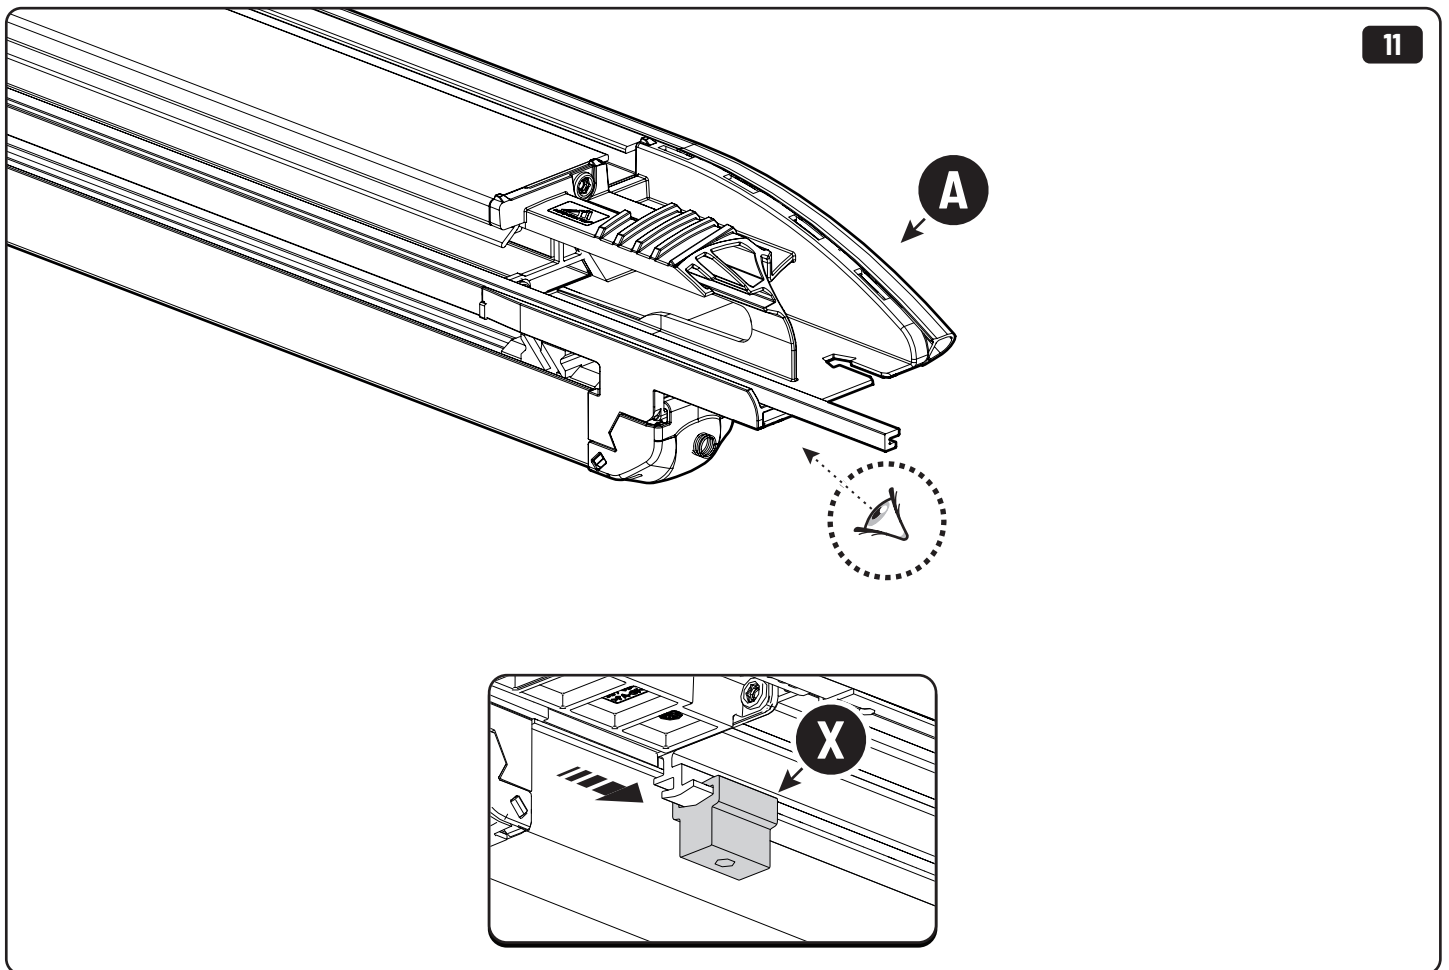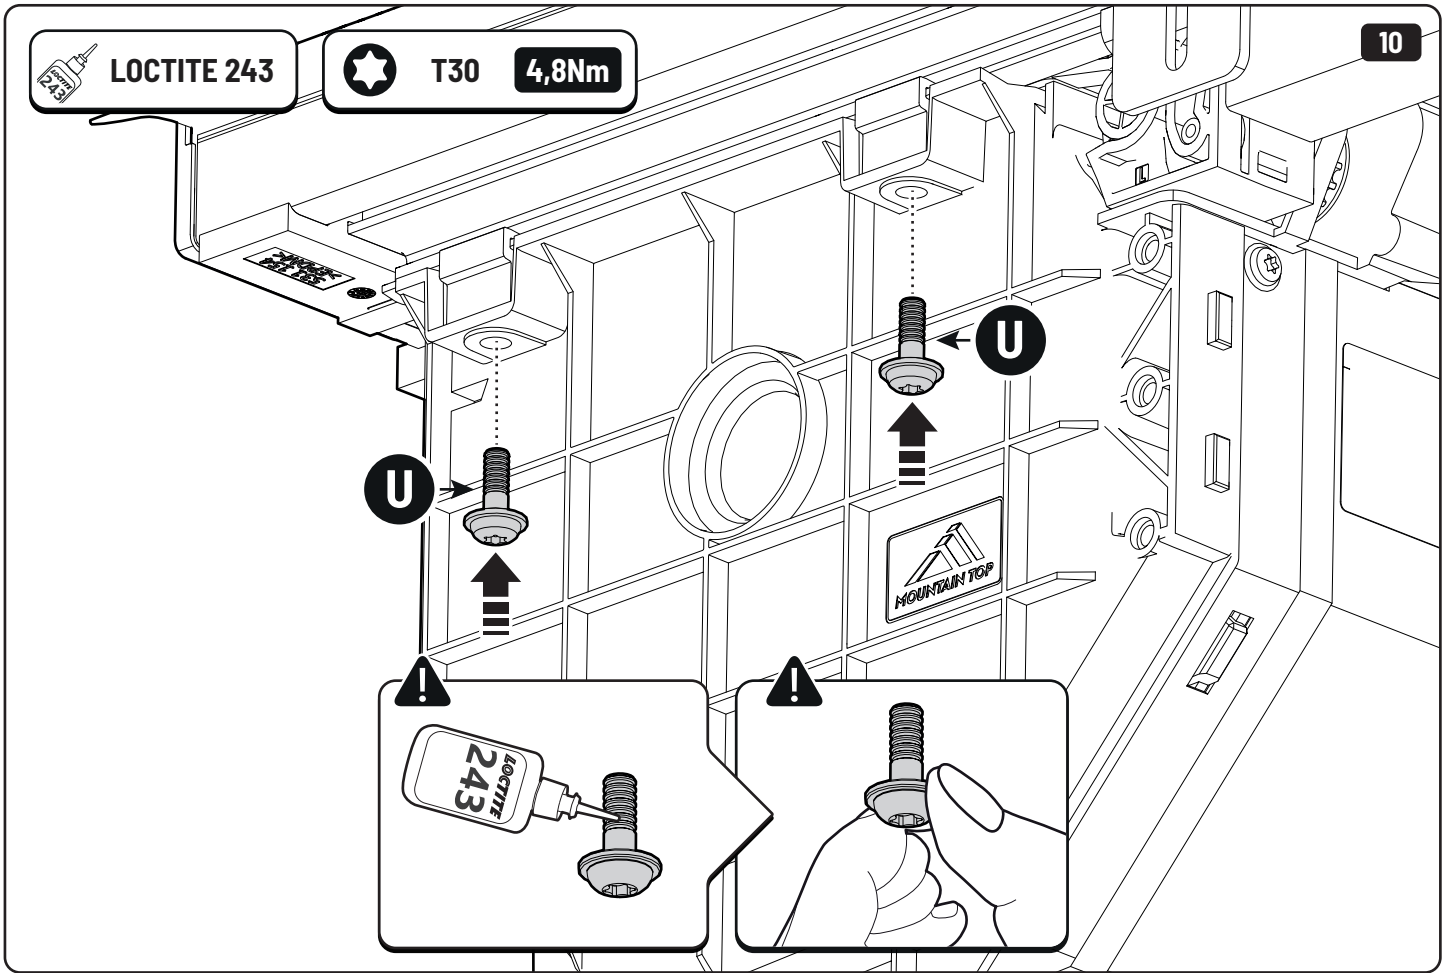


 **LOCTITE 243**



**12**


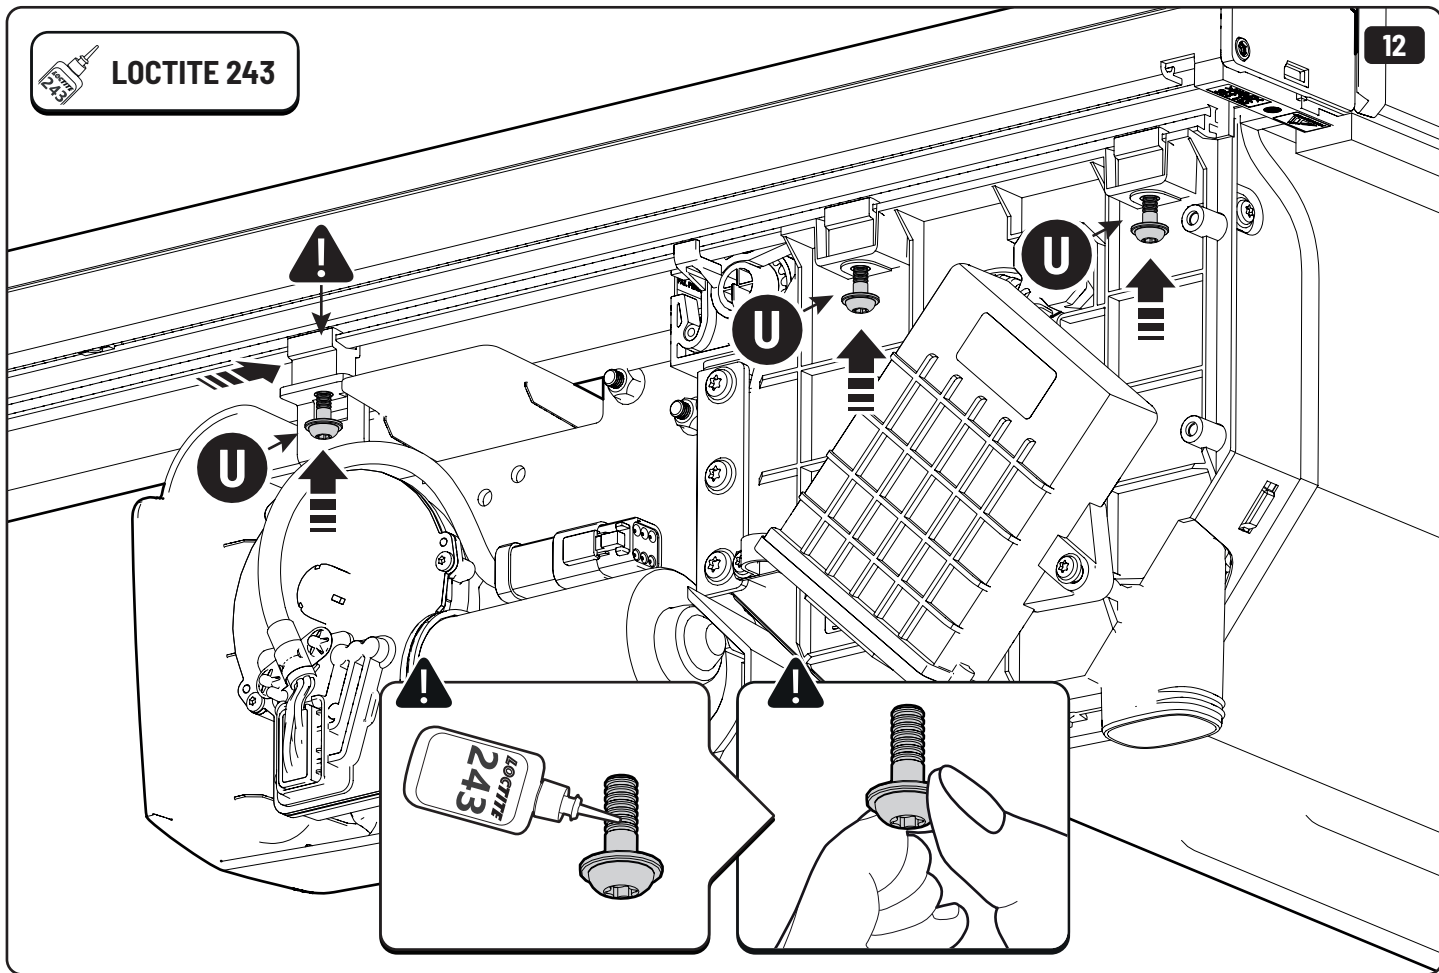




 **T30 4,8Nm**




**13**


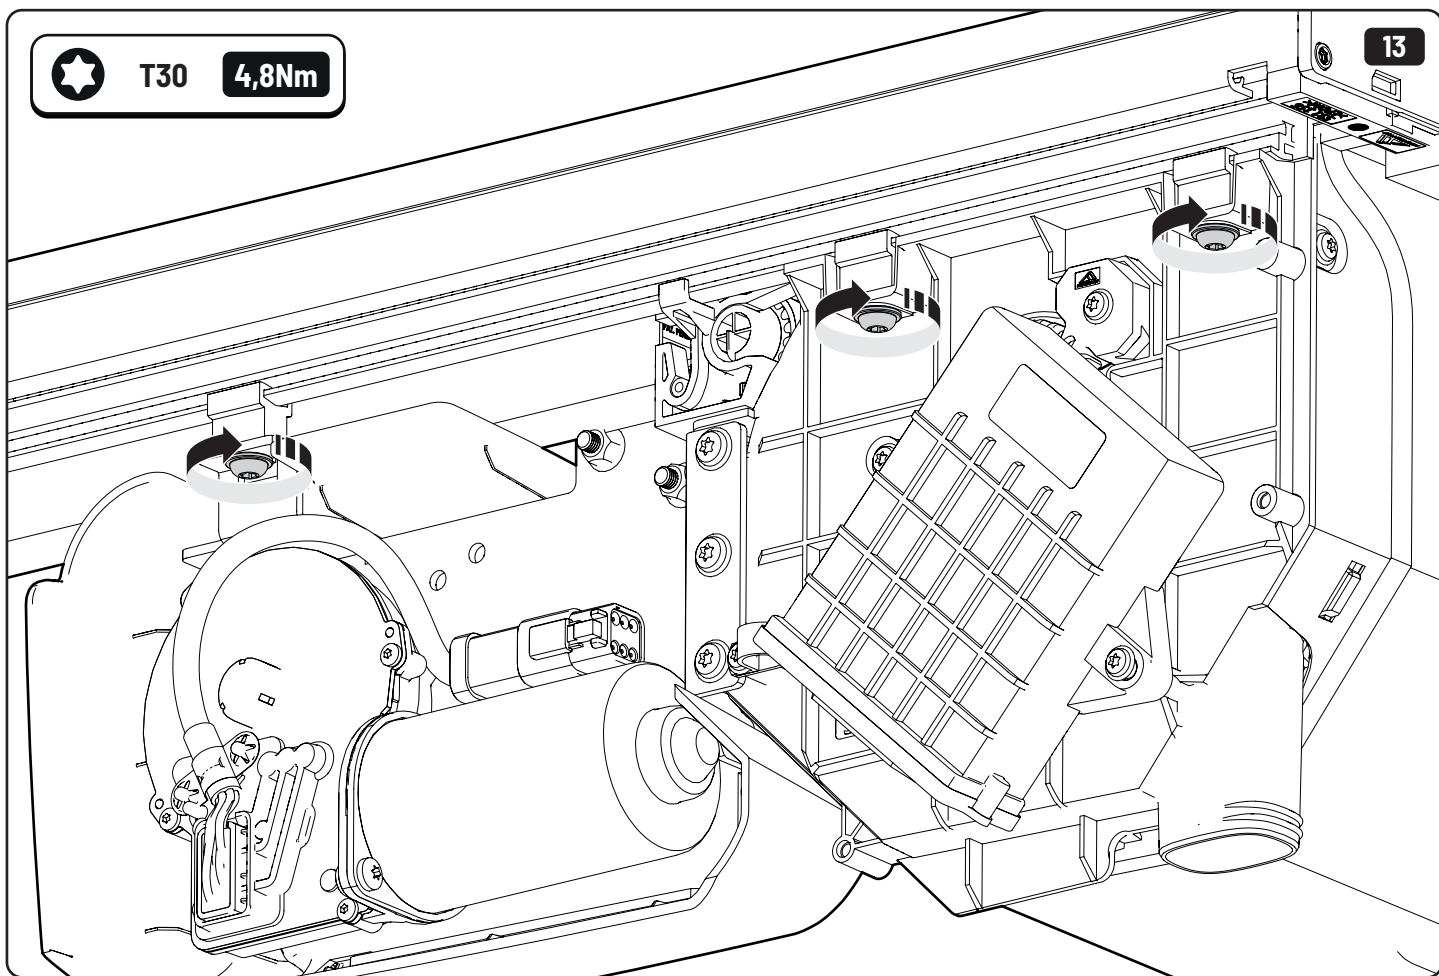


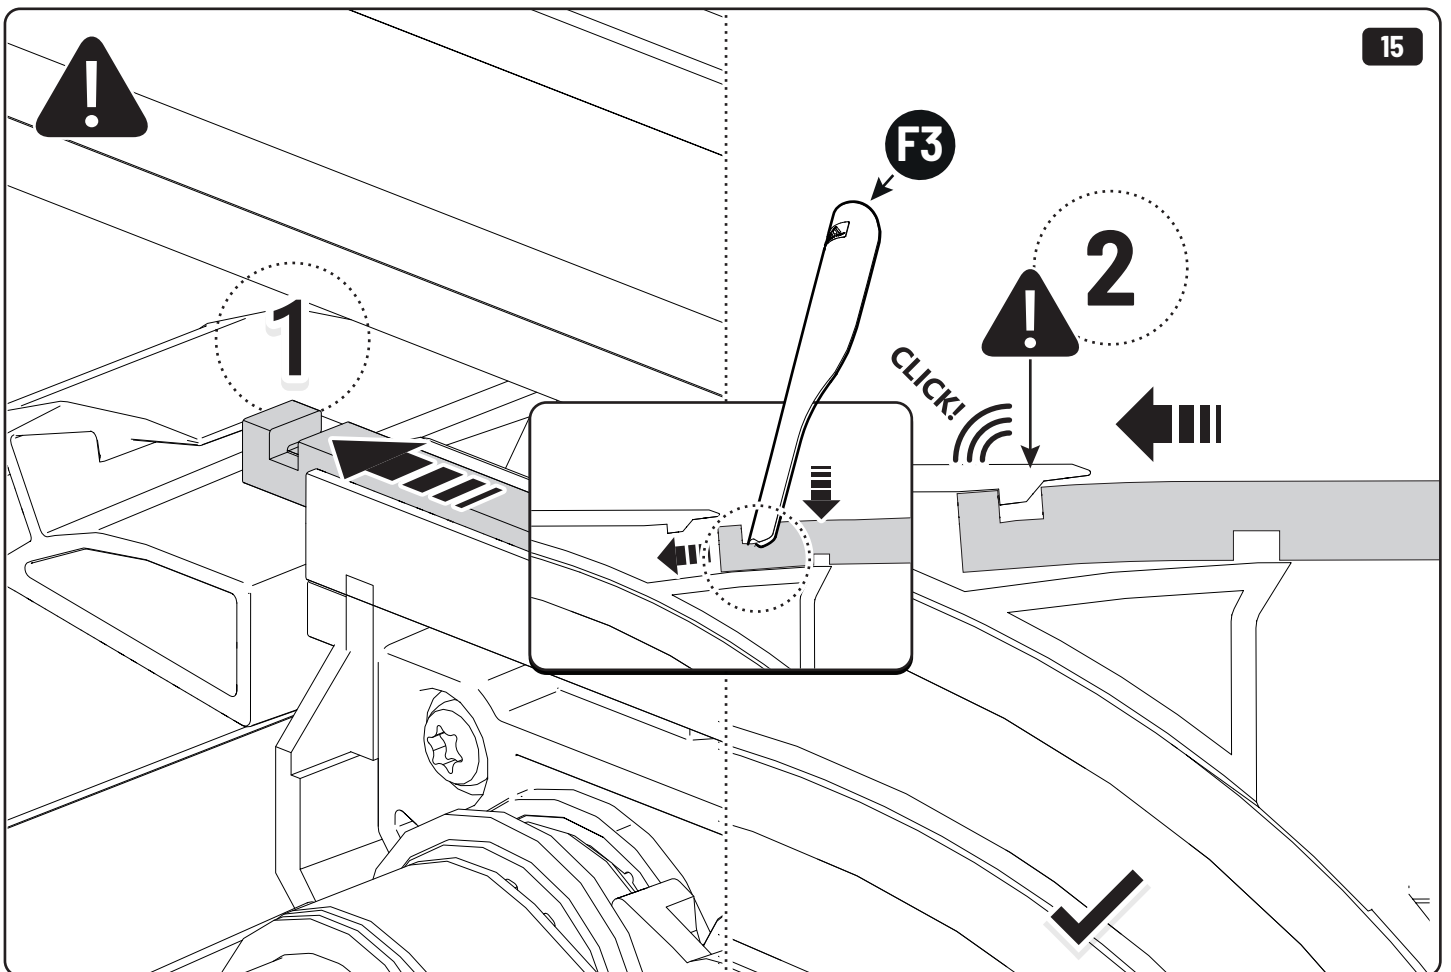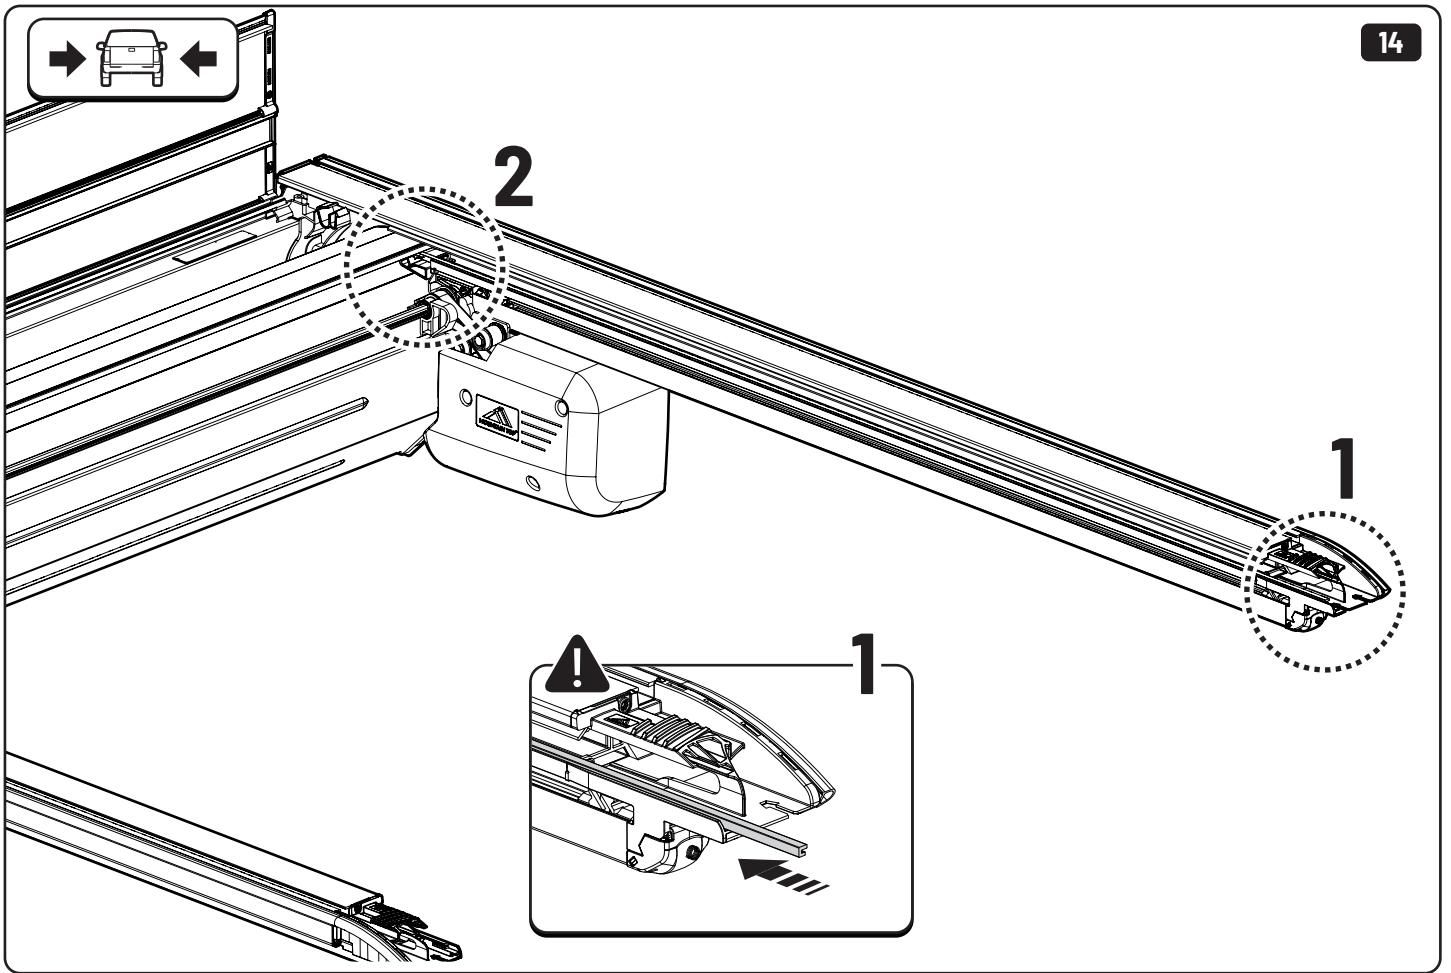

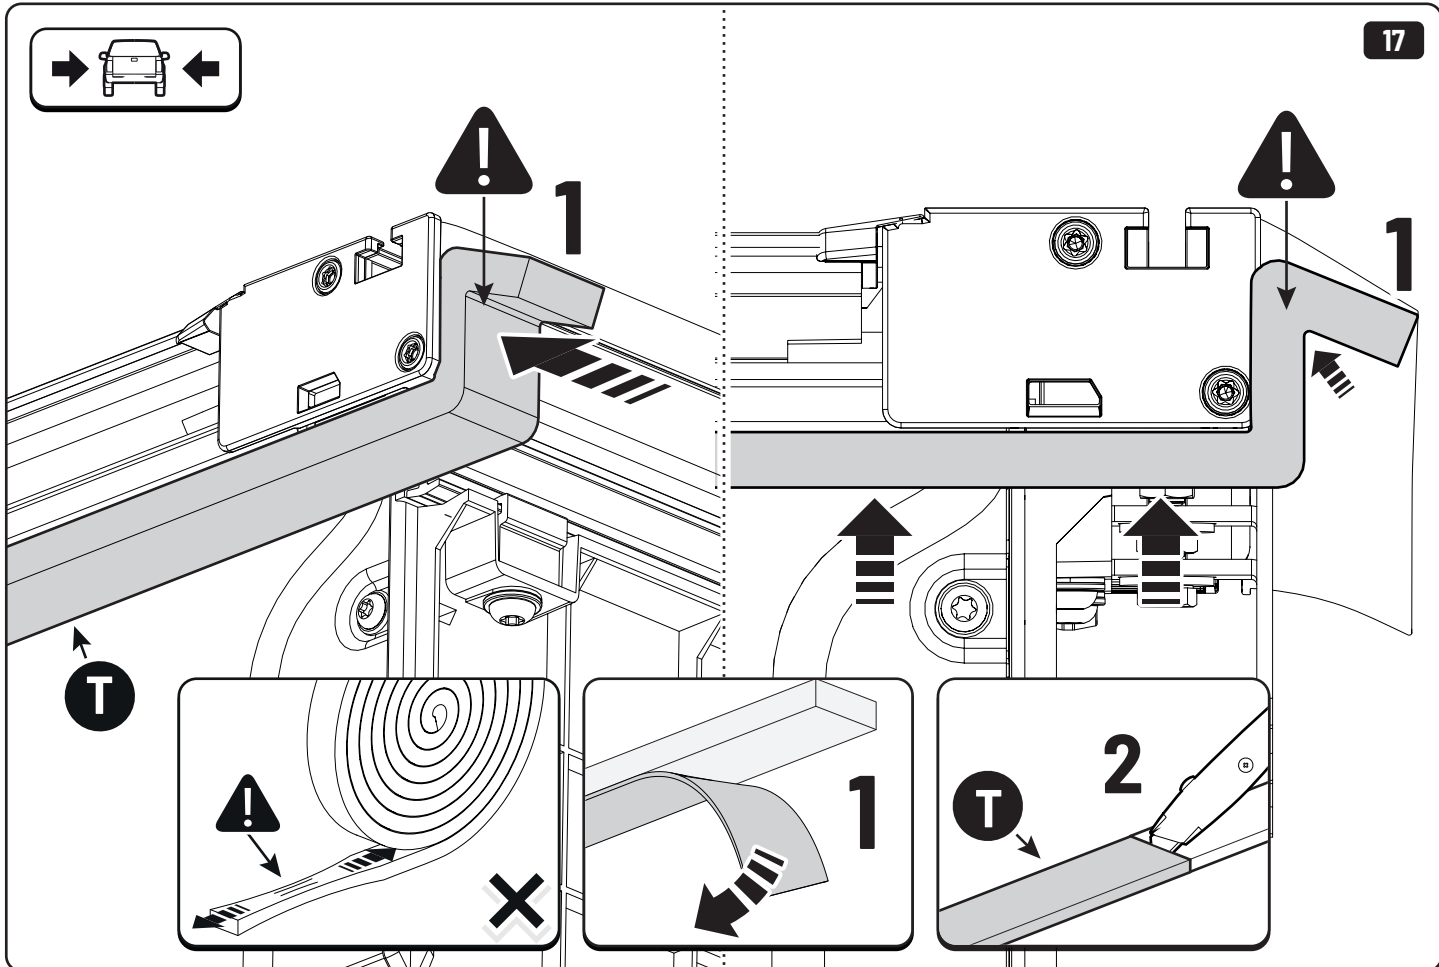
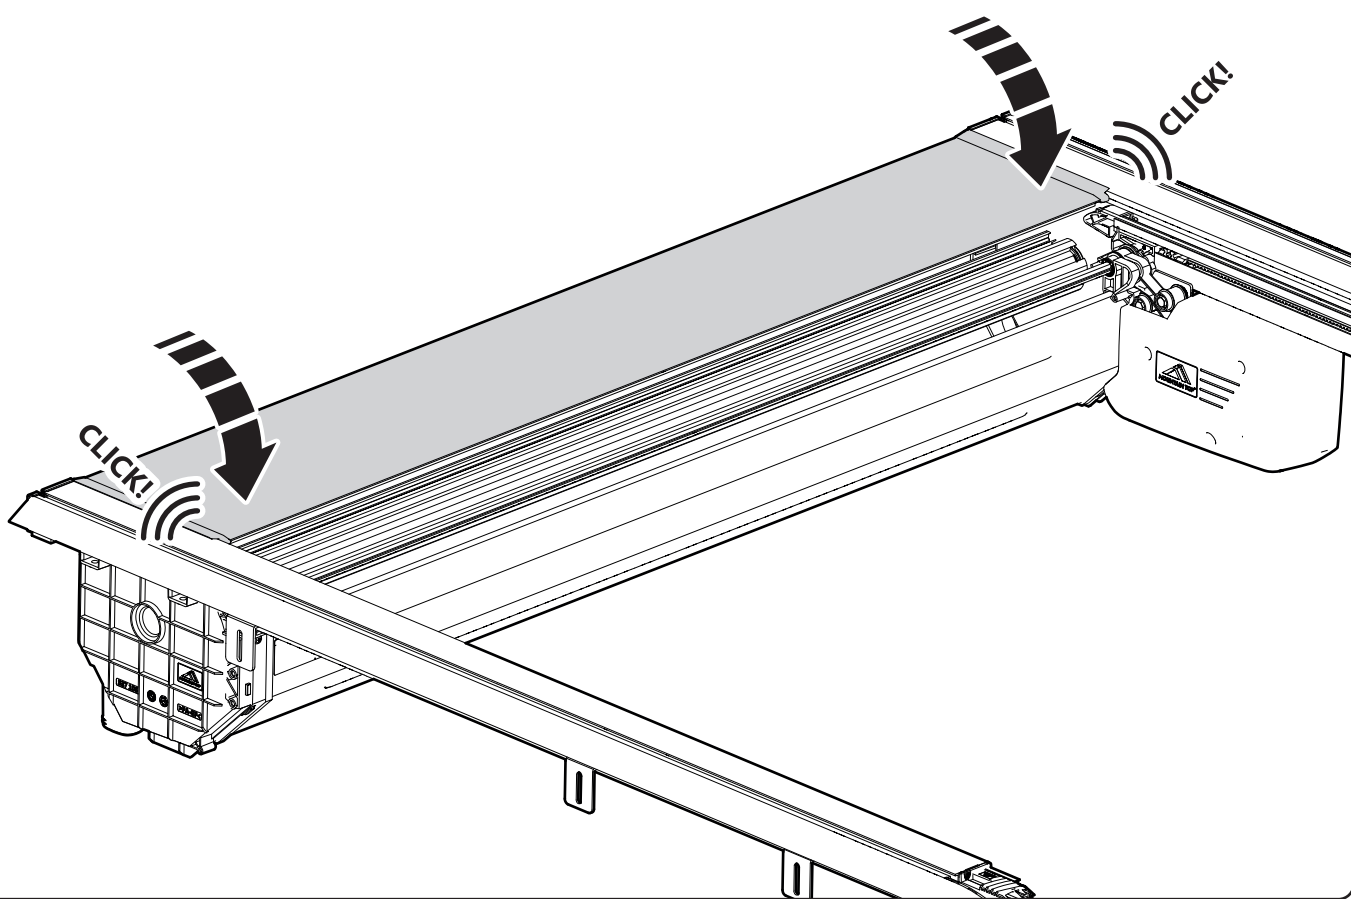


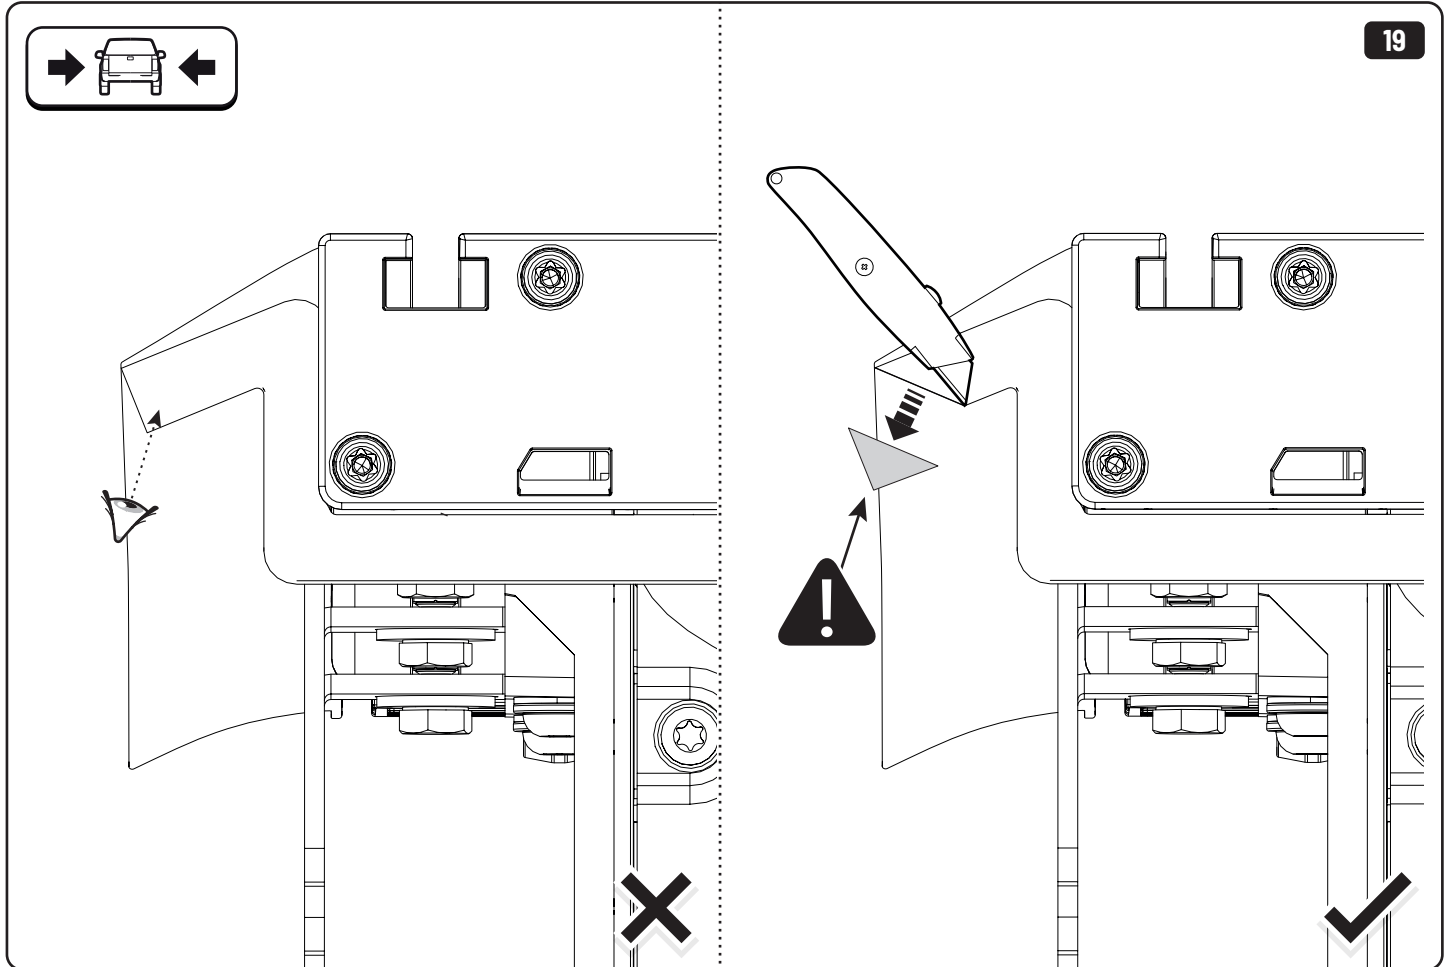
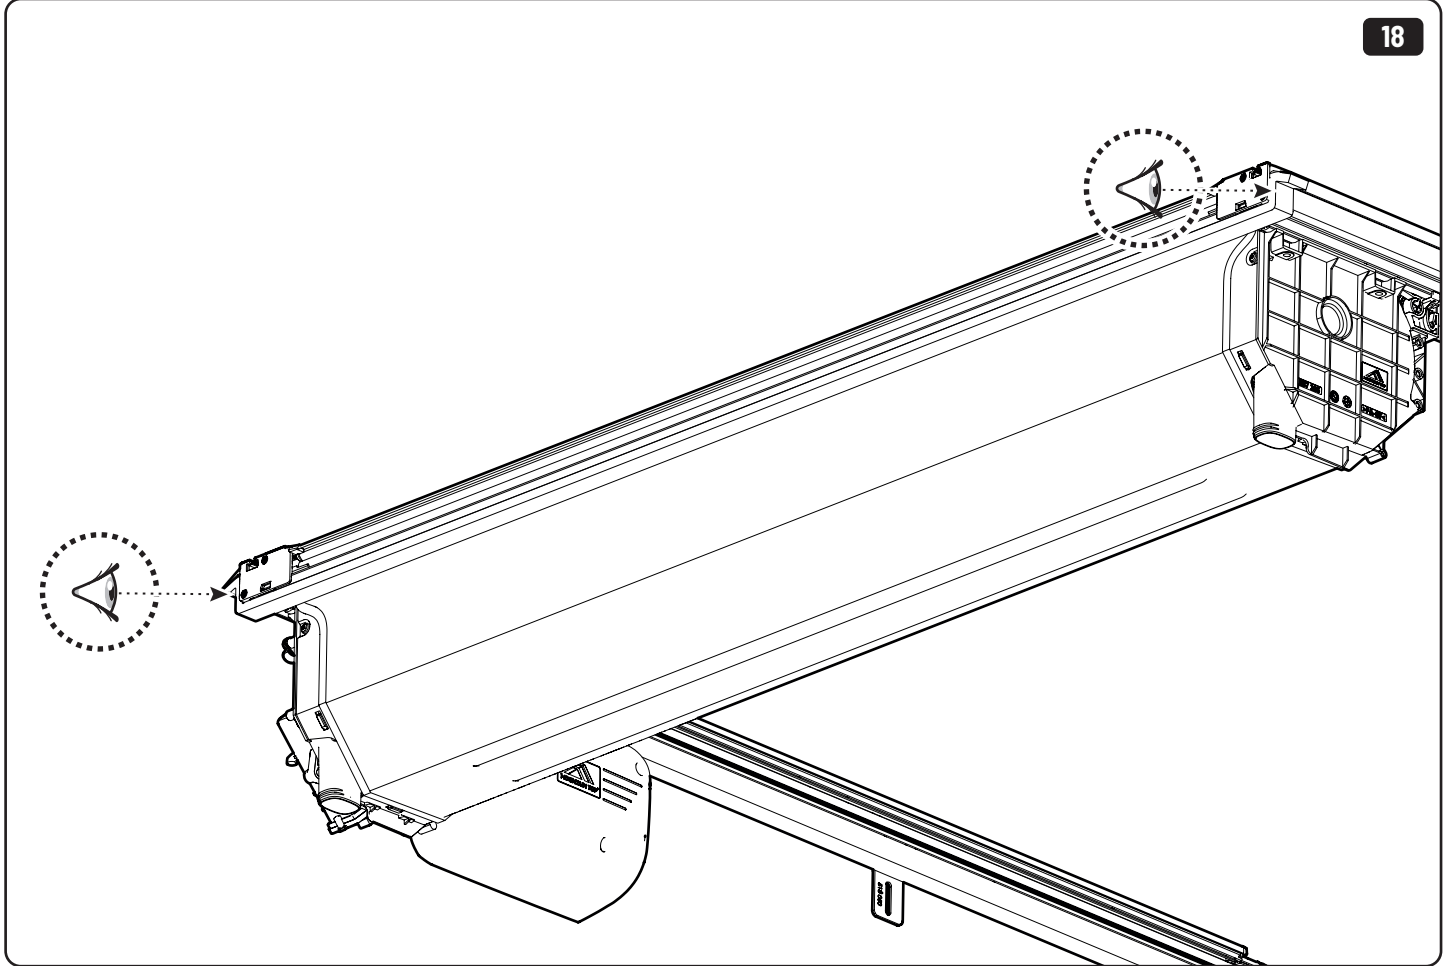


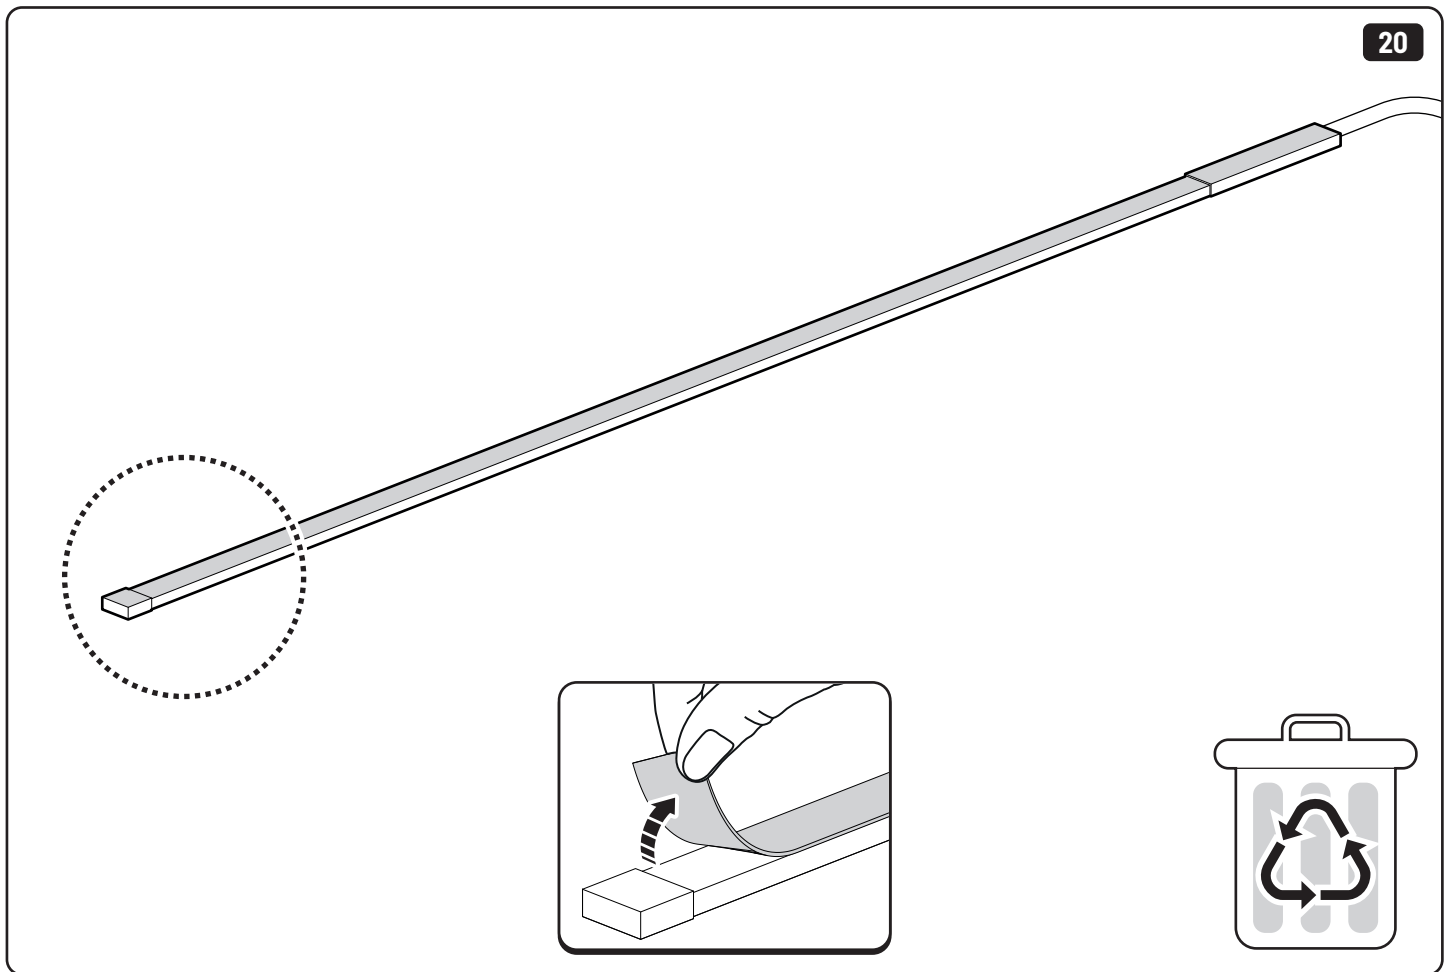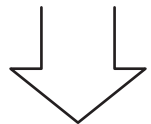
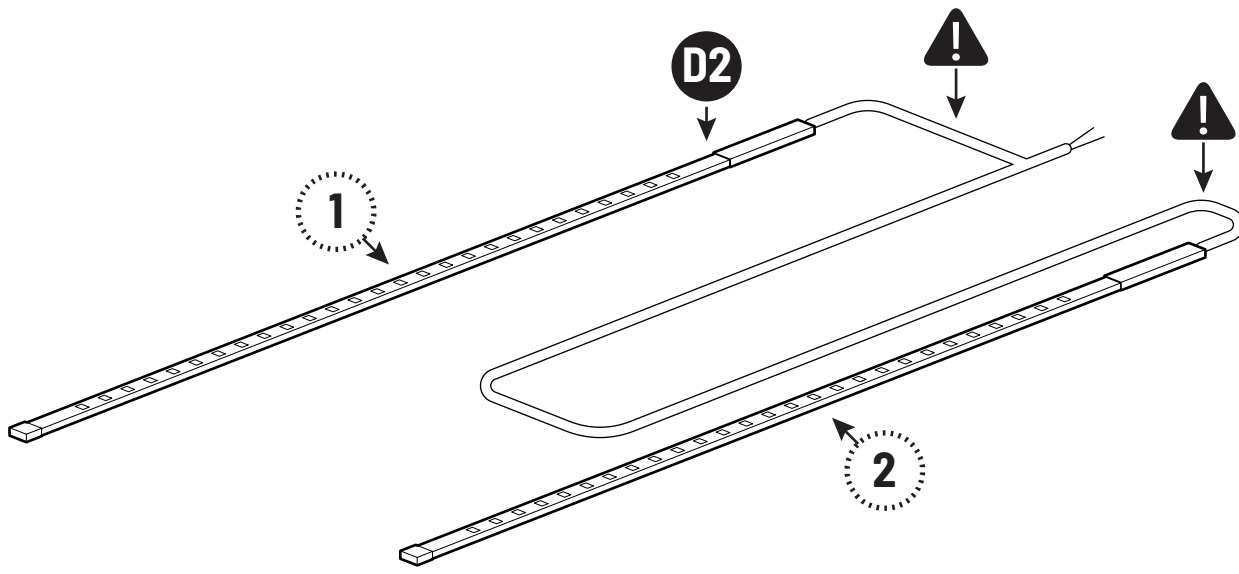


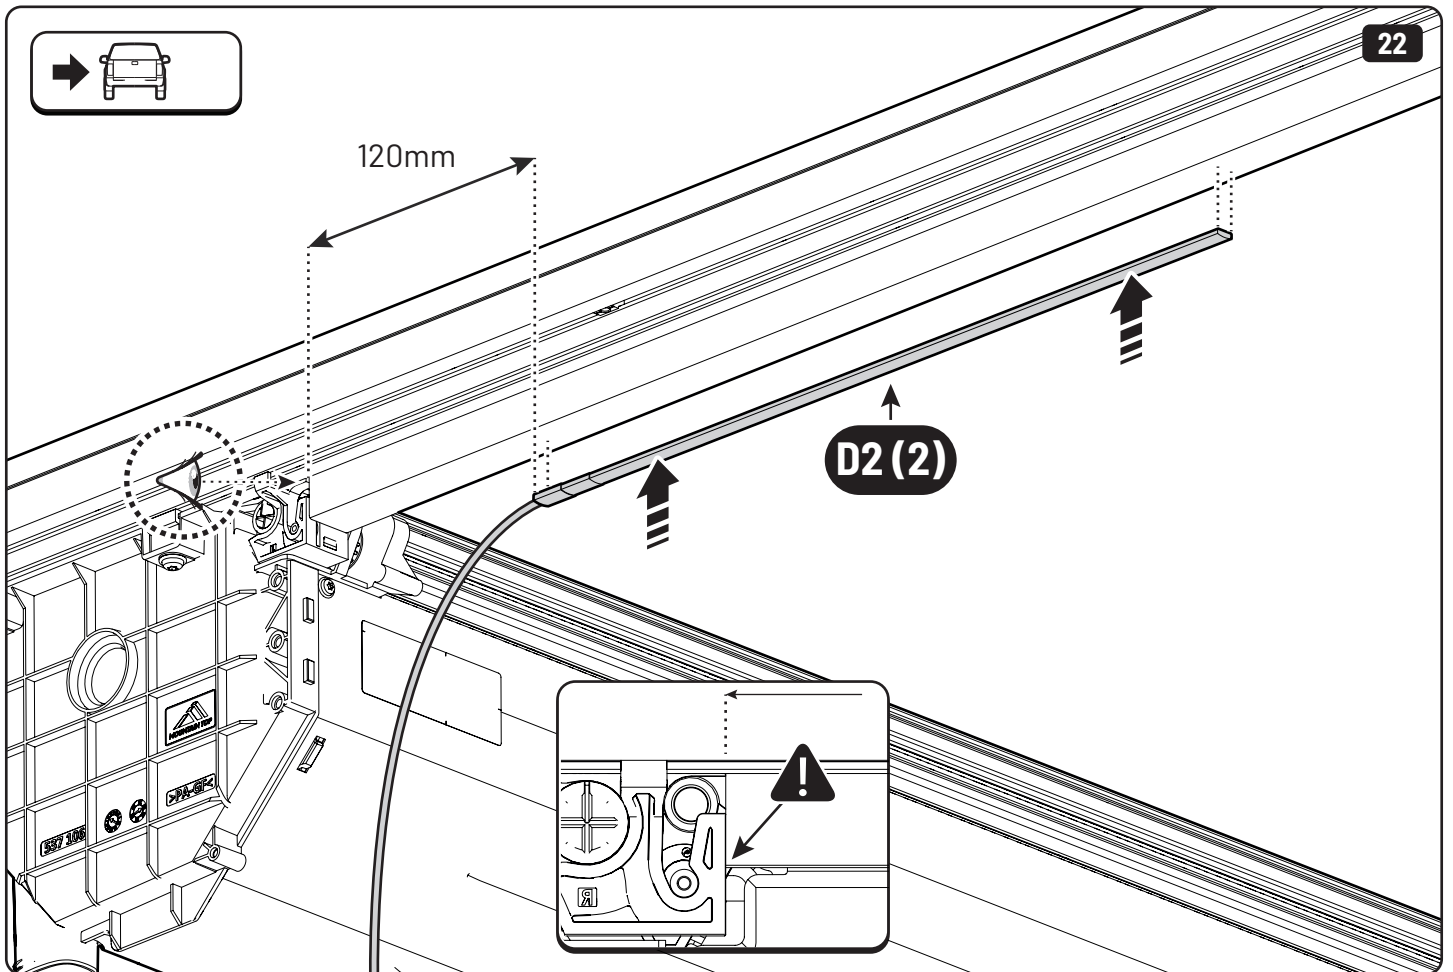
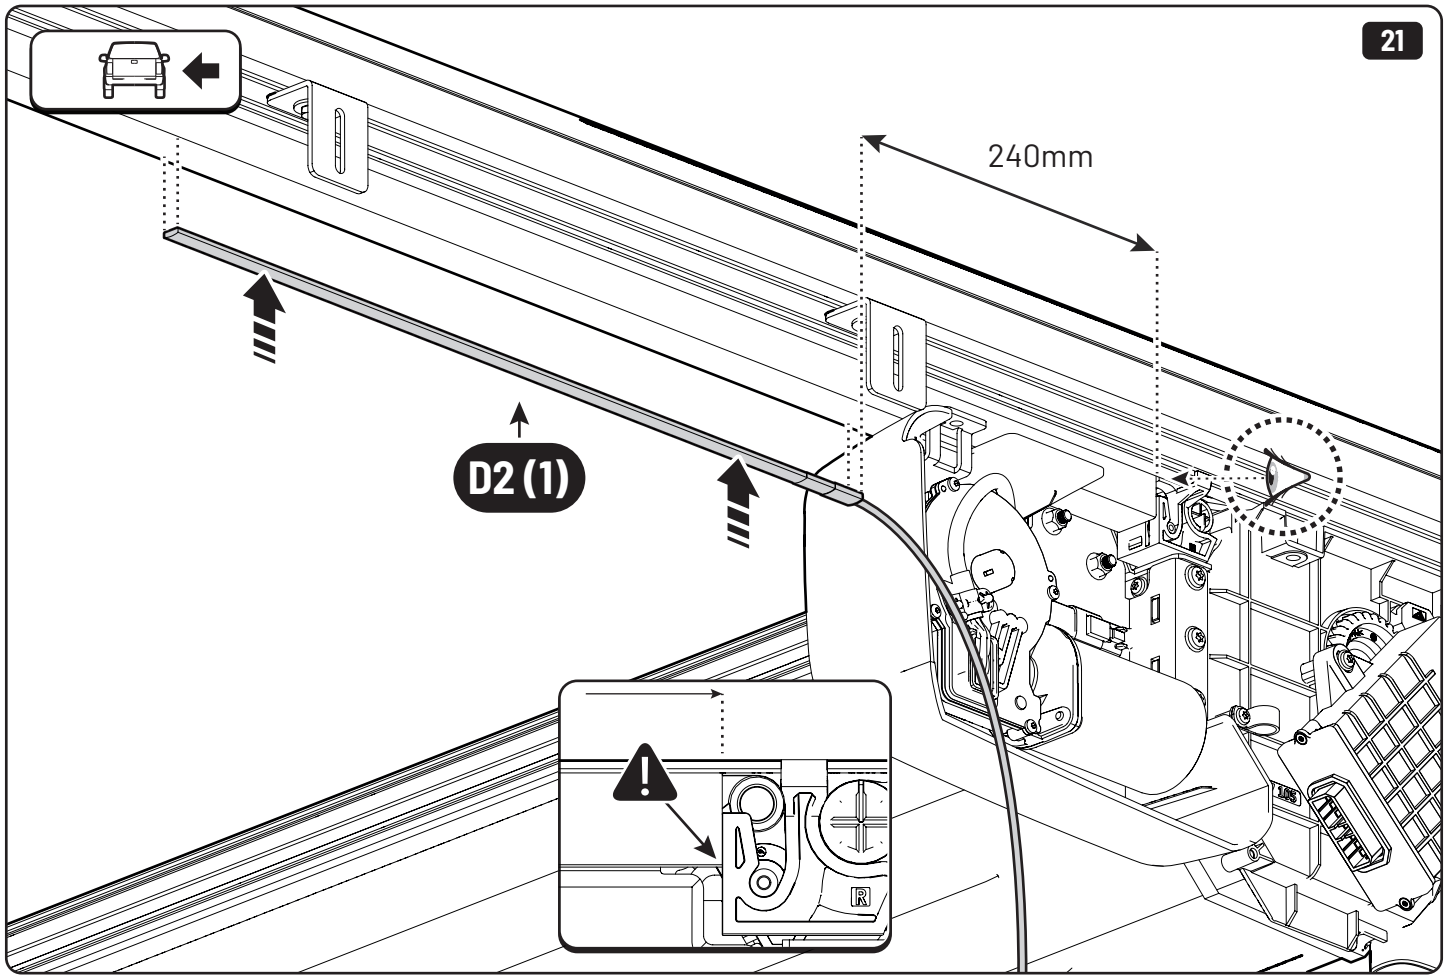





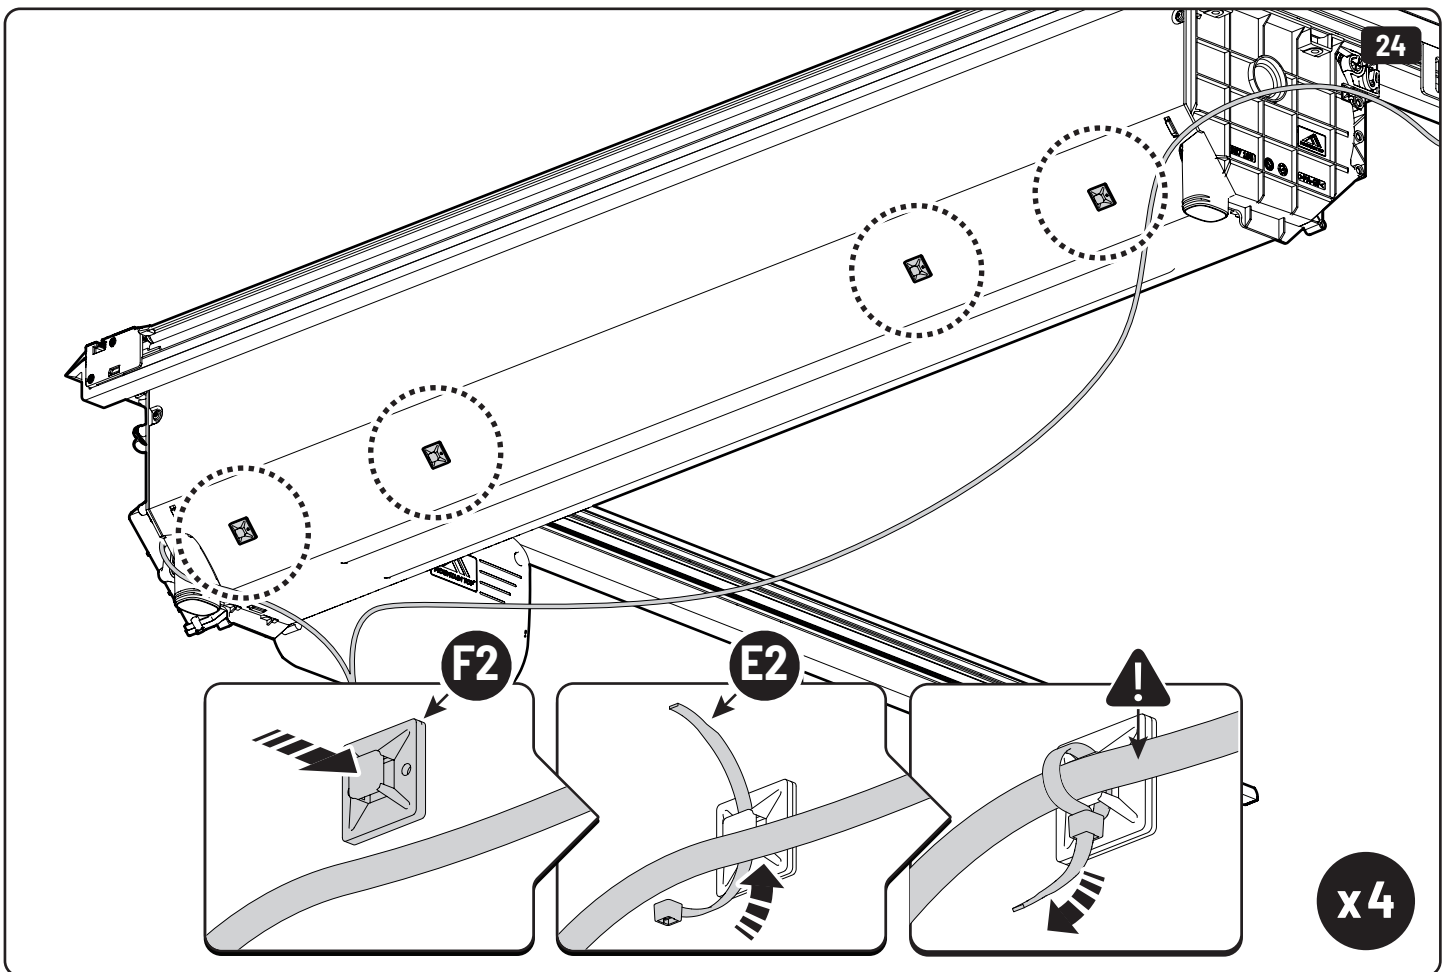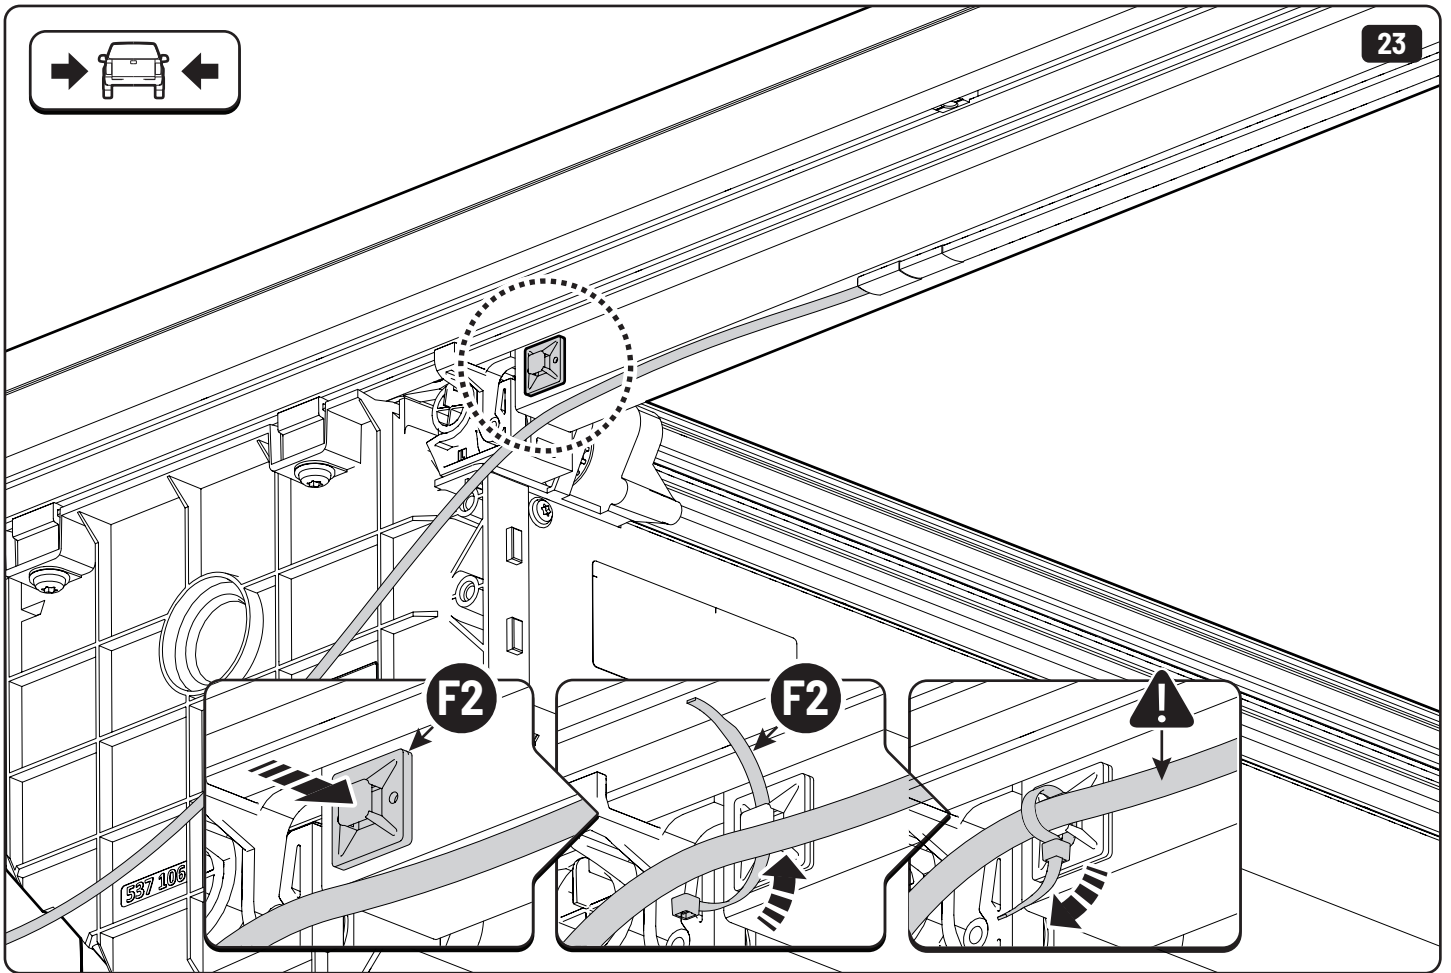

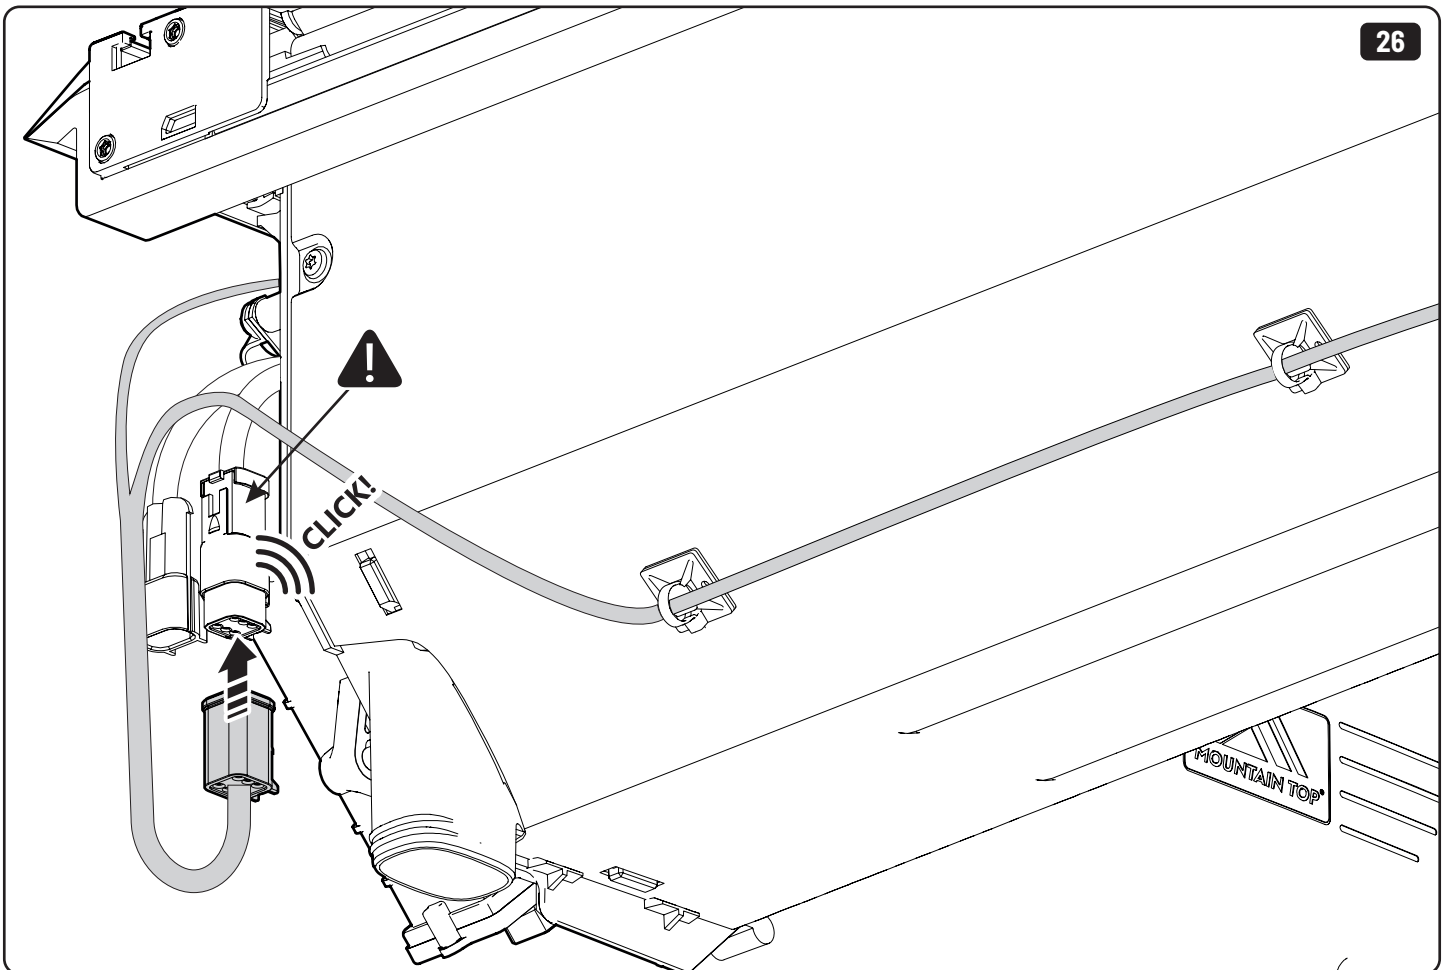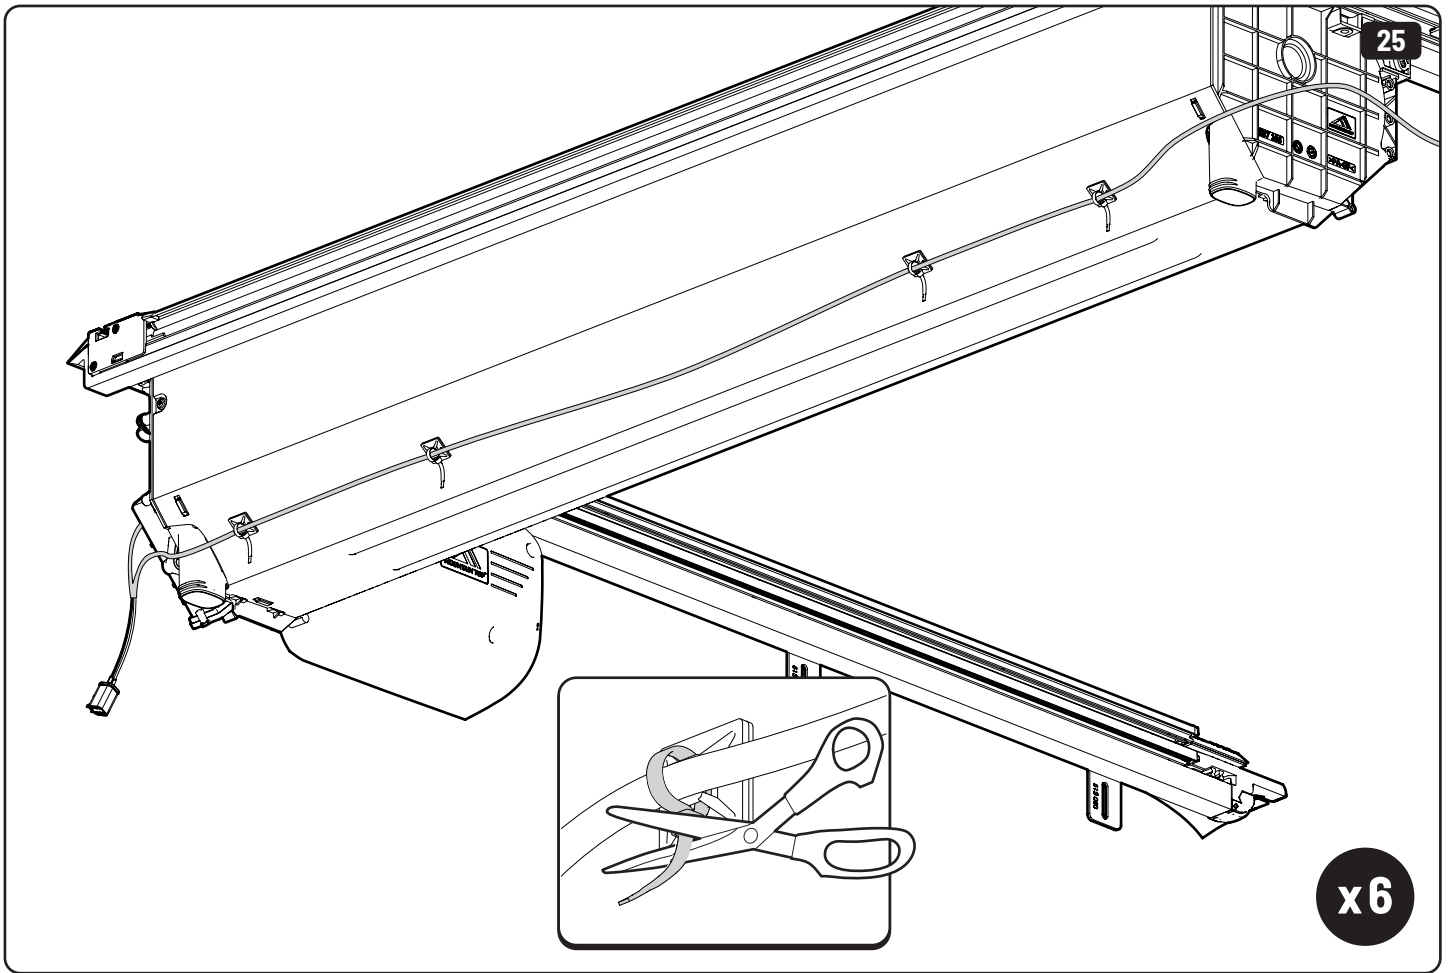

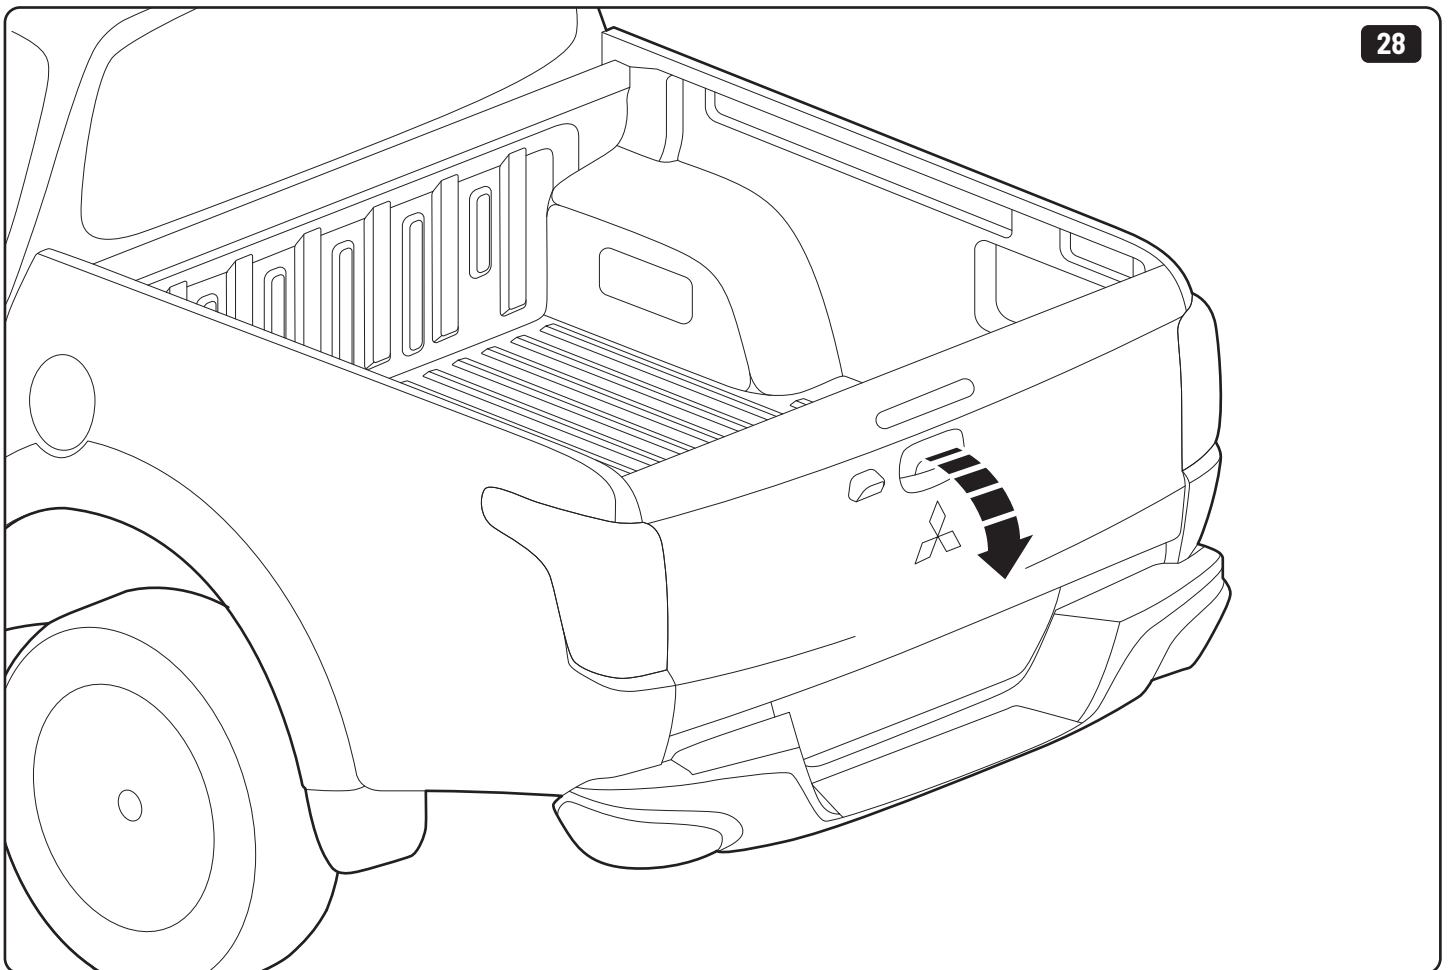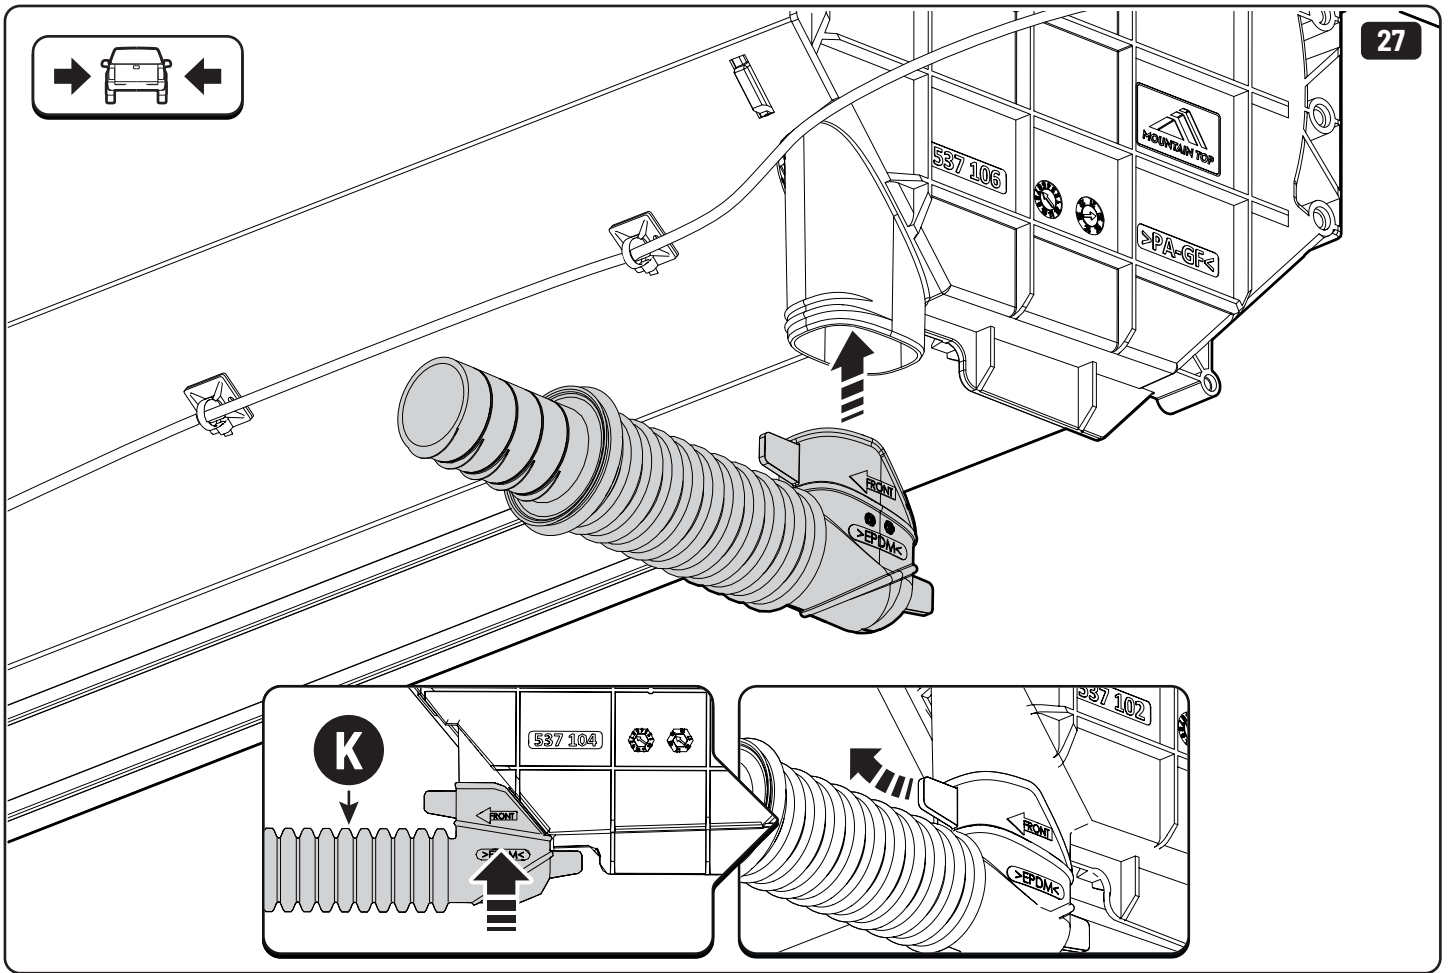

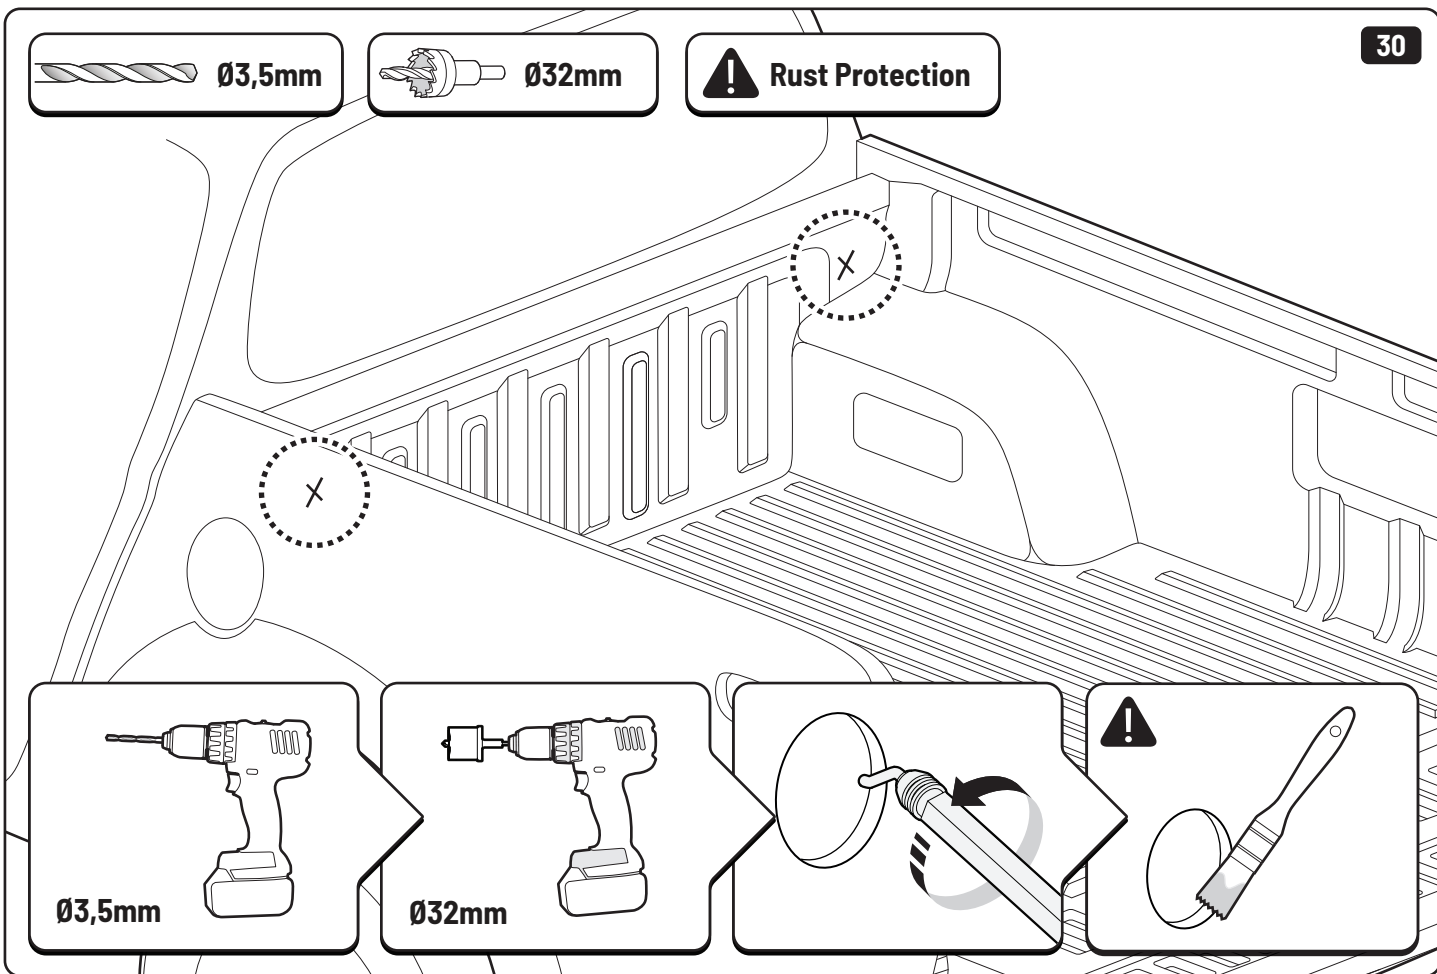
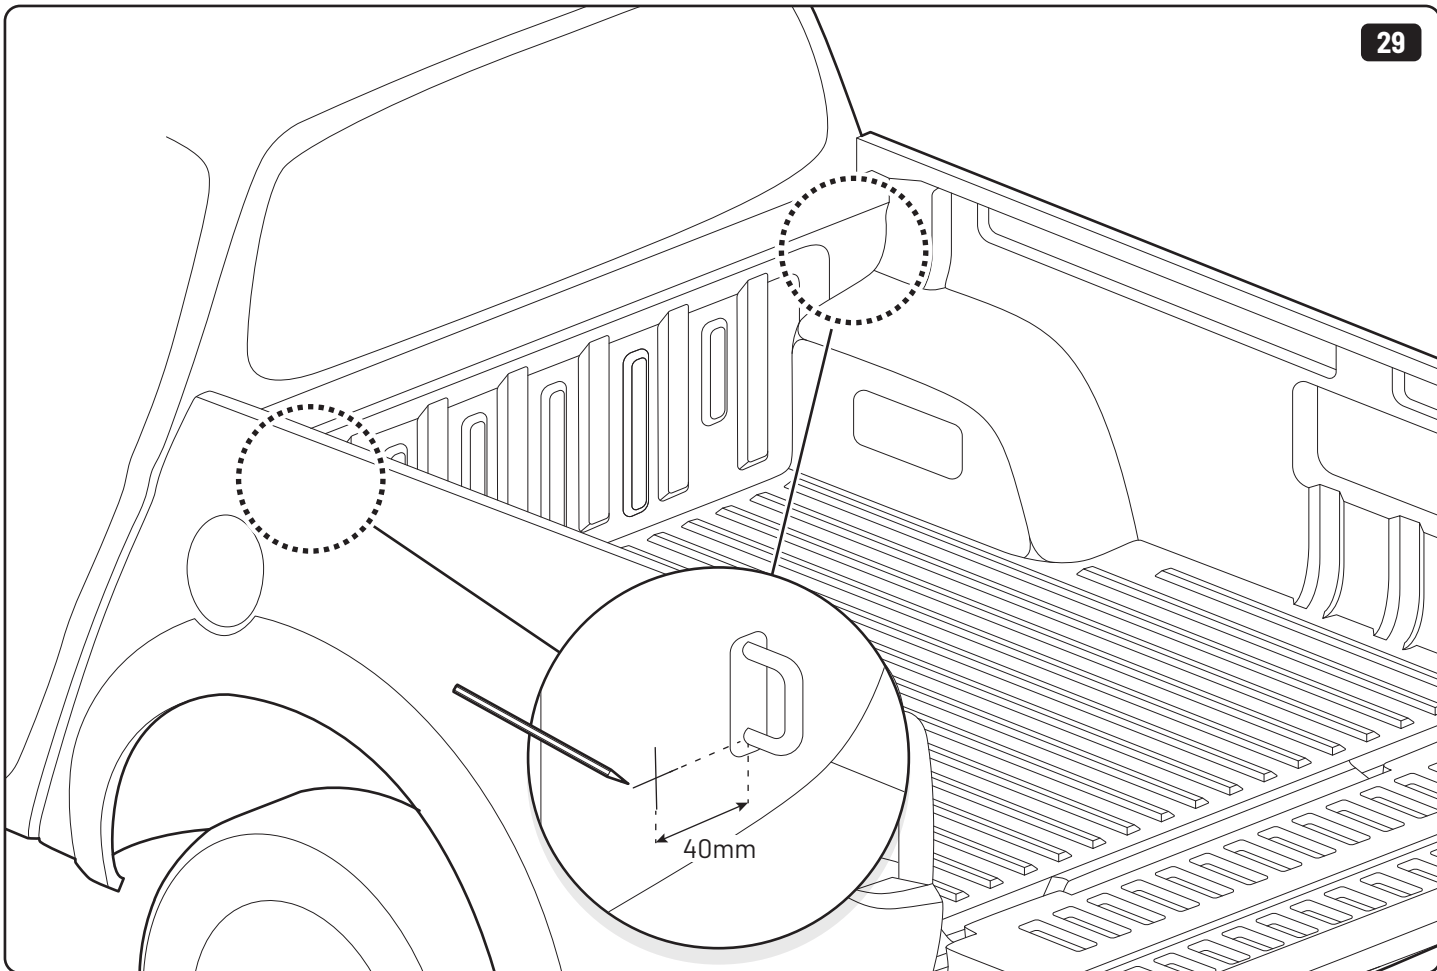


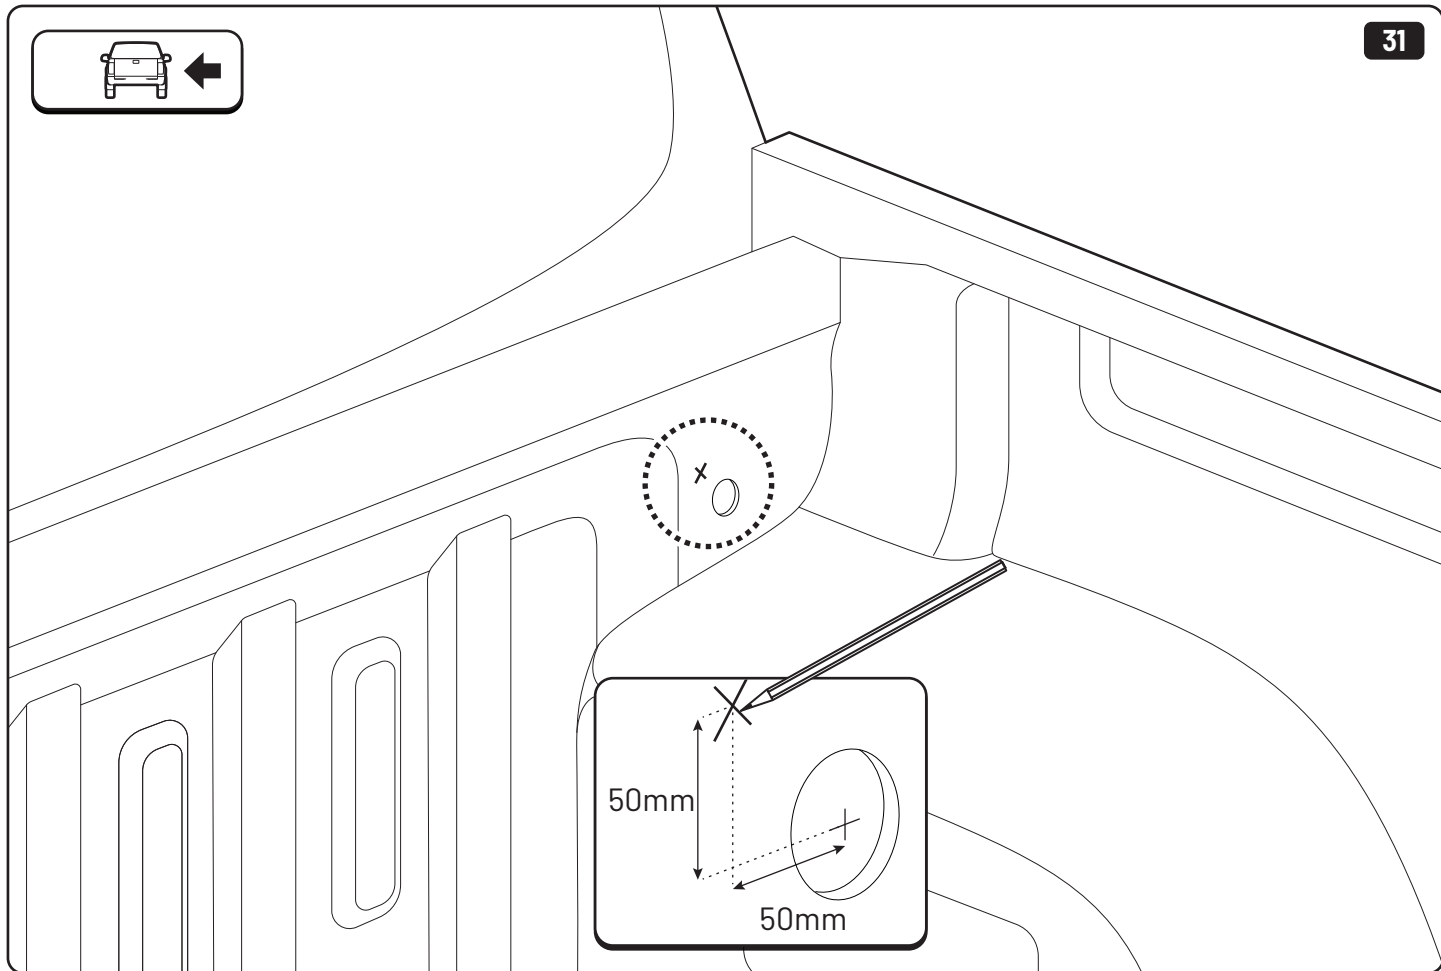


Ø 3,5mm





Ø 18mm

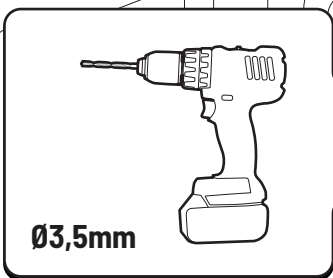
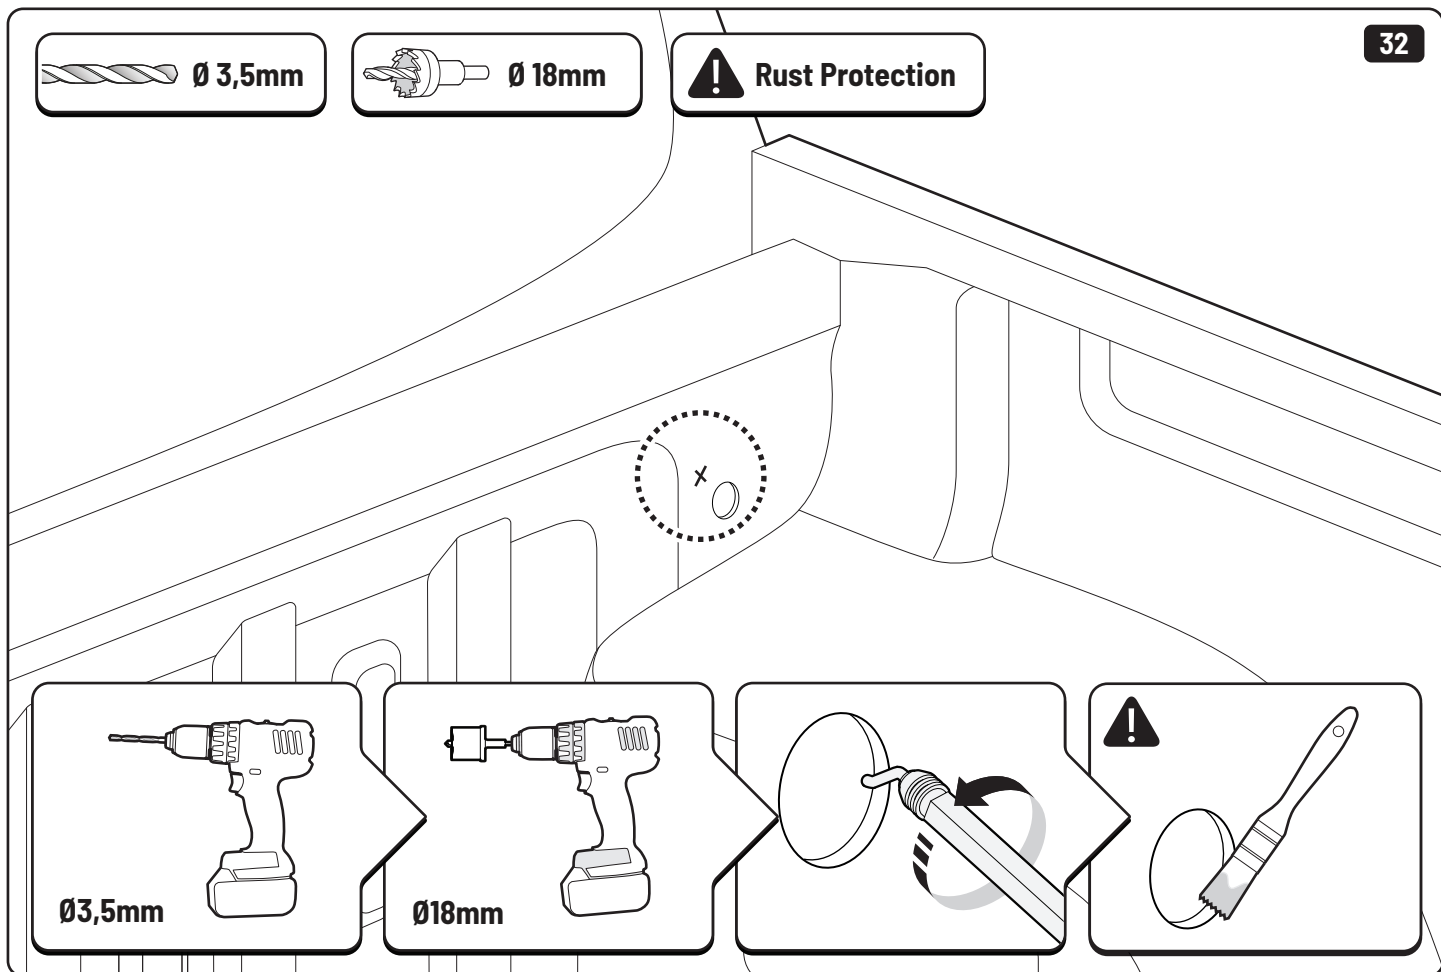




Ø3,5mm


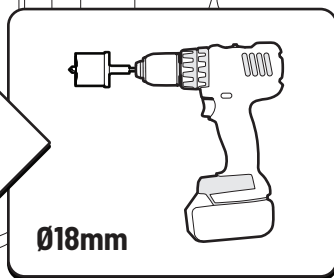


Ø18mm

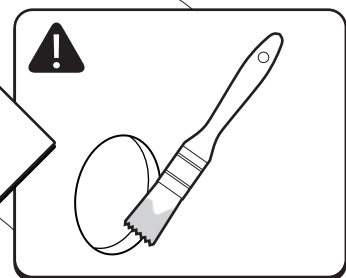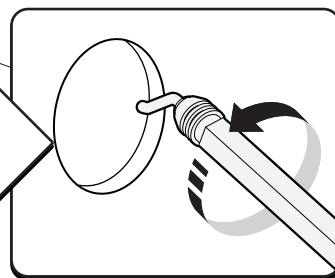

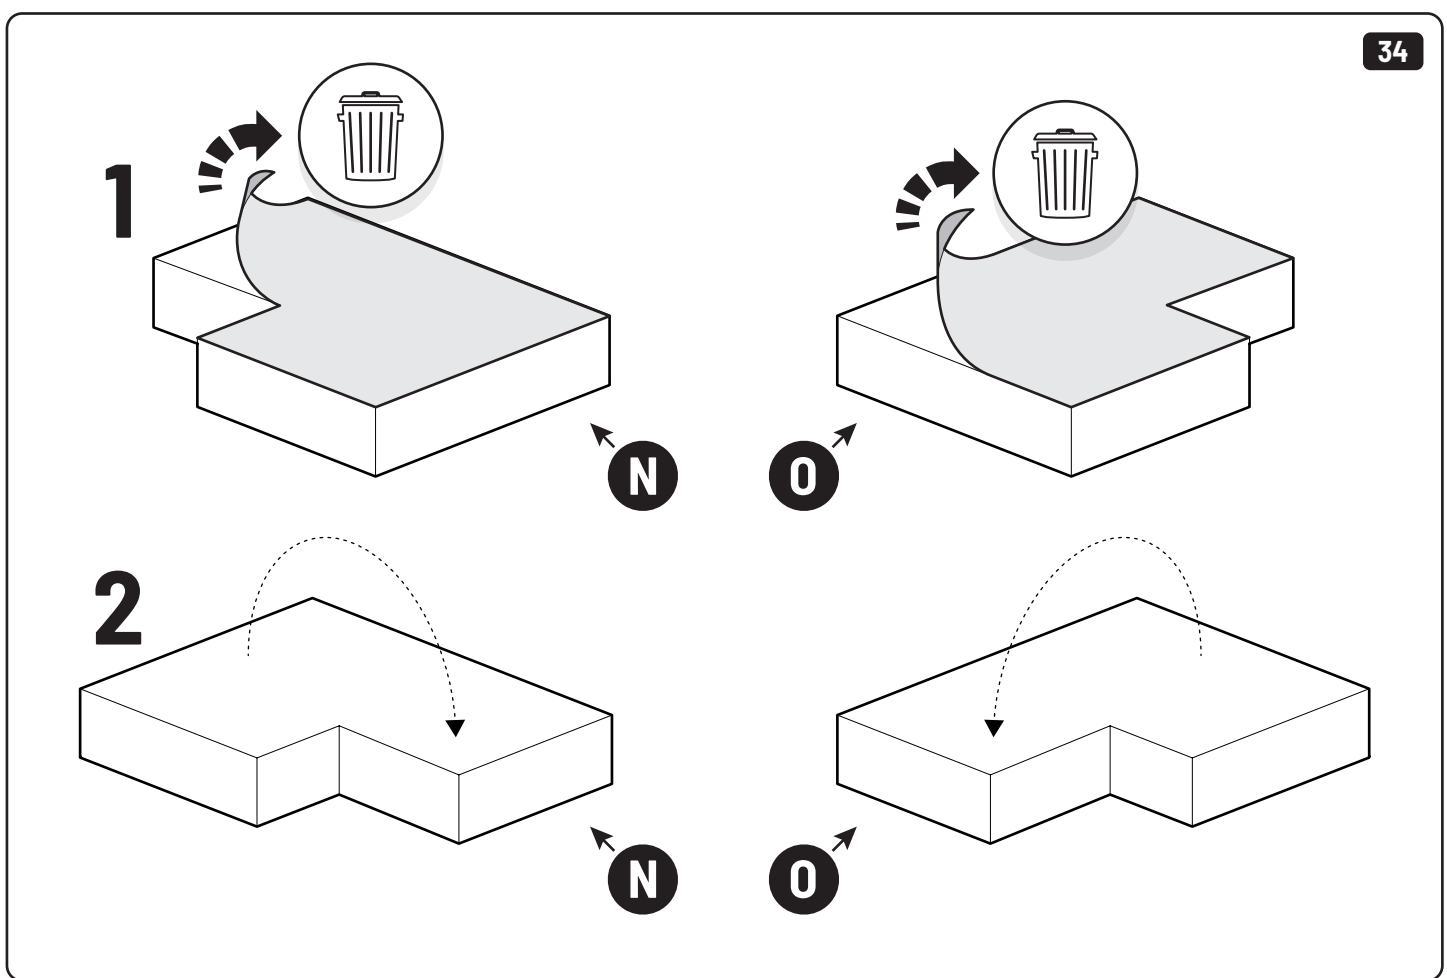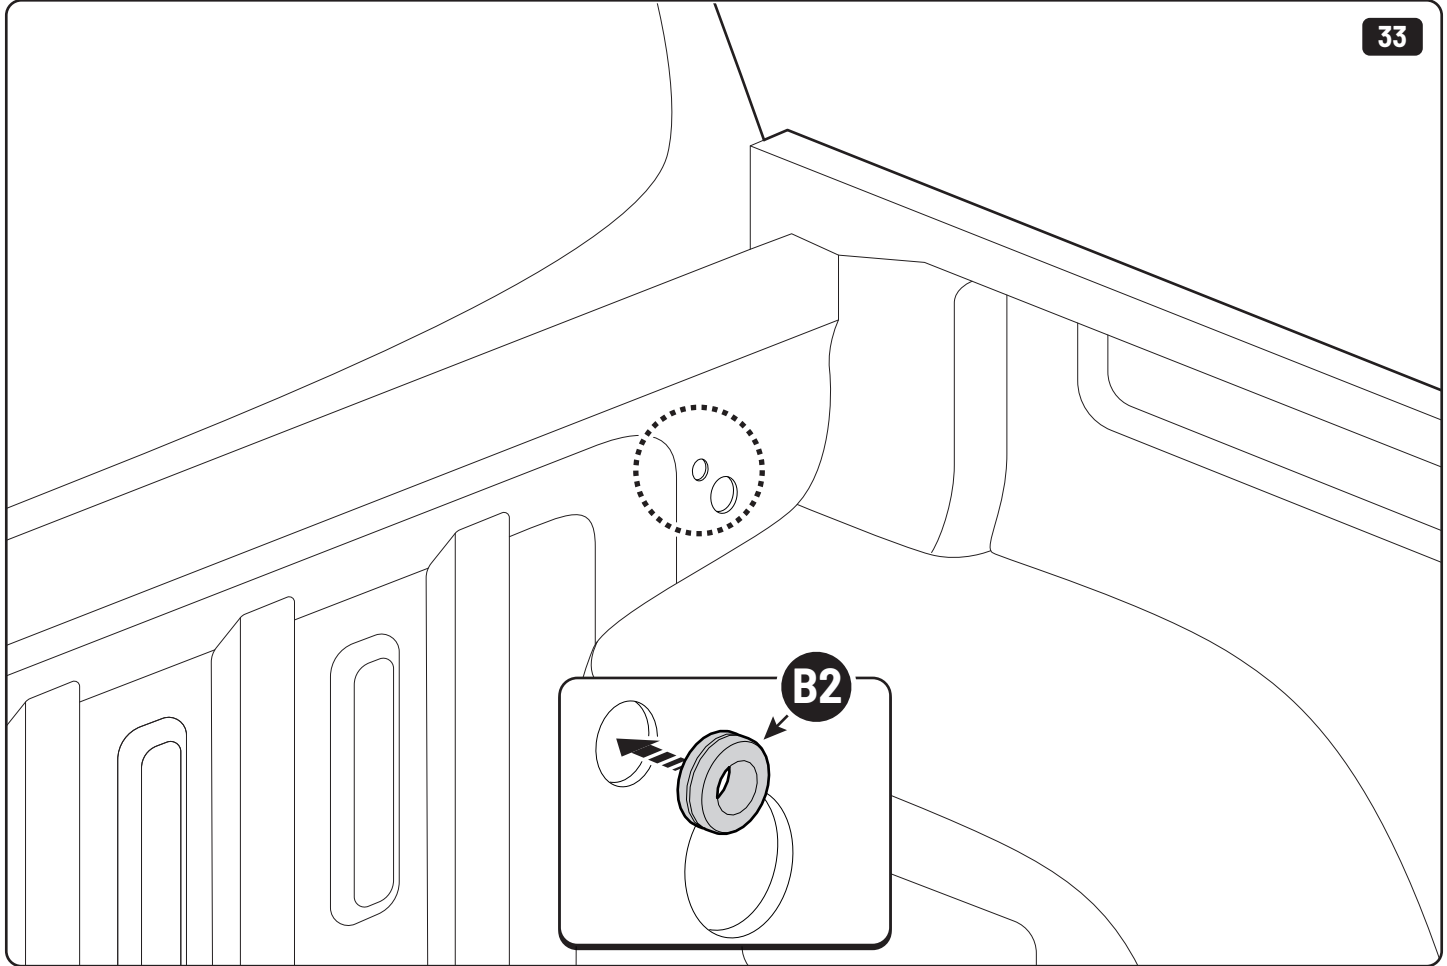

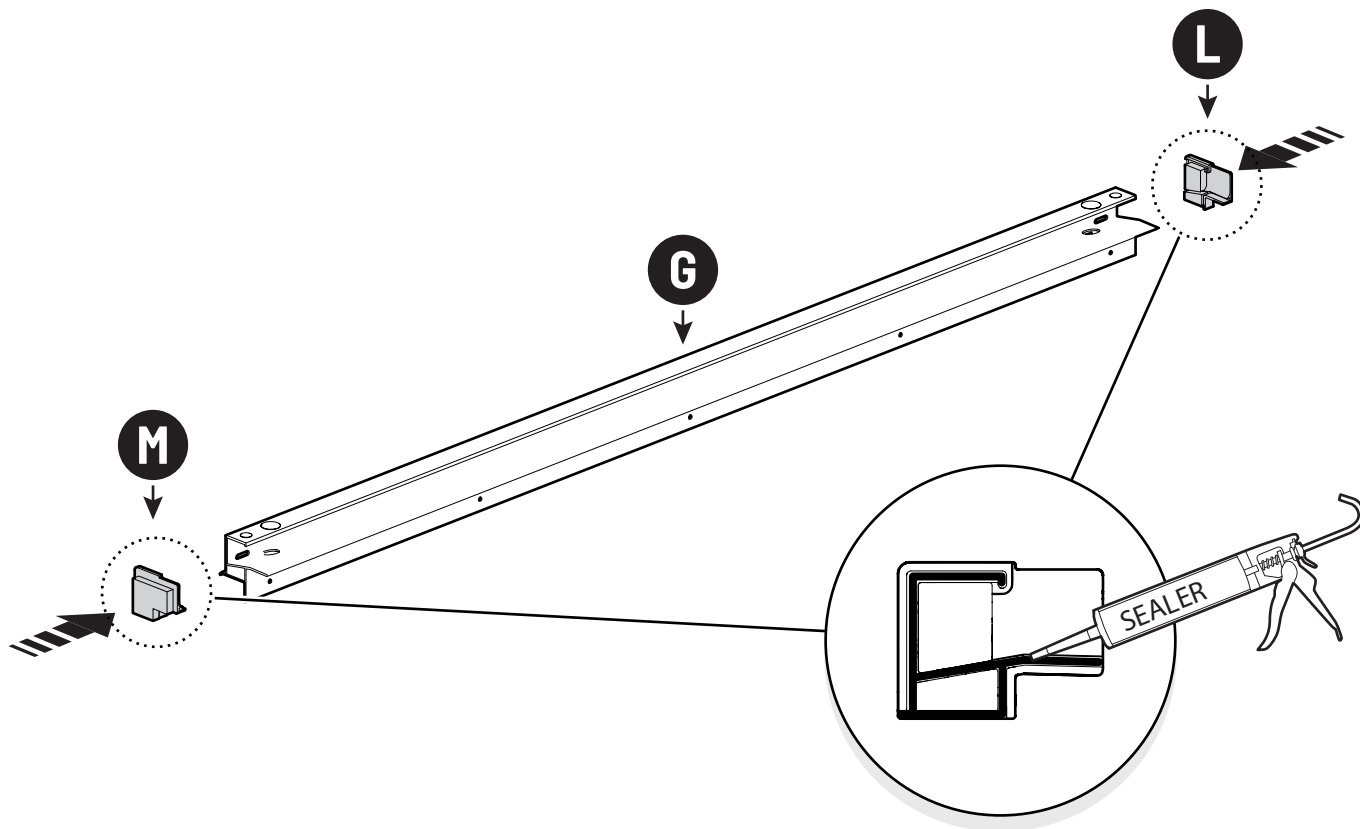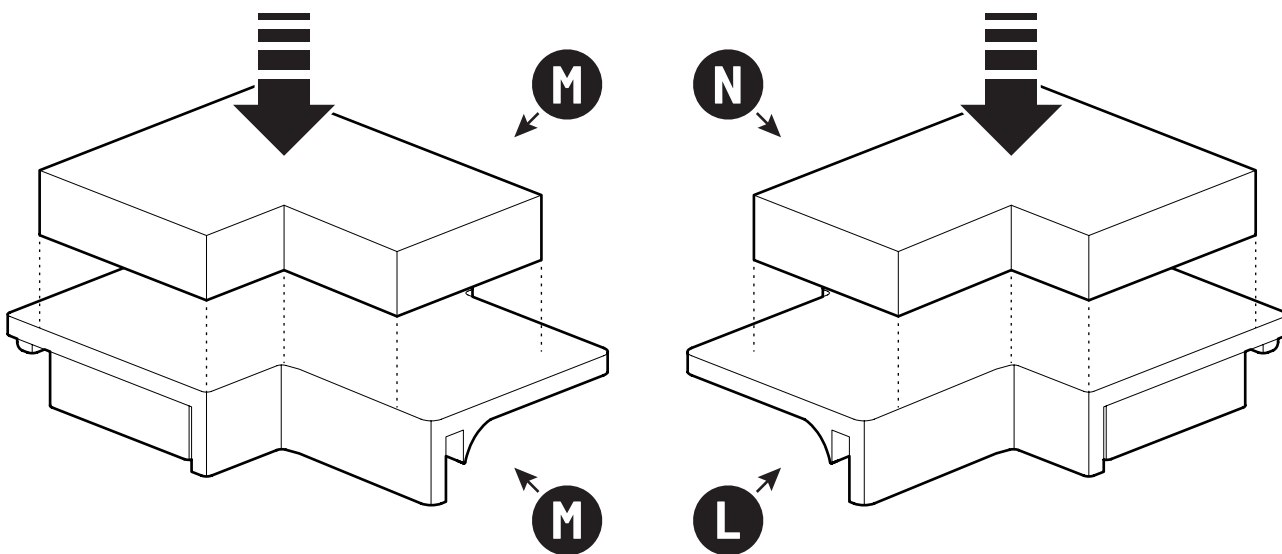

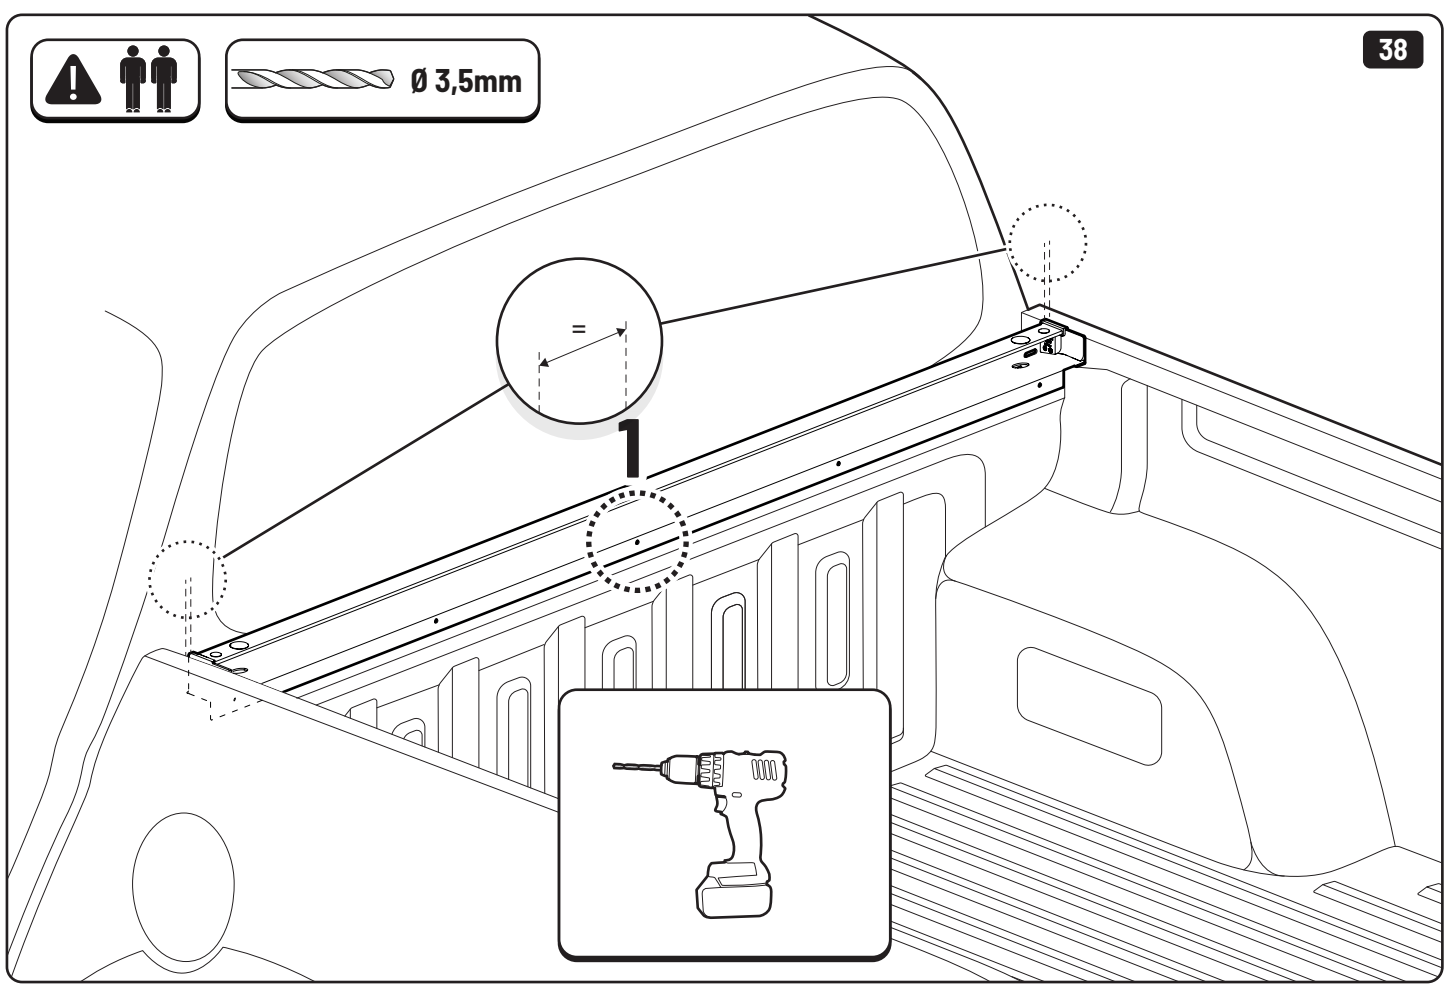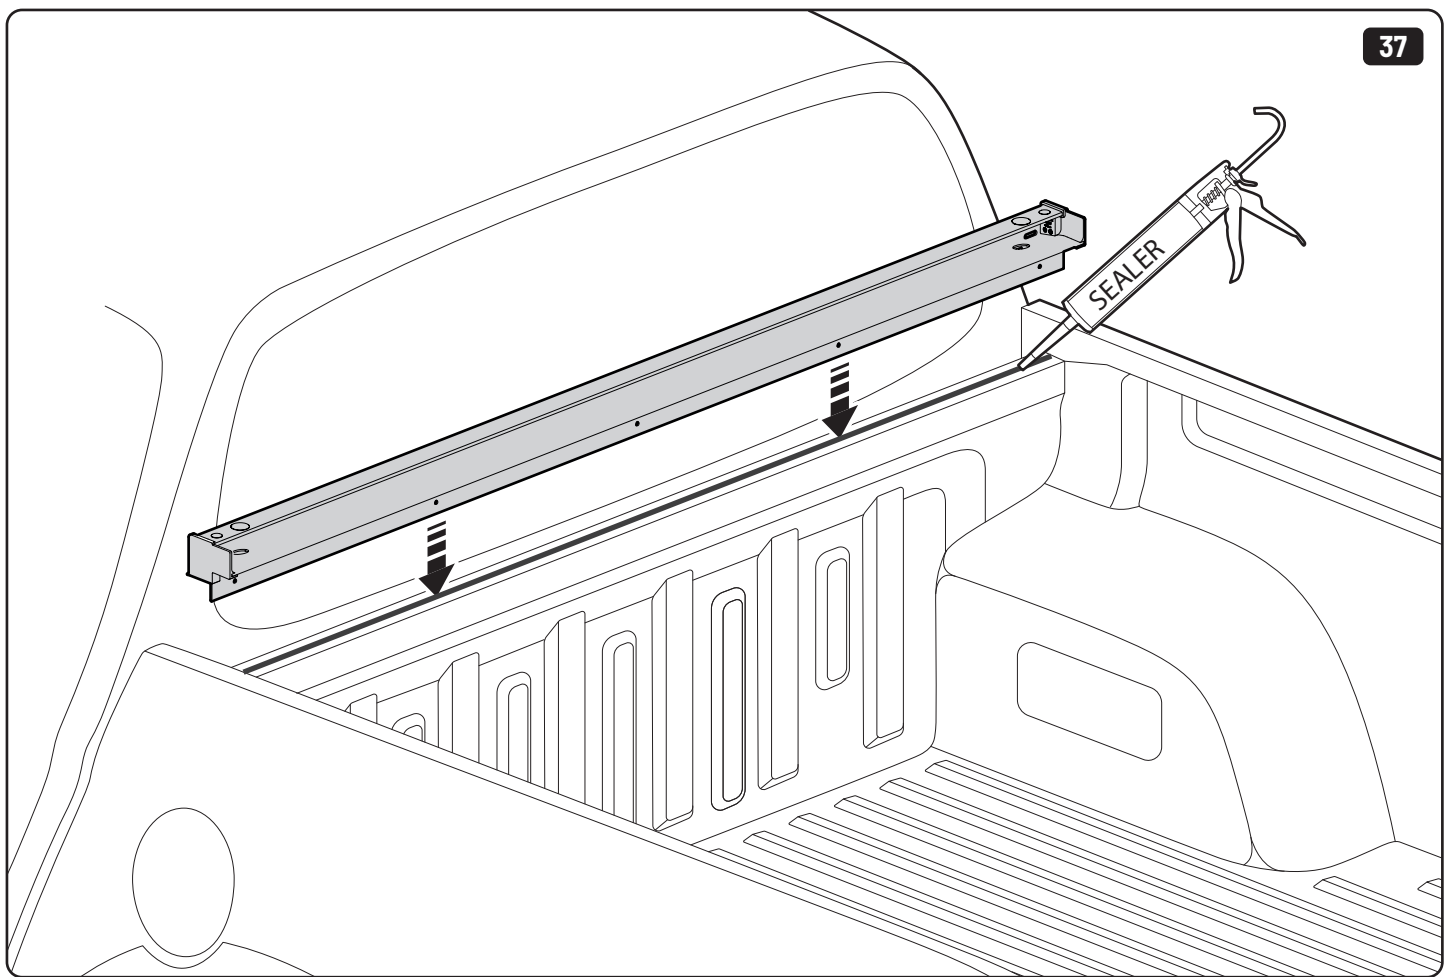







T20


4Nm

39

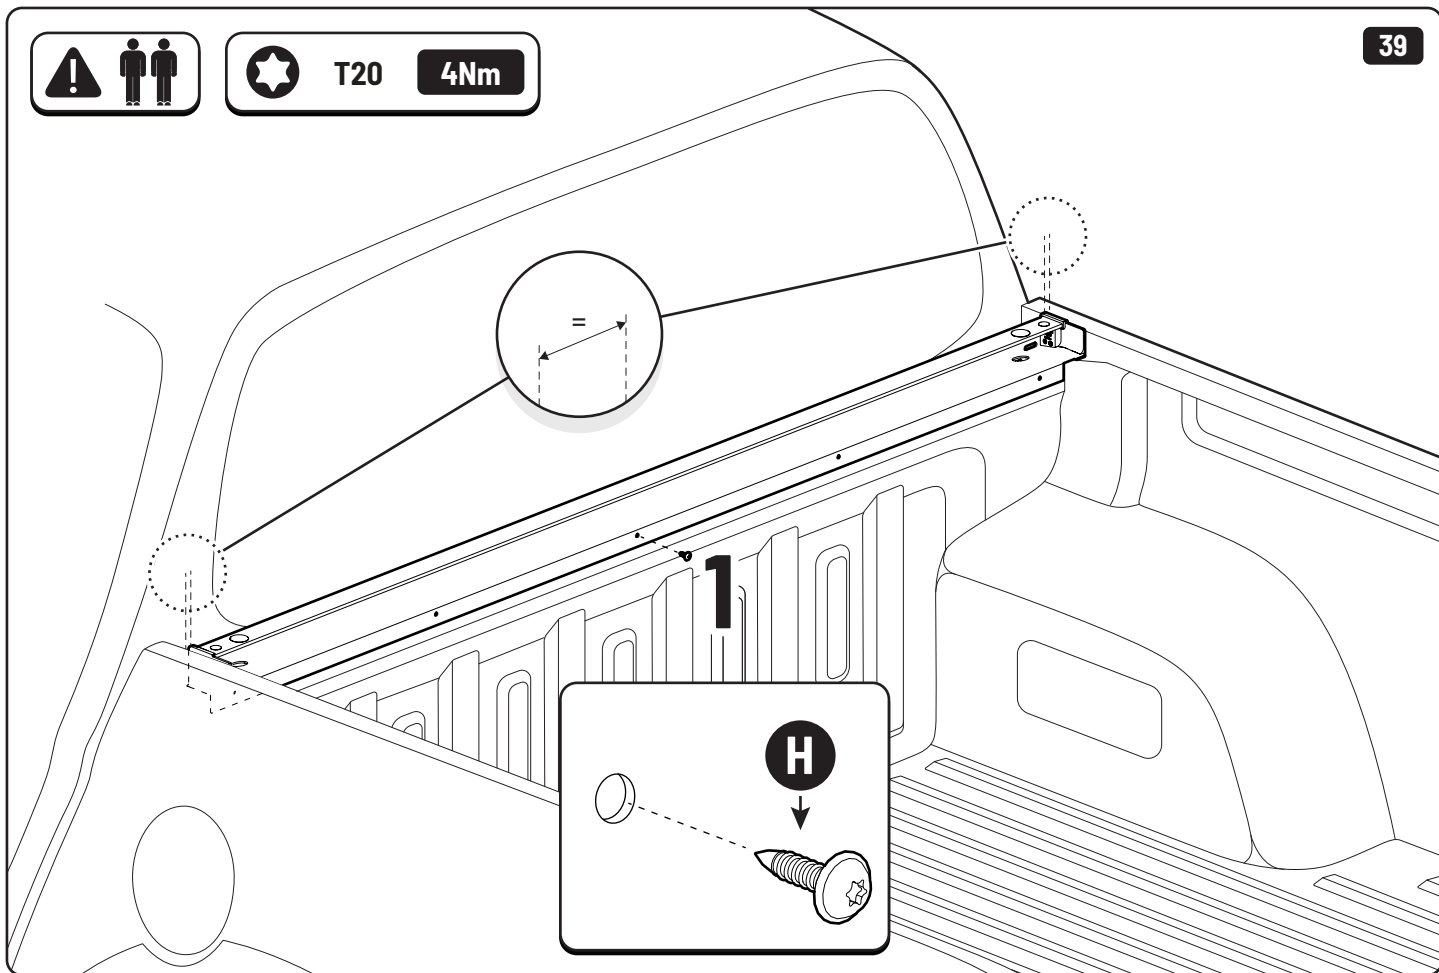

 Ø 3,5mm

40

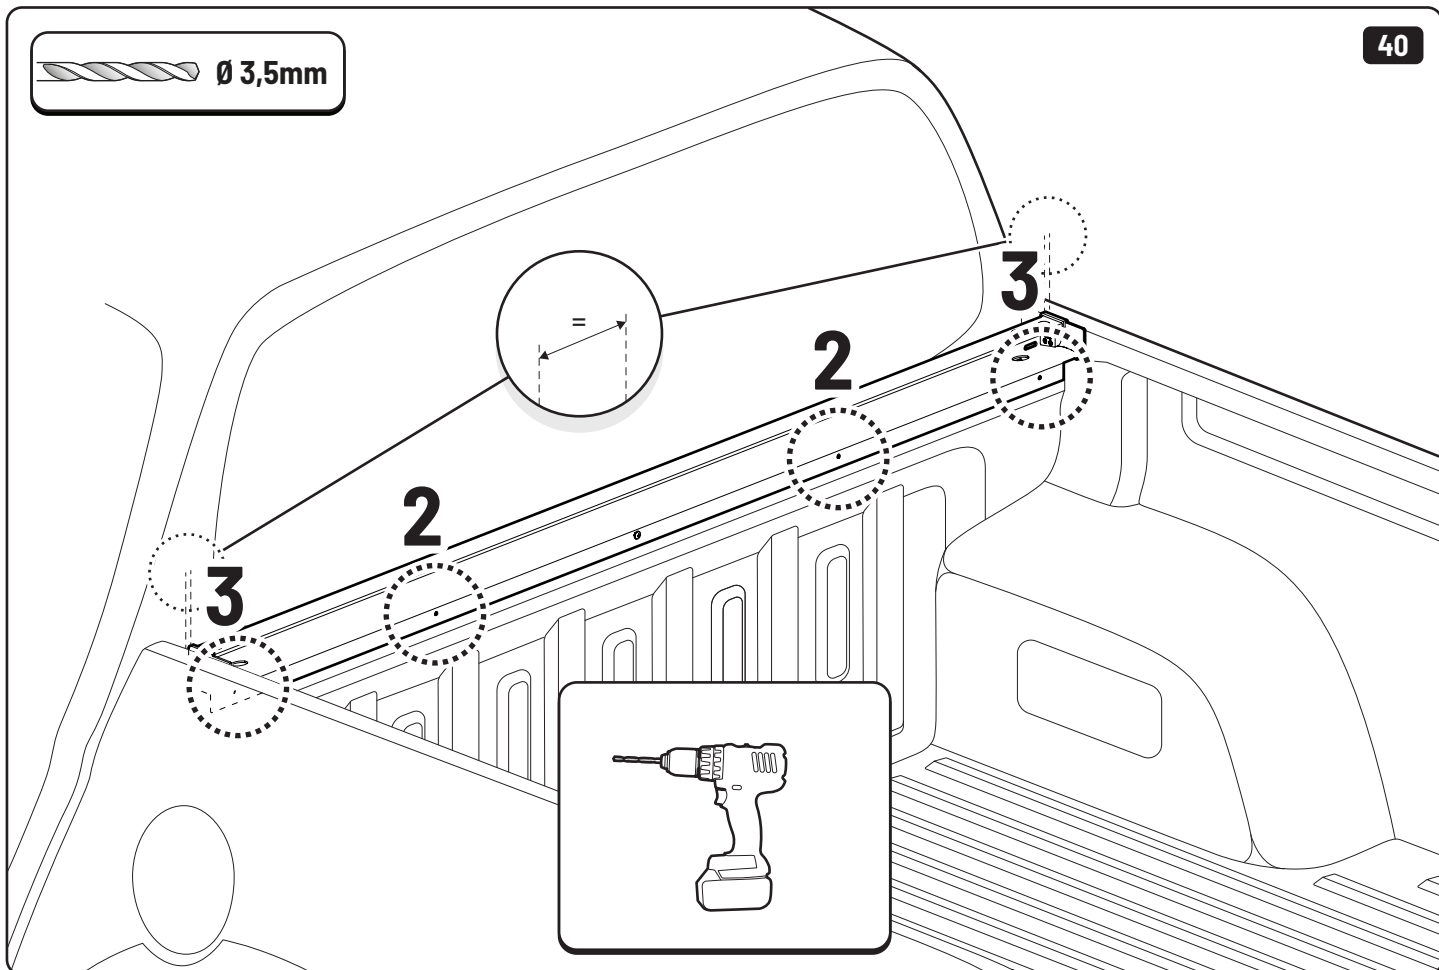





T20



4Nm

41

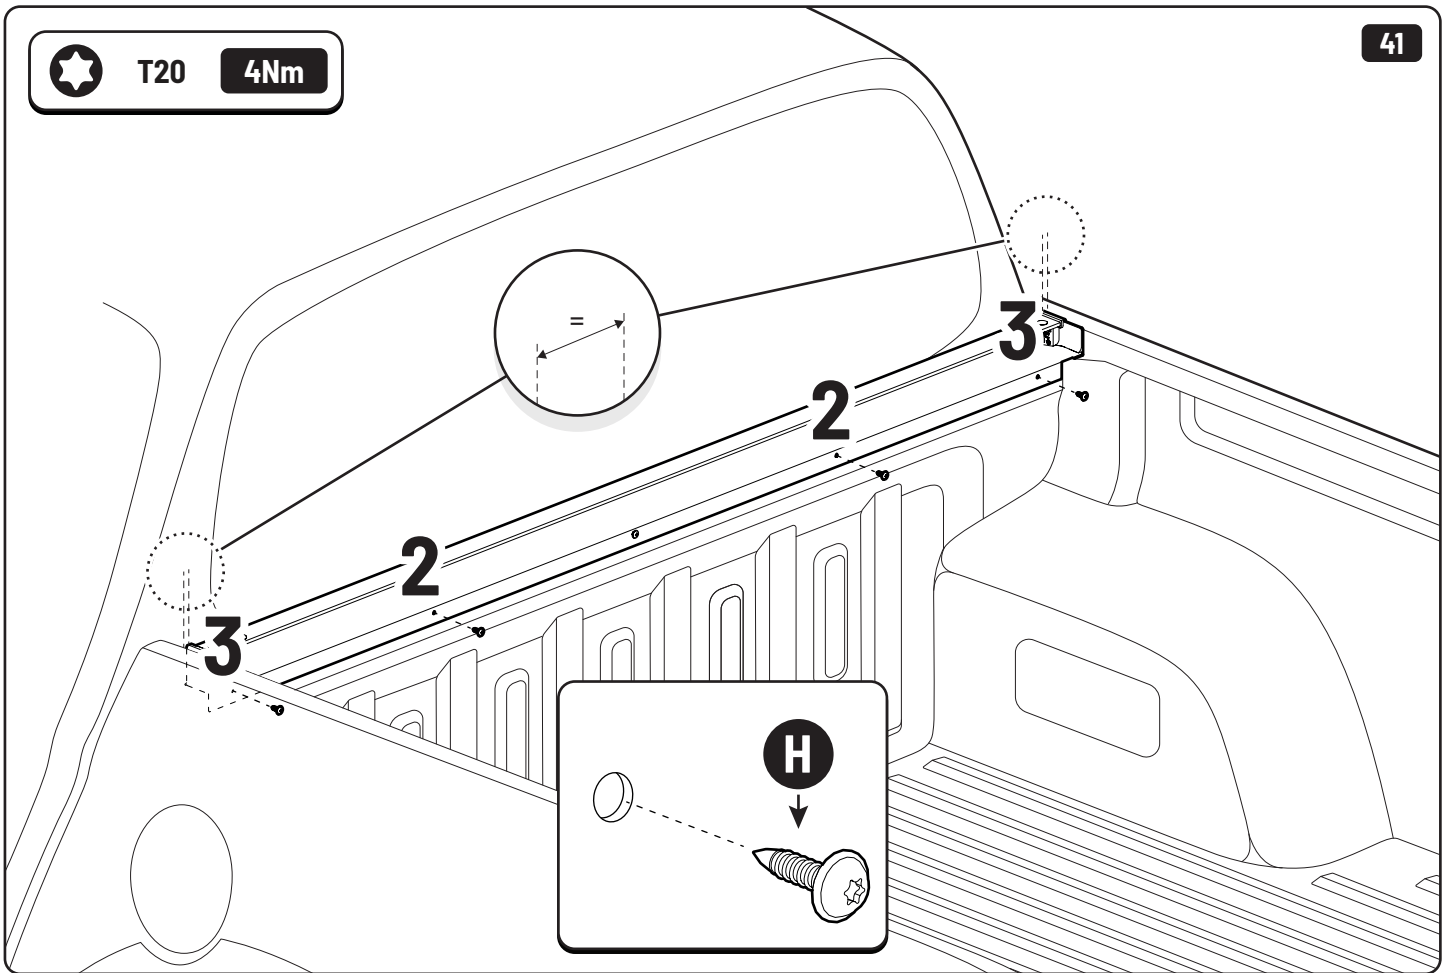





42

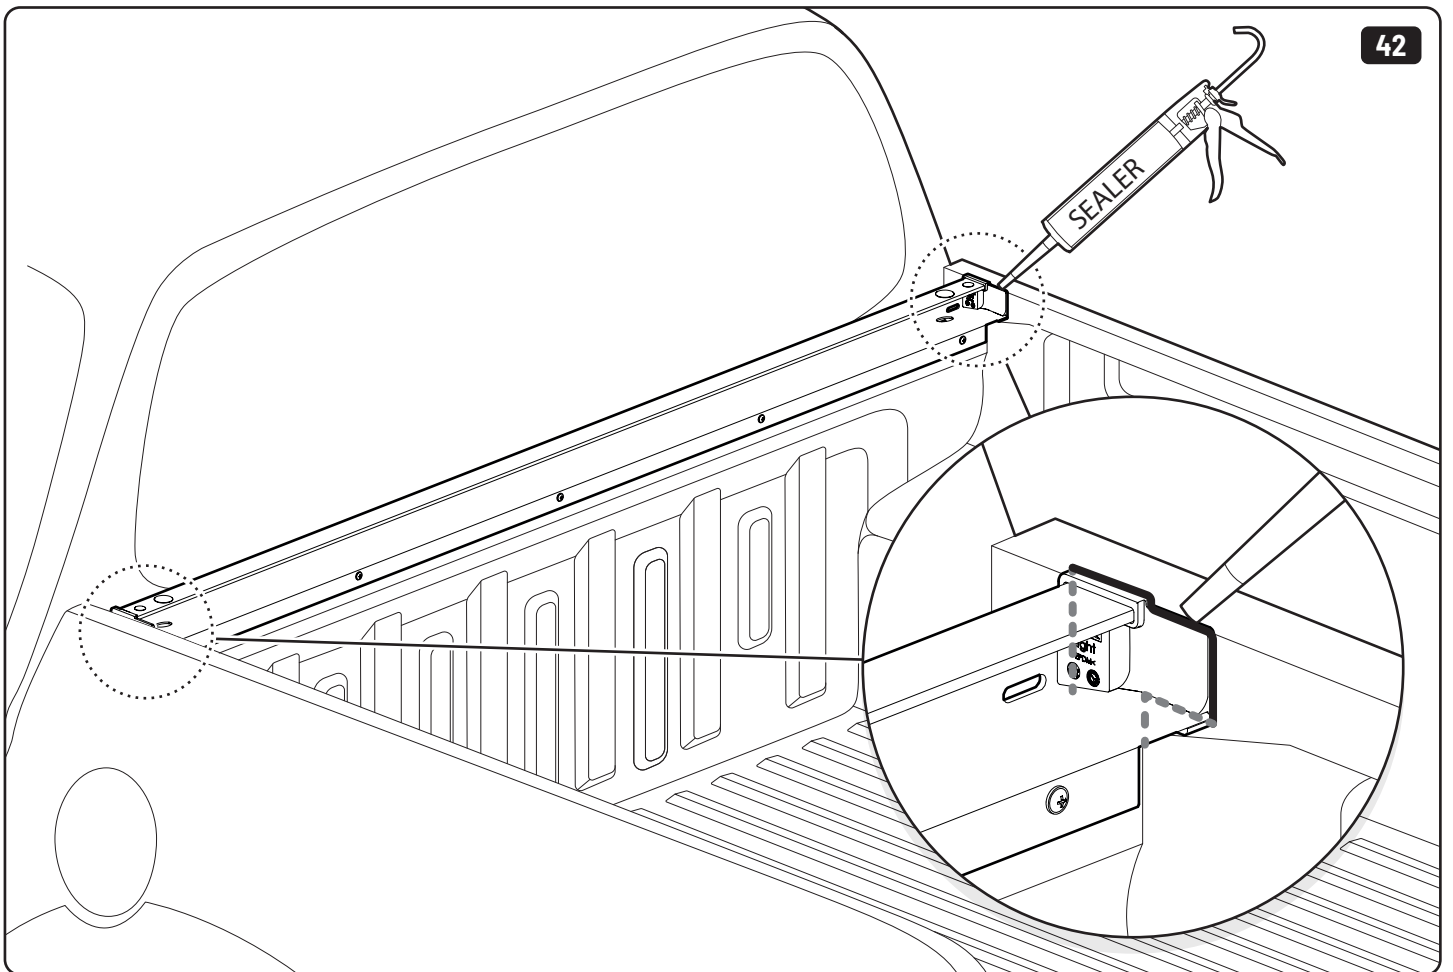



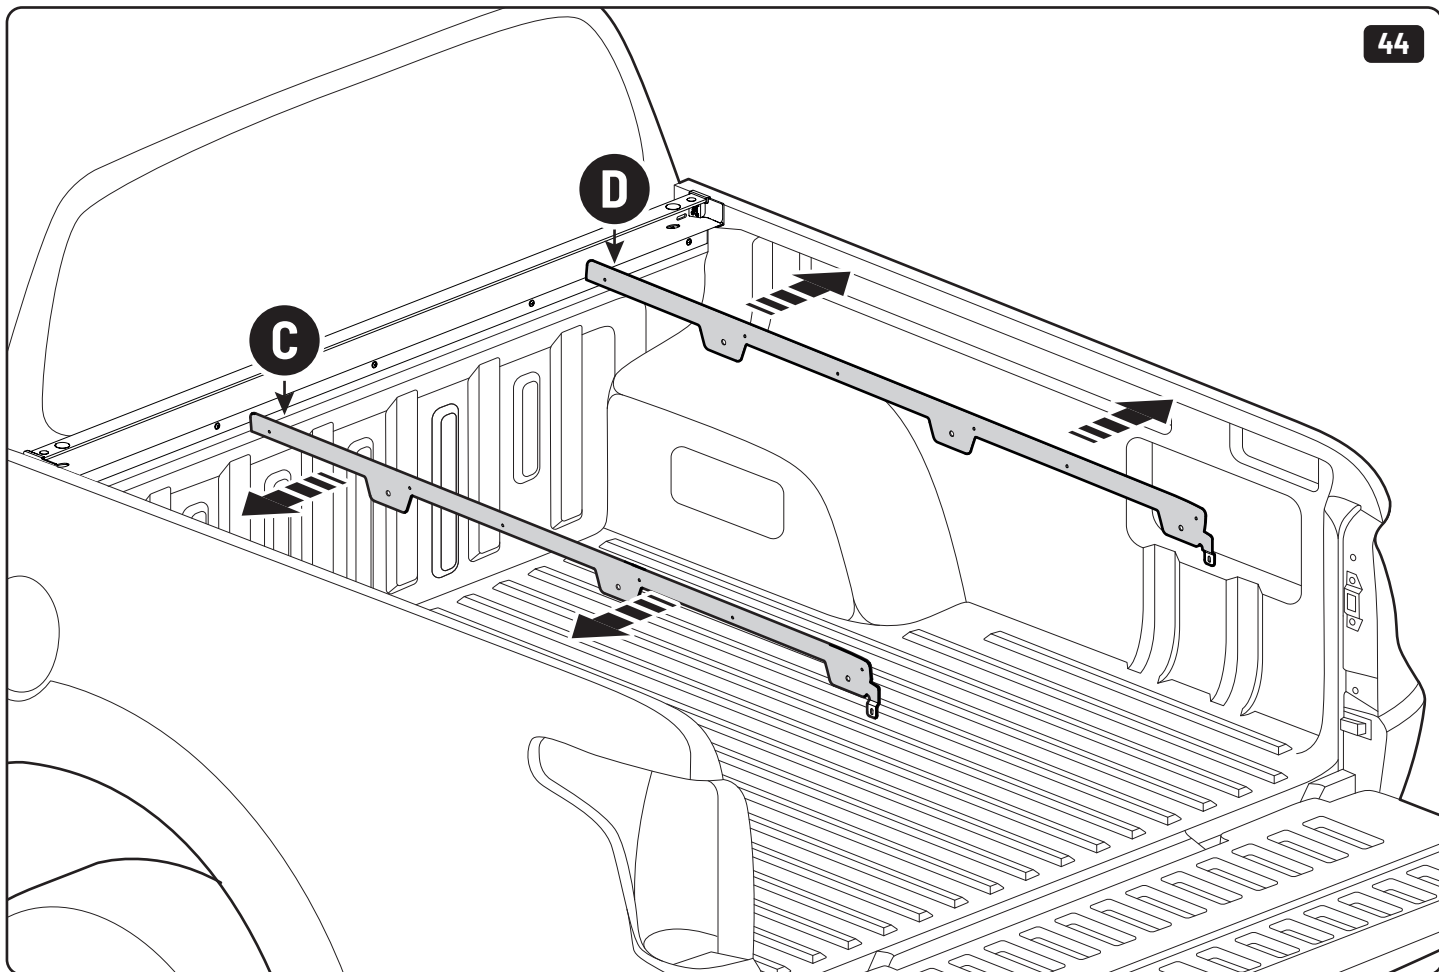
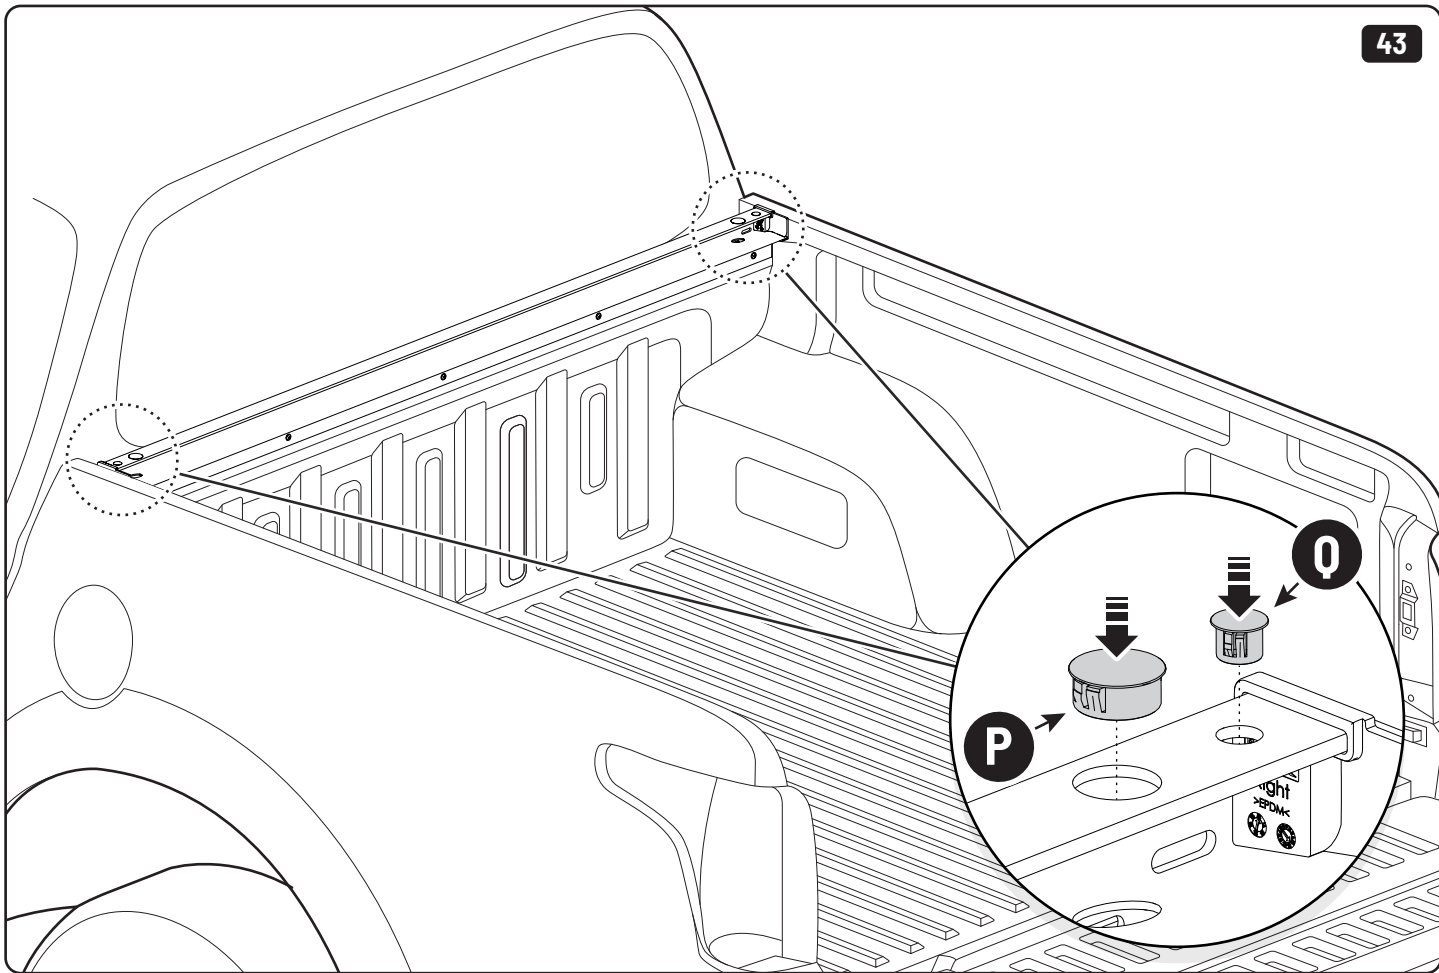






Ø 3,5mm

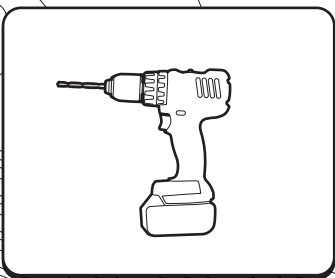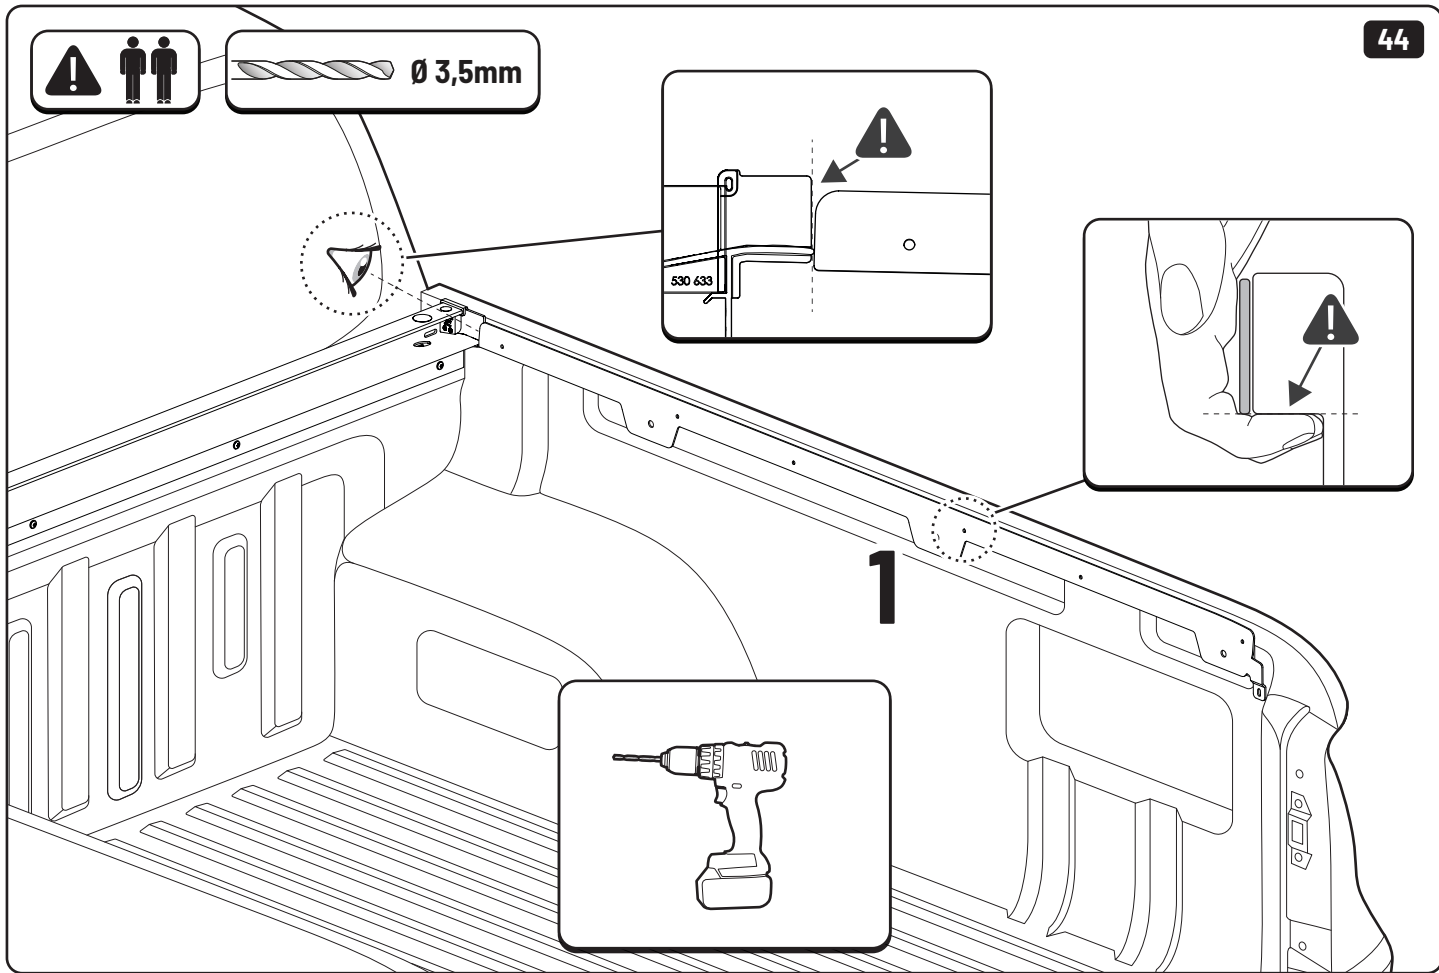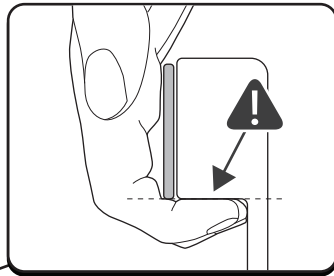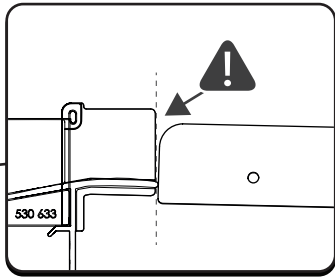





T20 4Nm

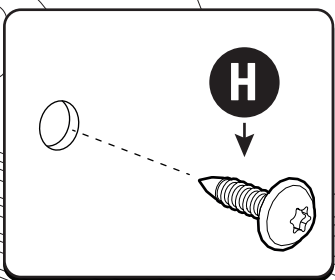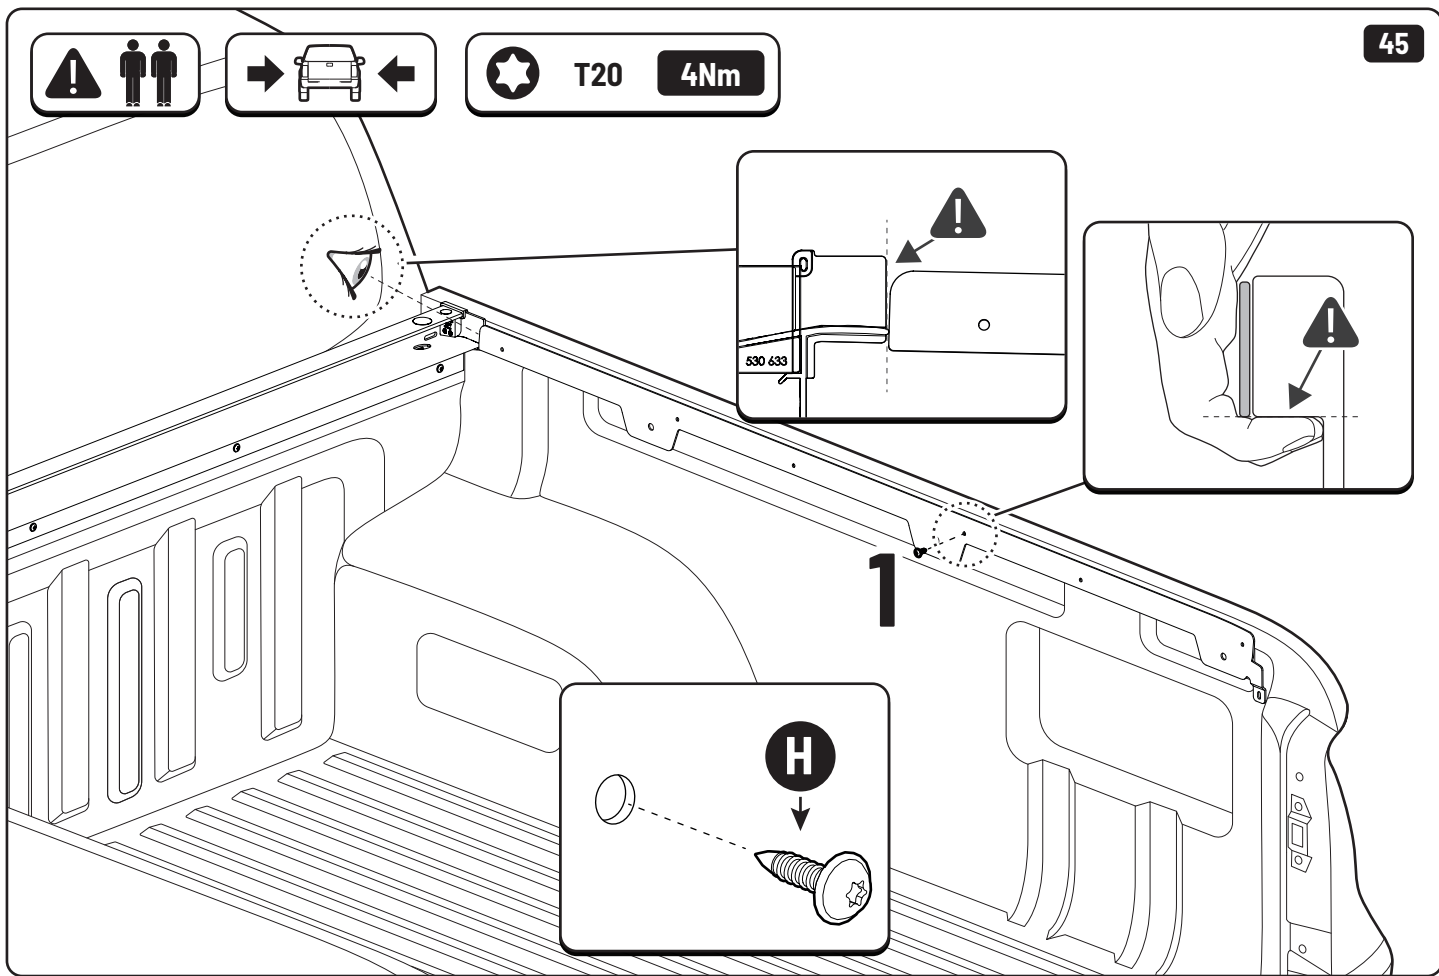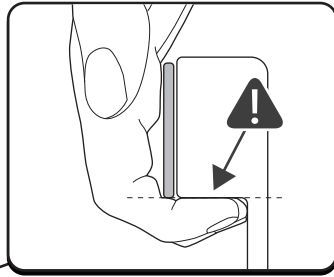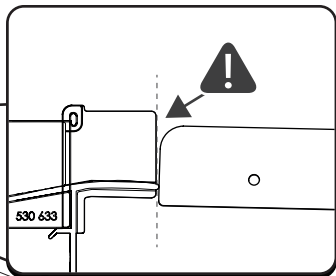


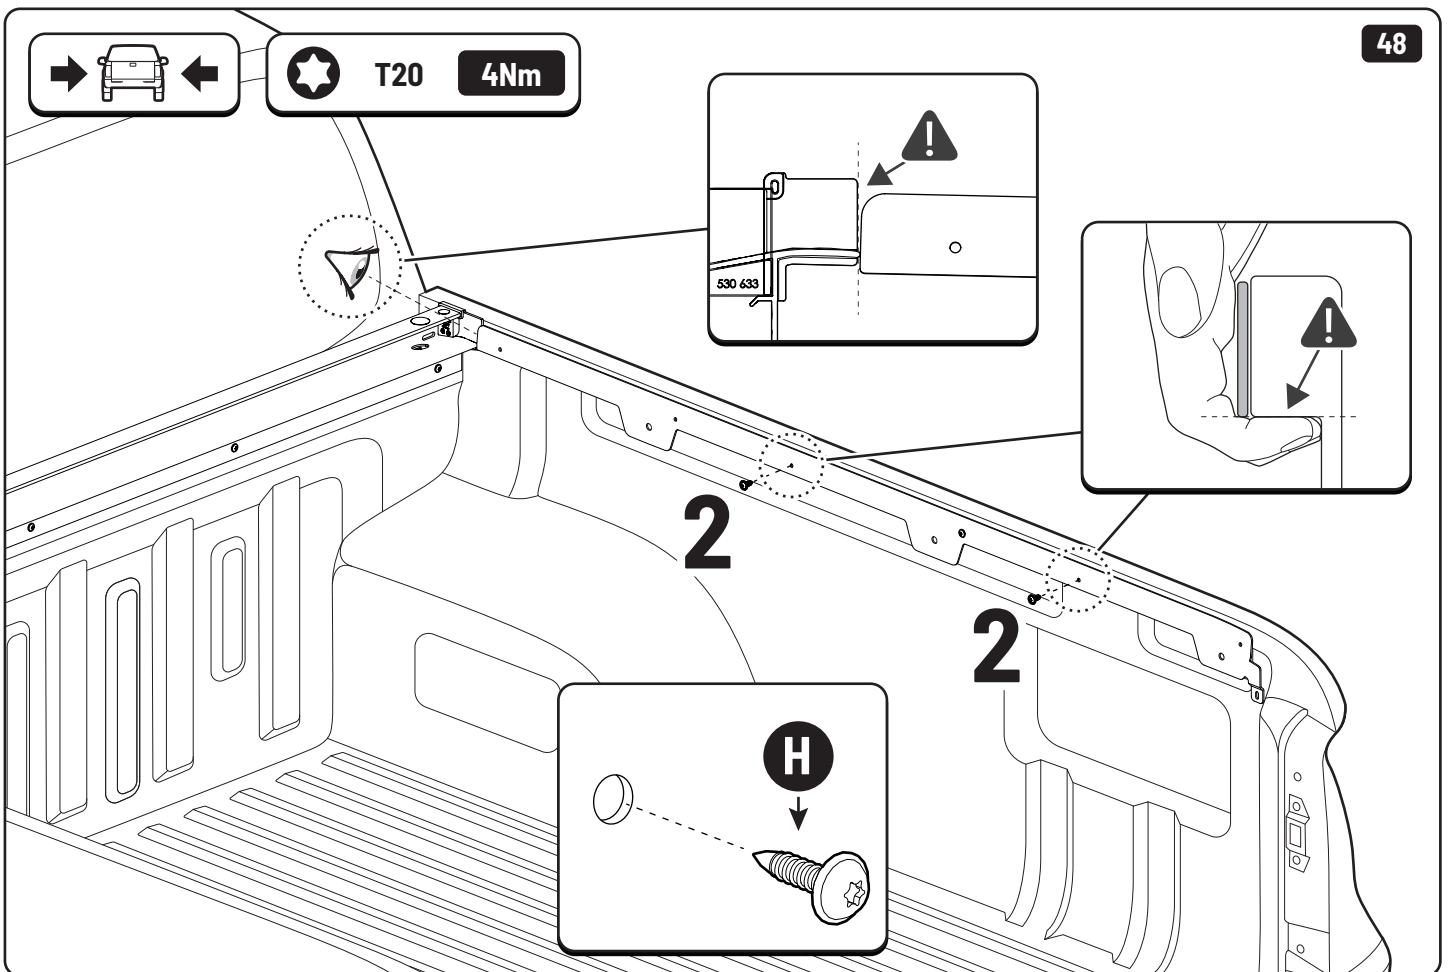
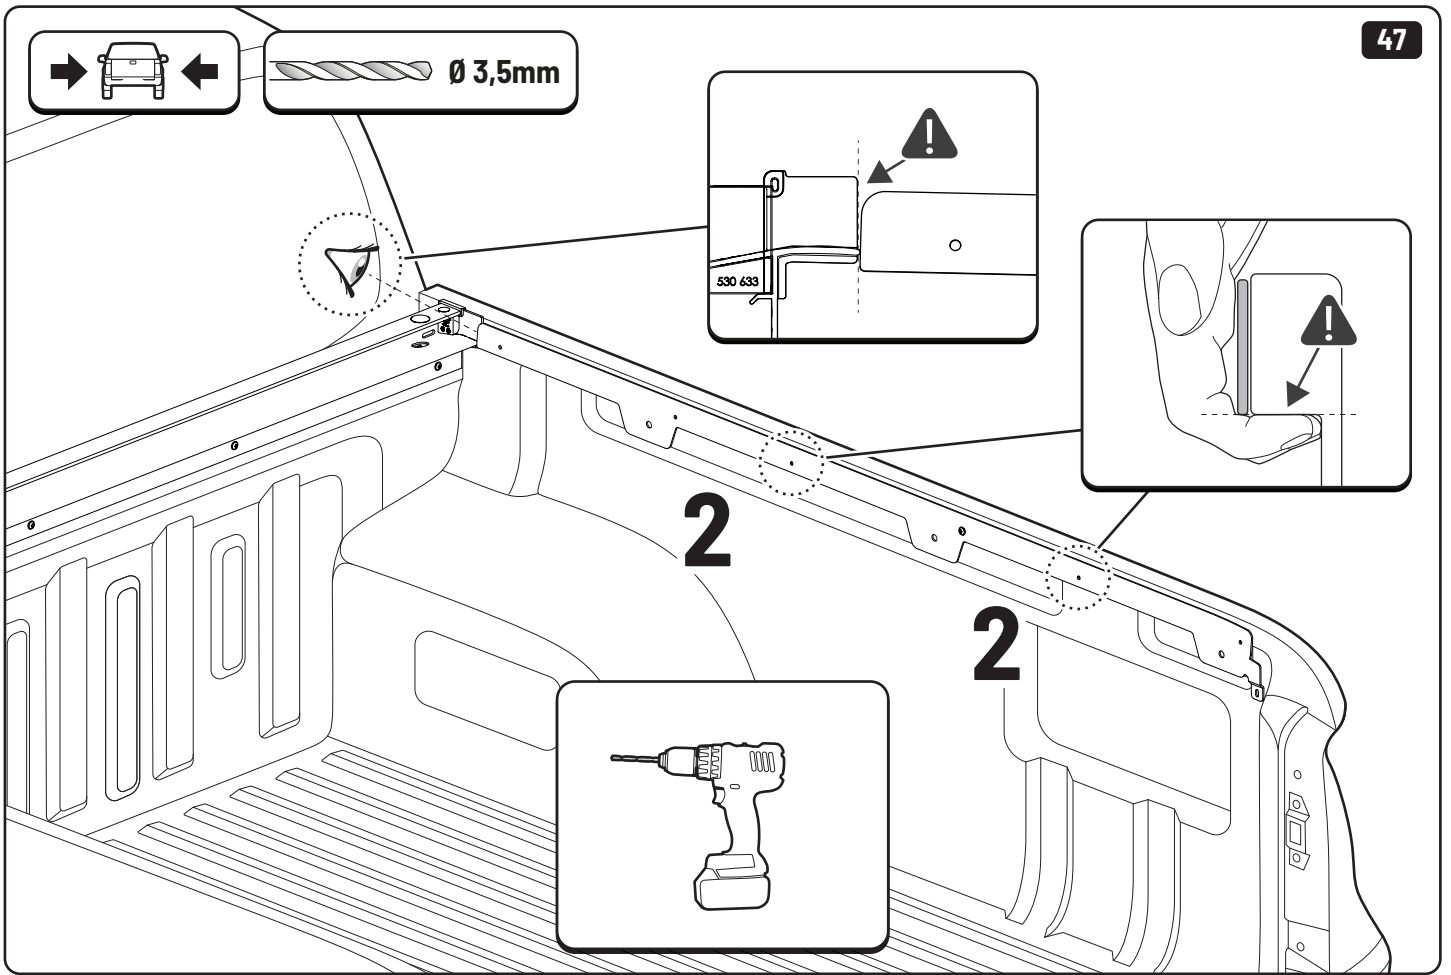






Ø 3,5mm

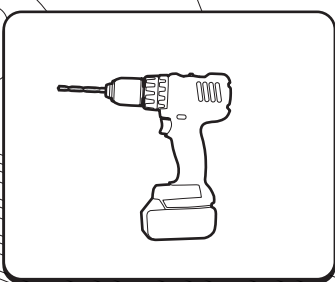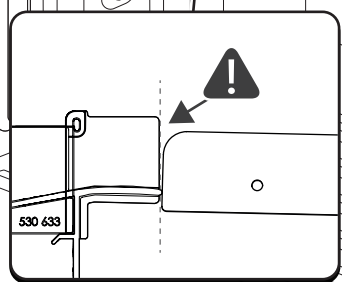
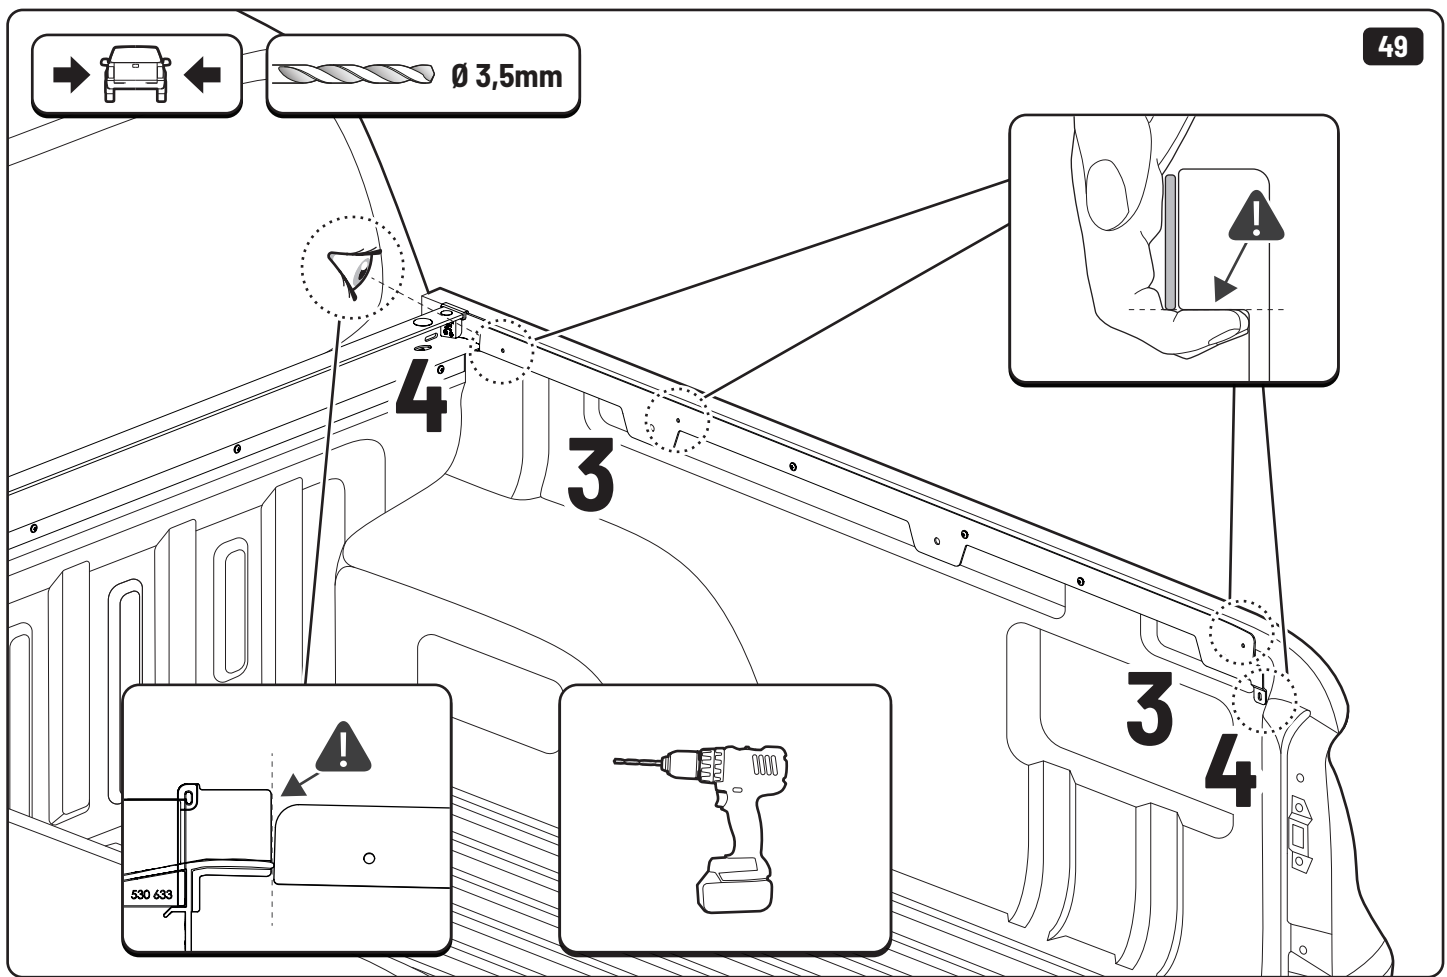



T20 4Nm

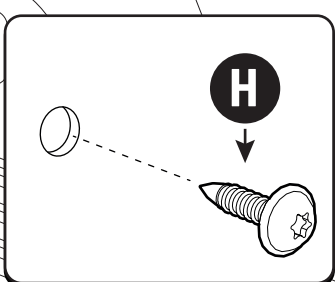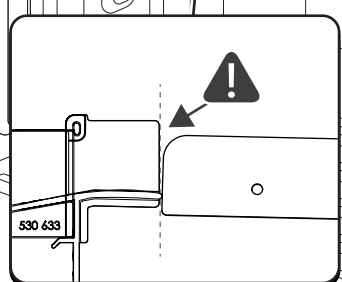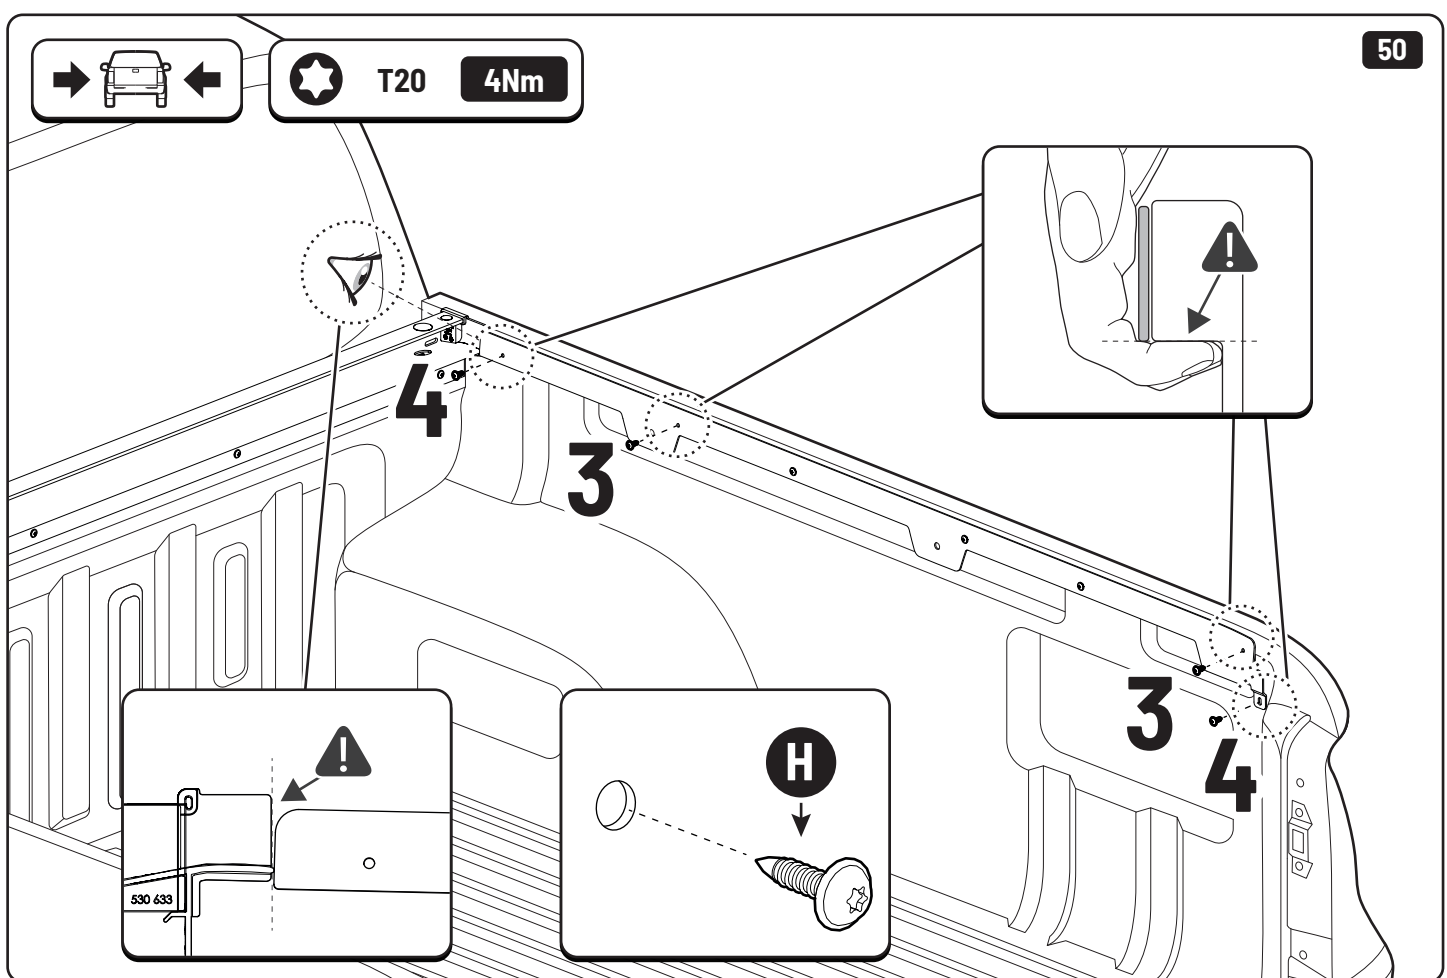

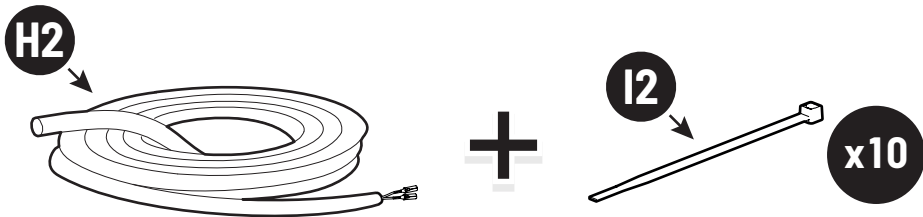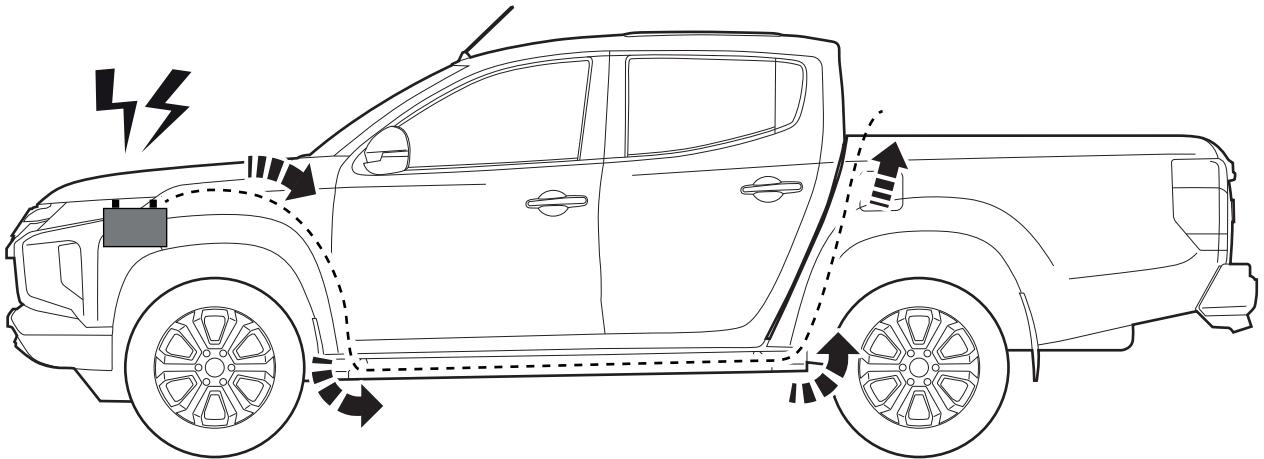

**Only to be installed by authorized personell**

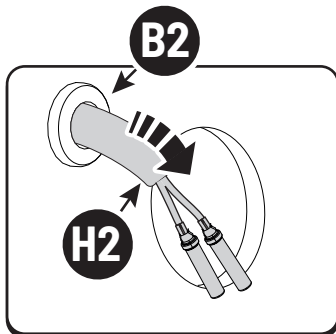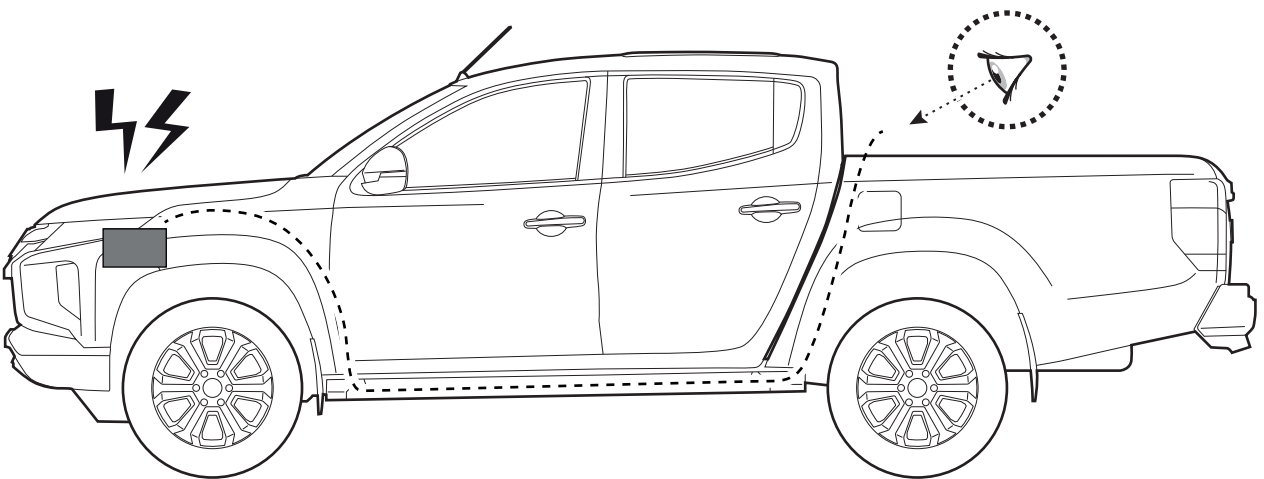


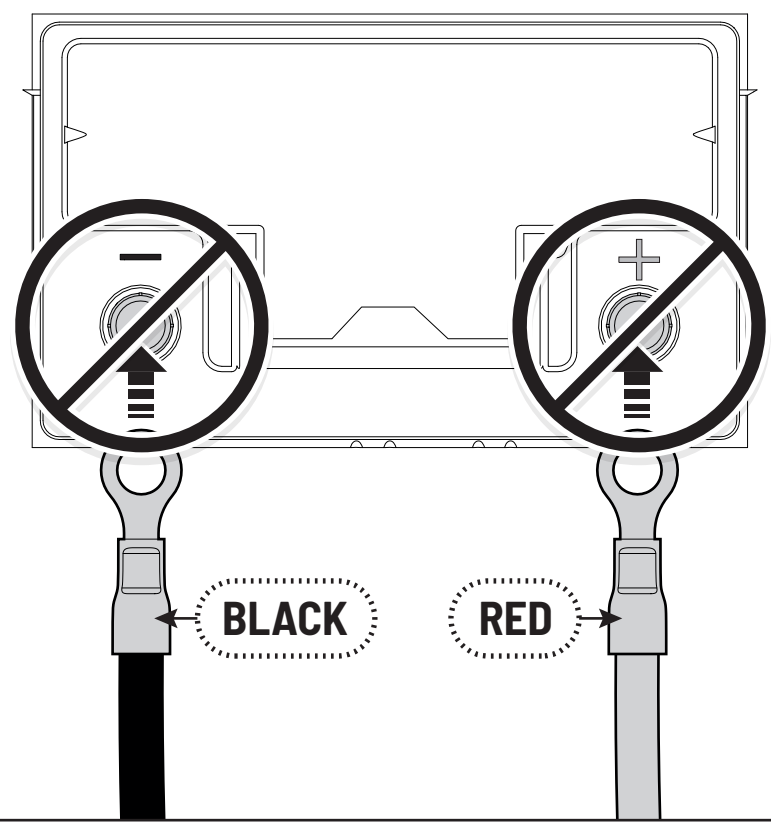





54





150mm

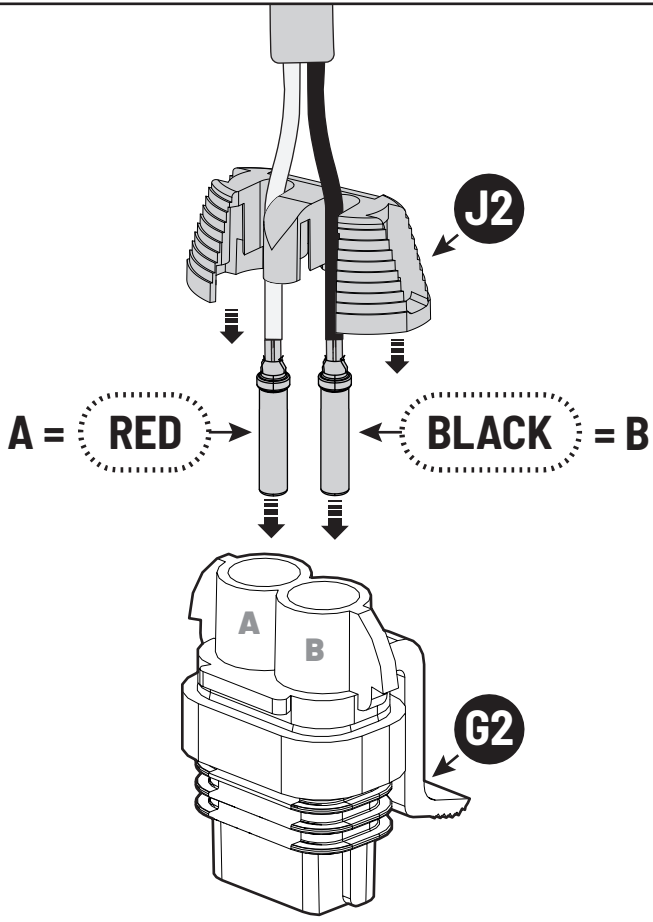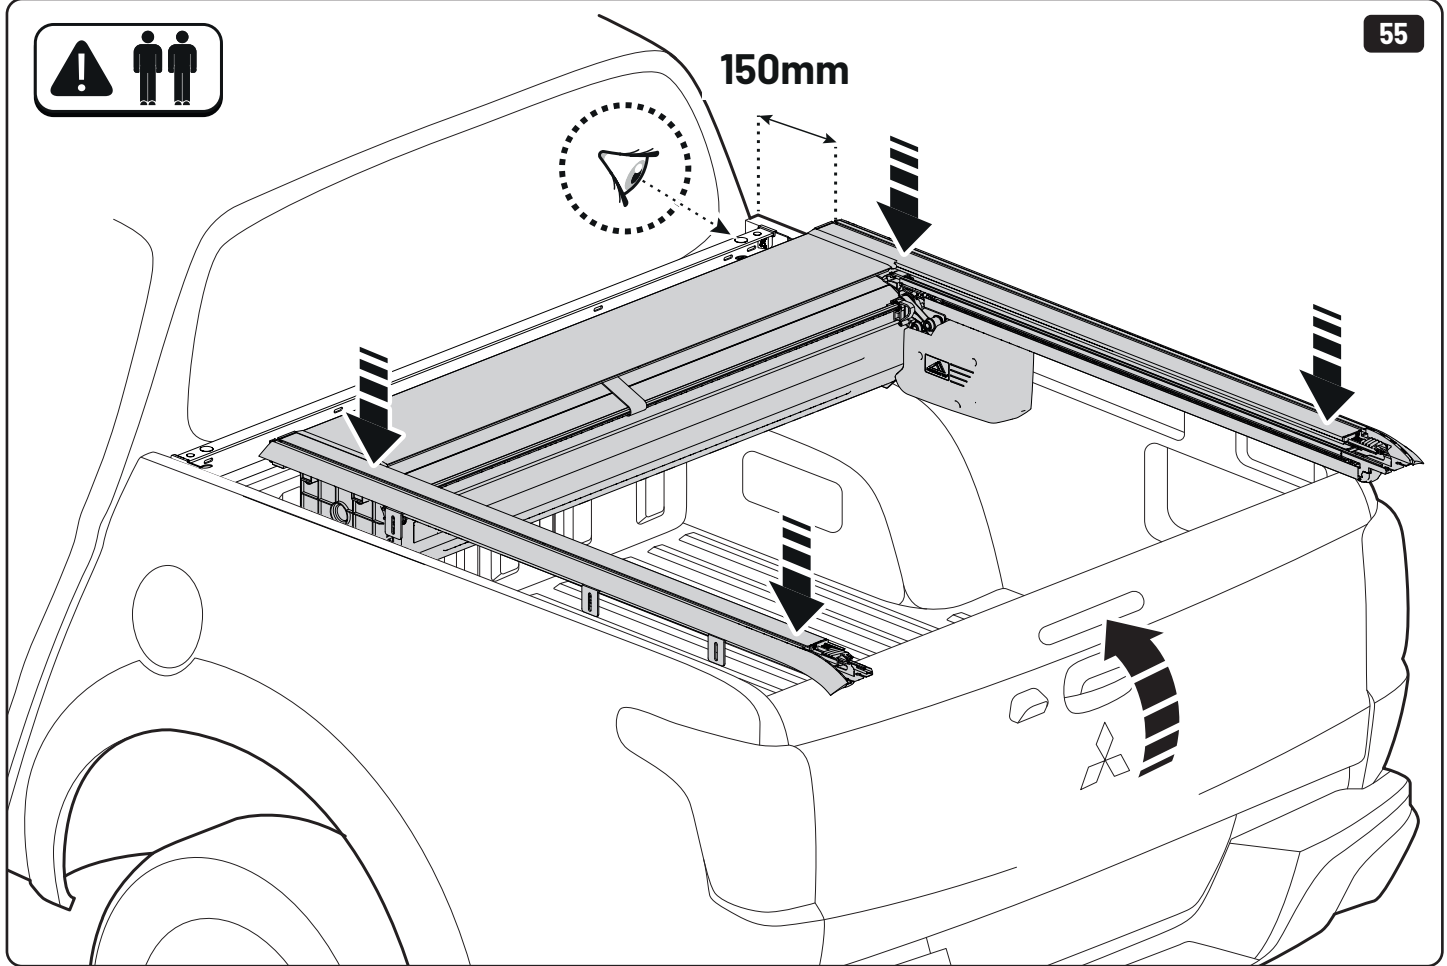



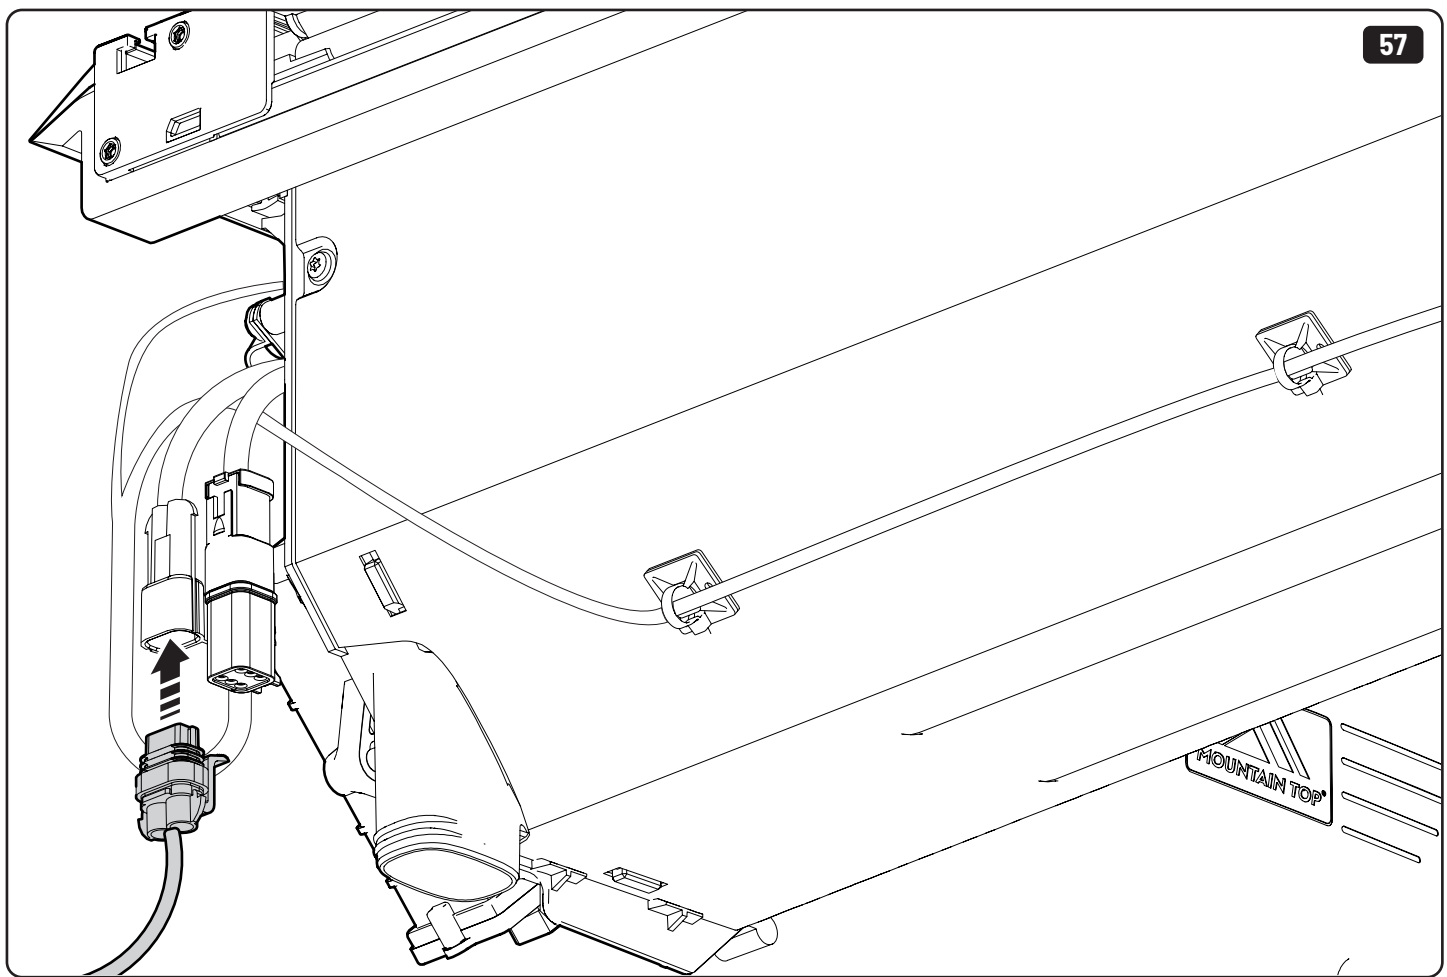


X

Y

!

✓

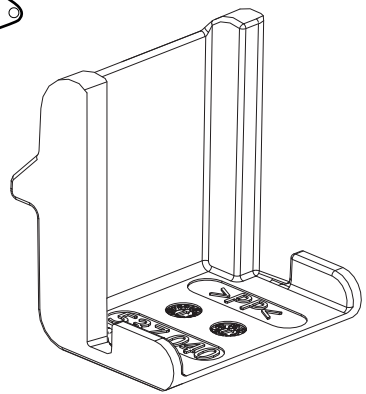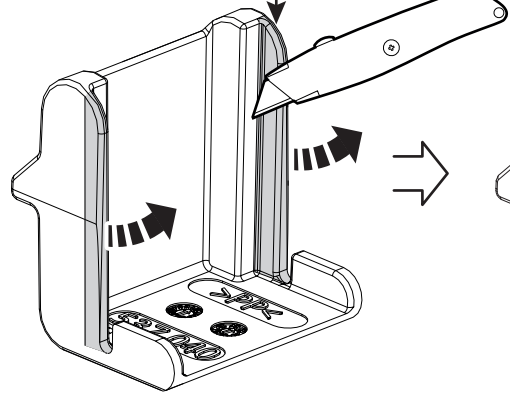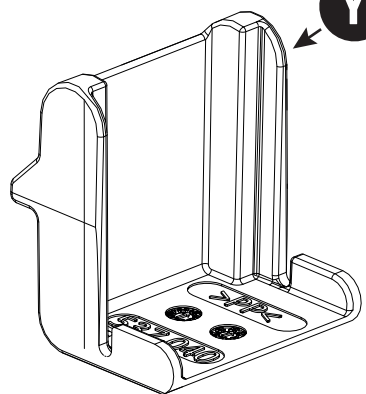



1







2

3



x2





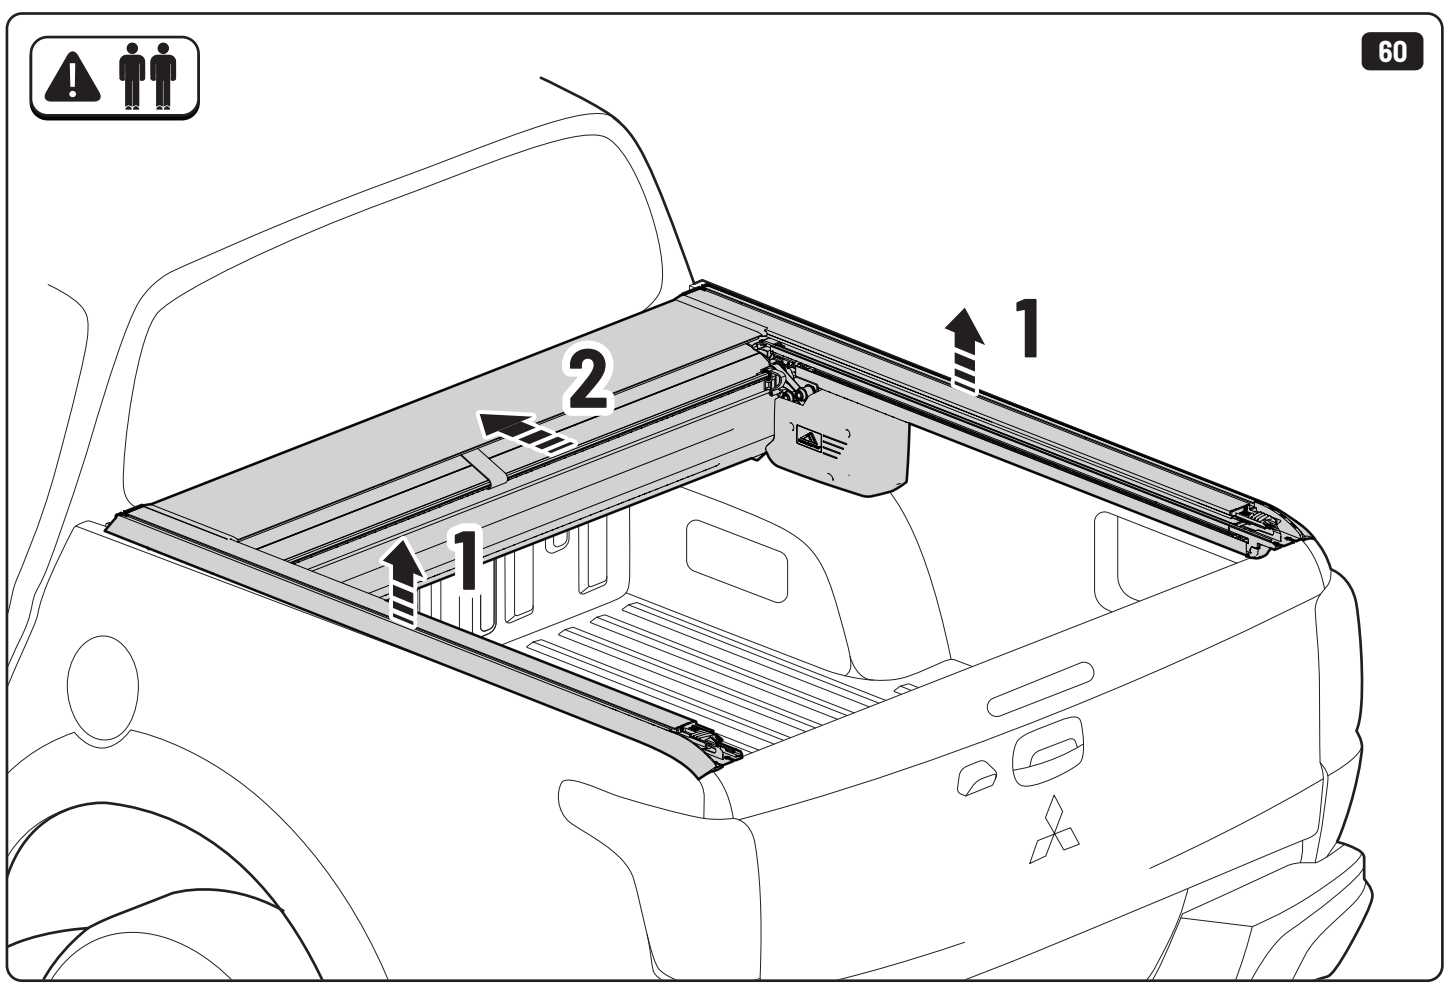
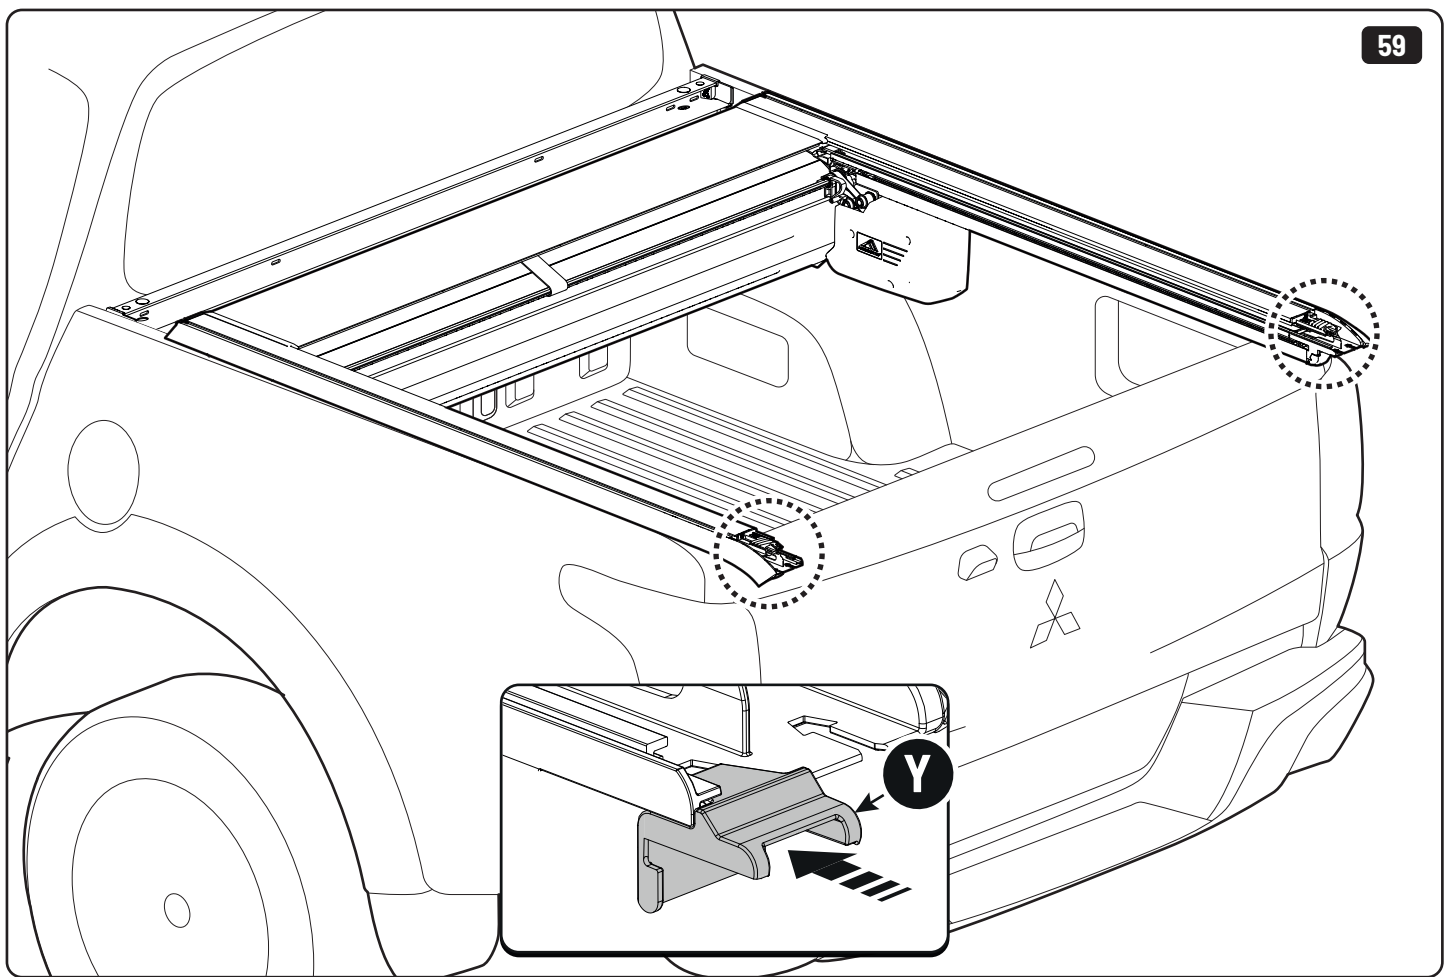


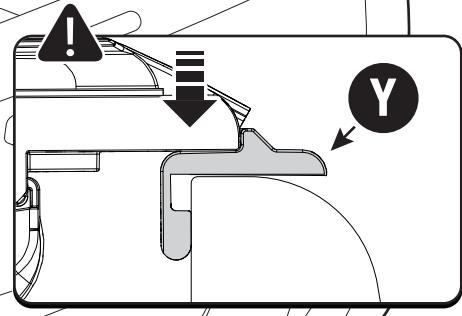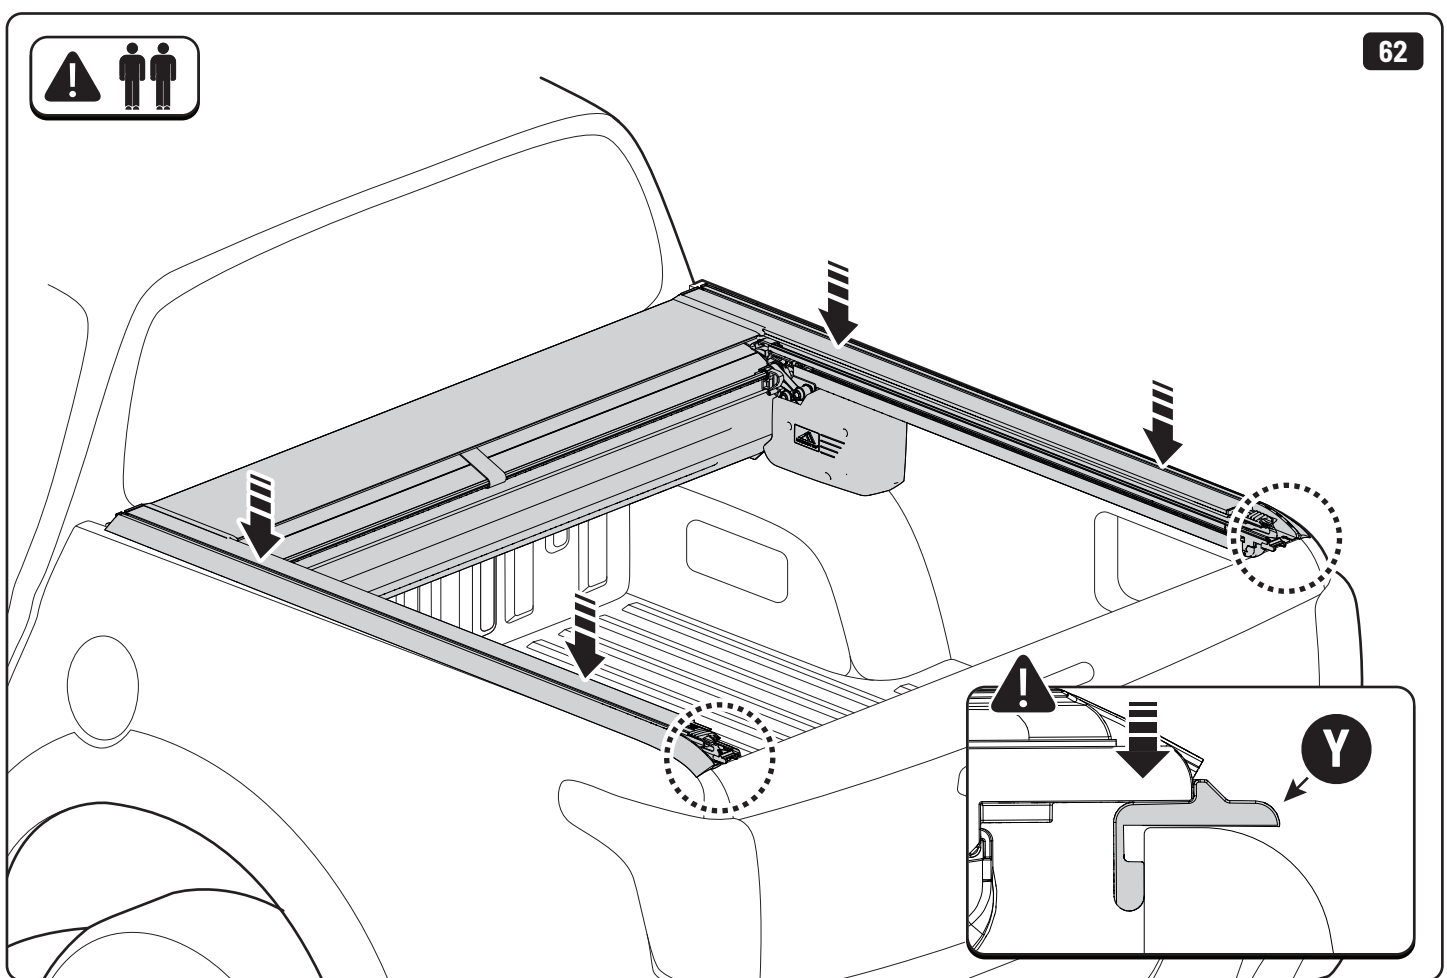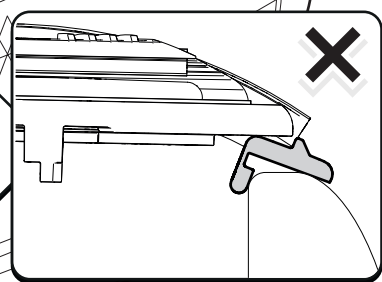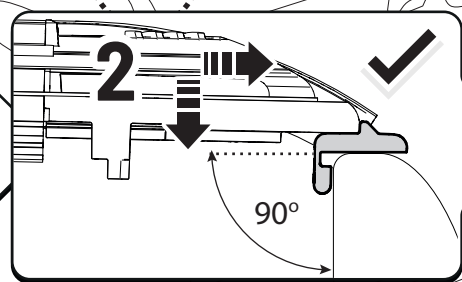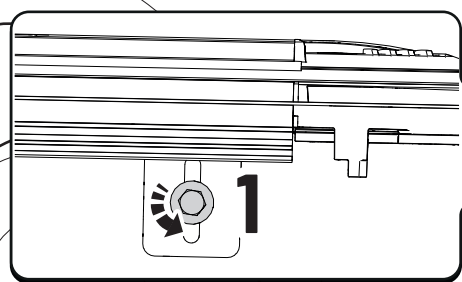
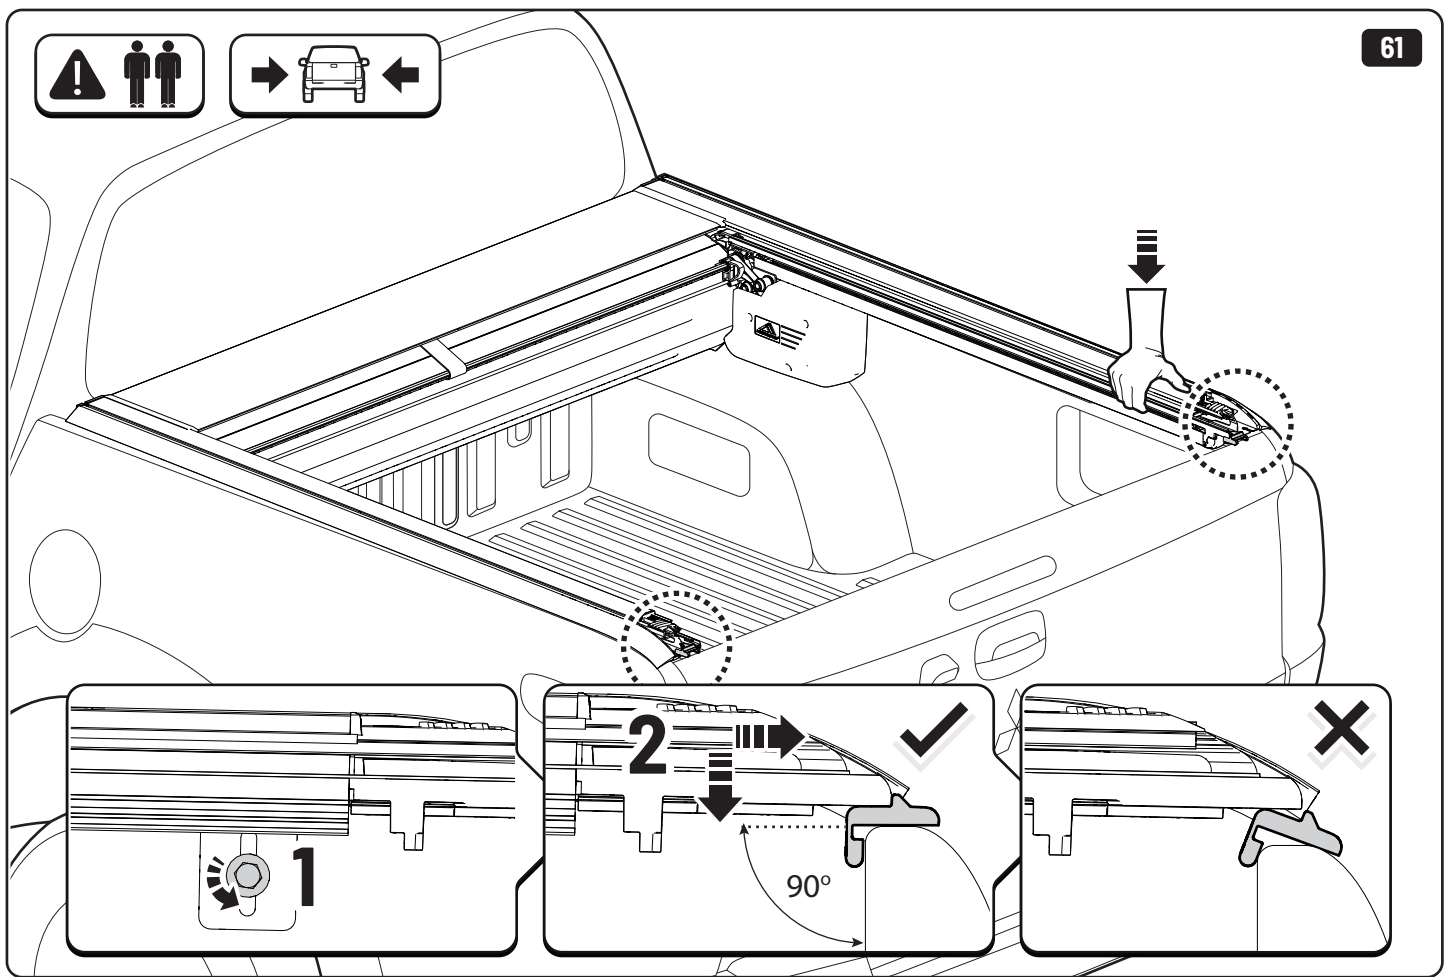


↔  ↔     10mm    10Nm

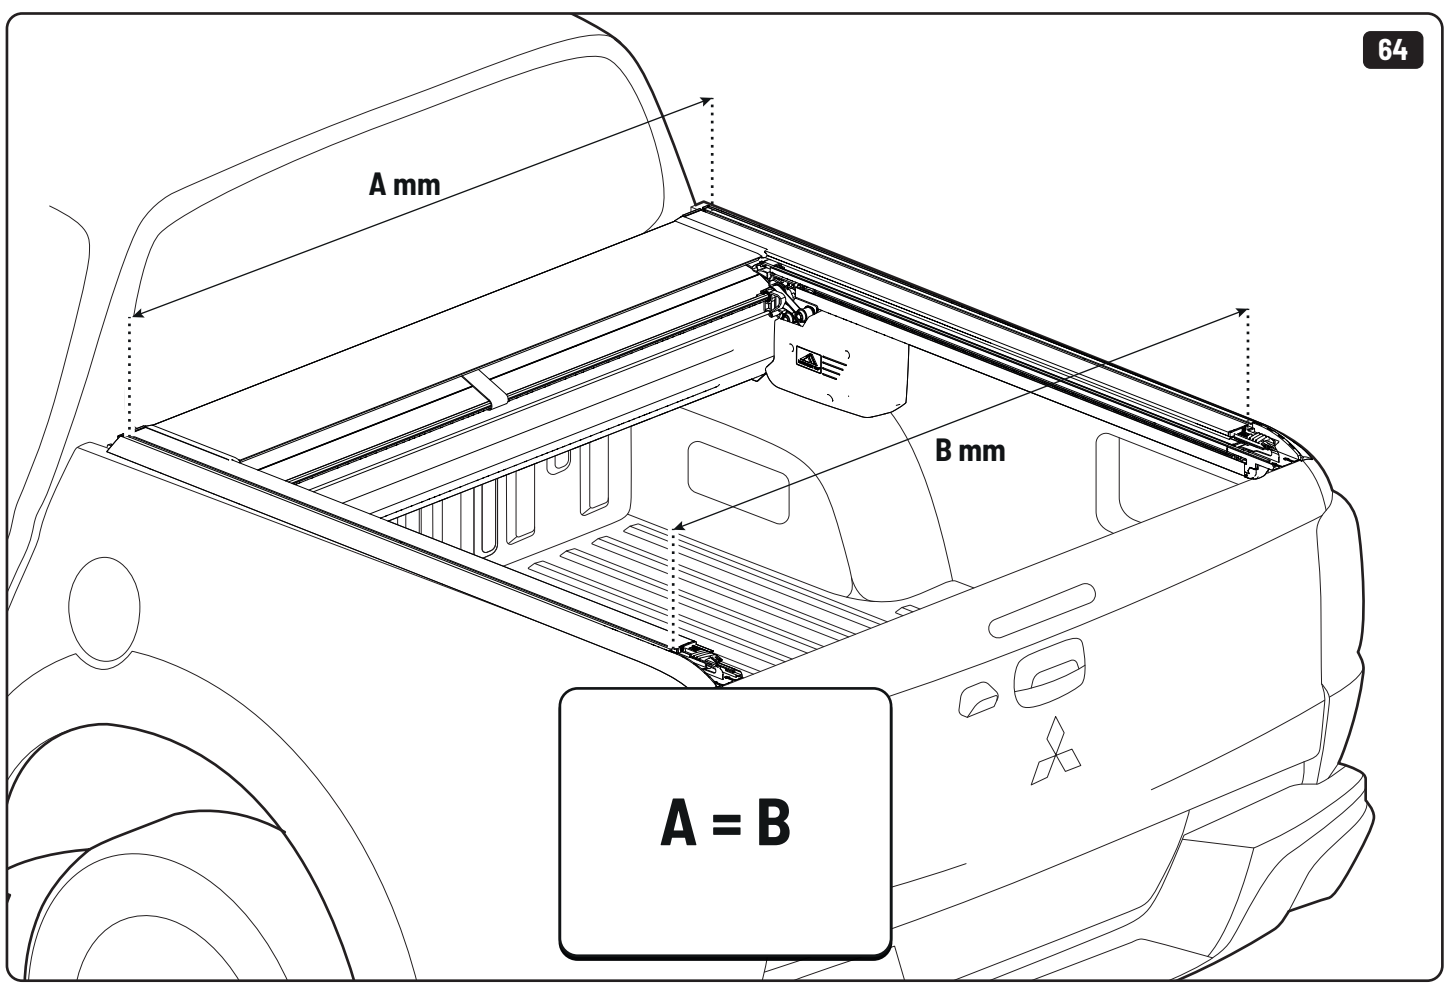
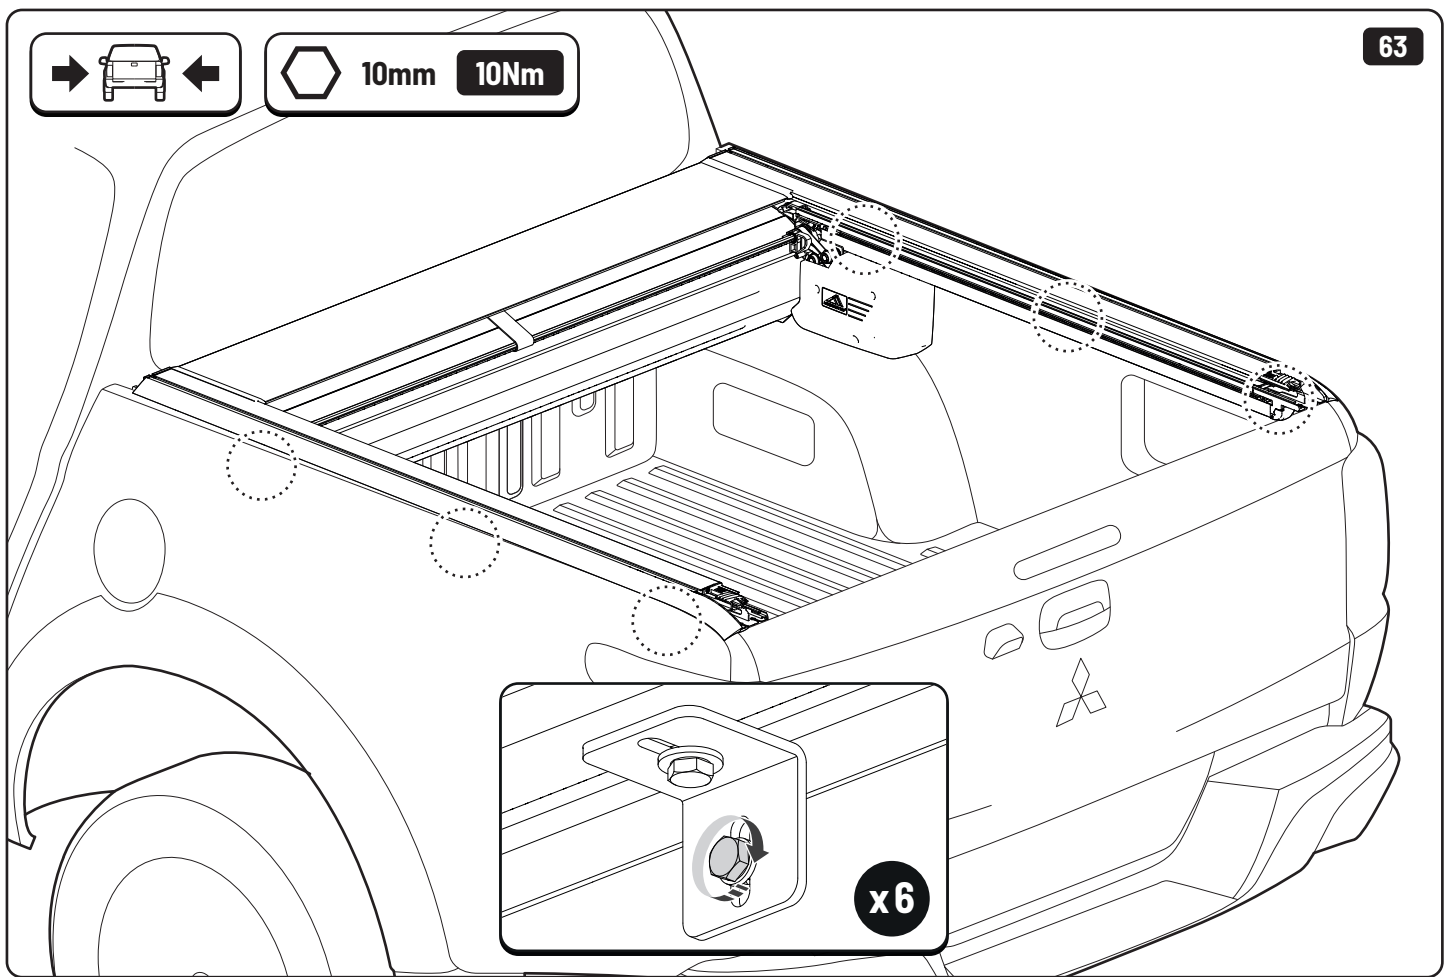



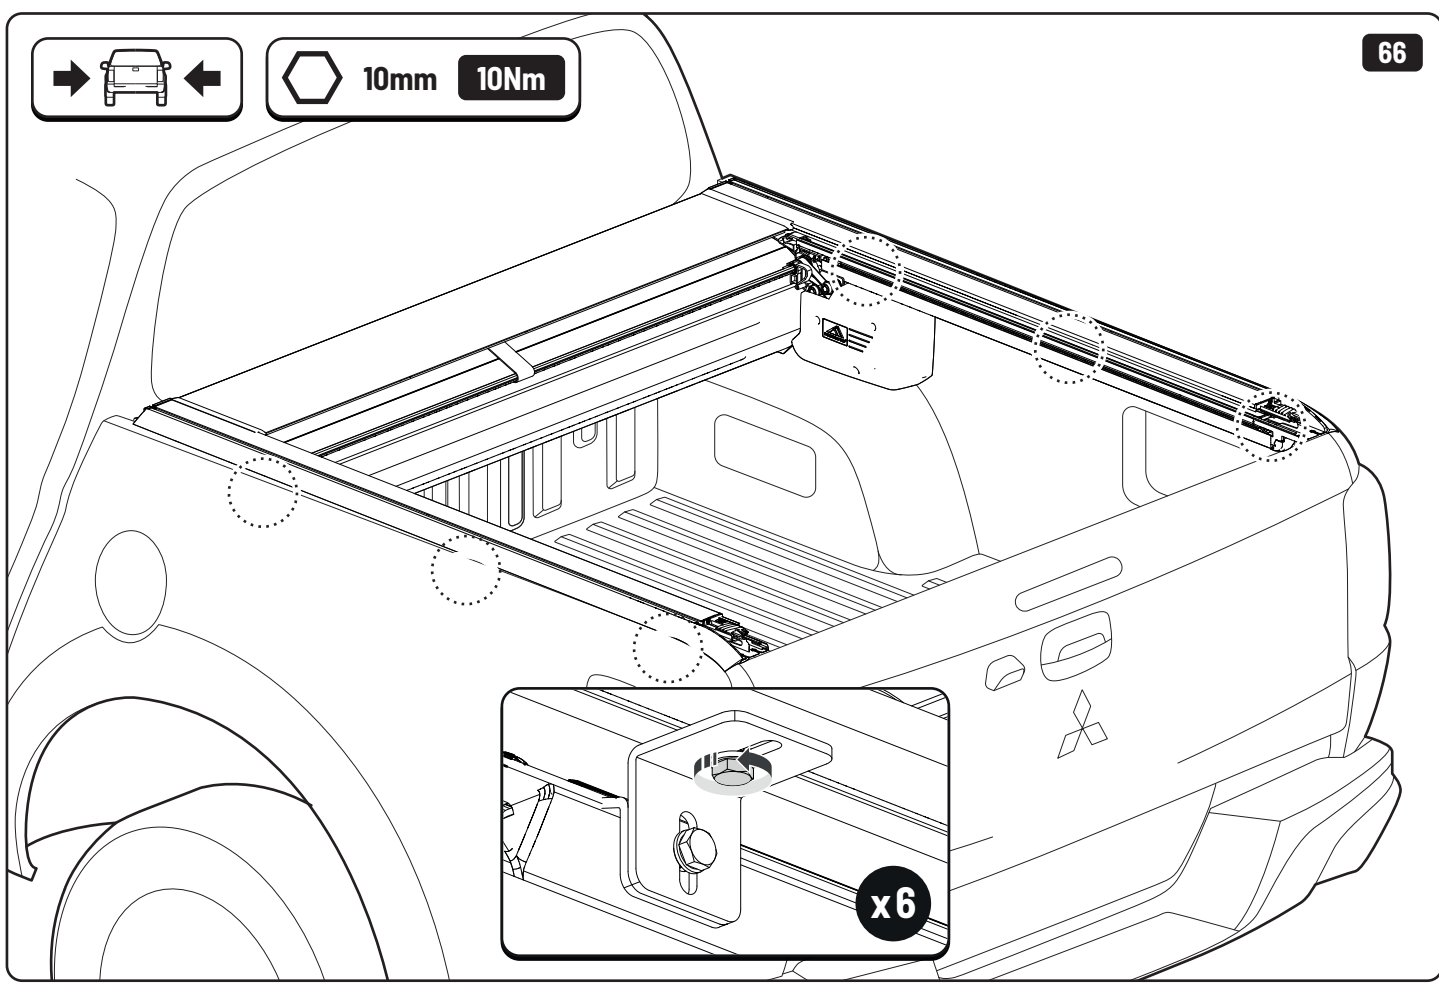
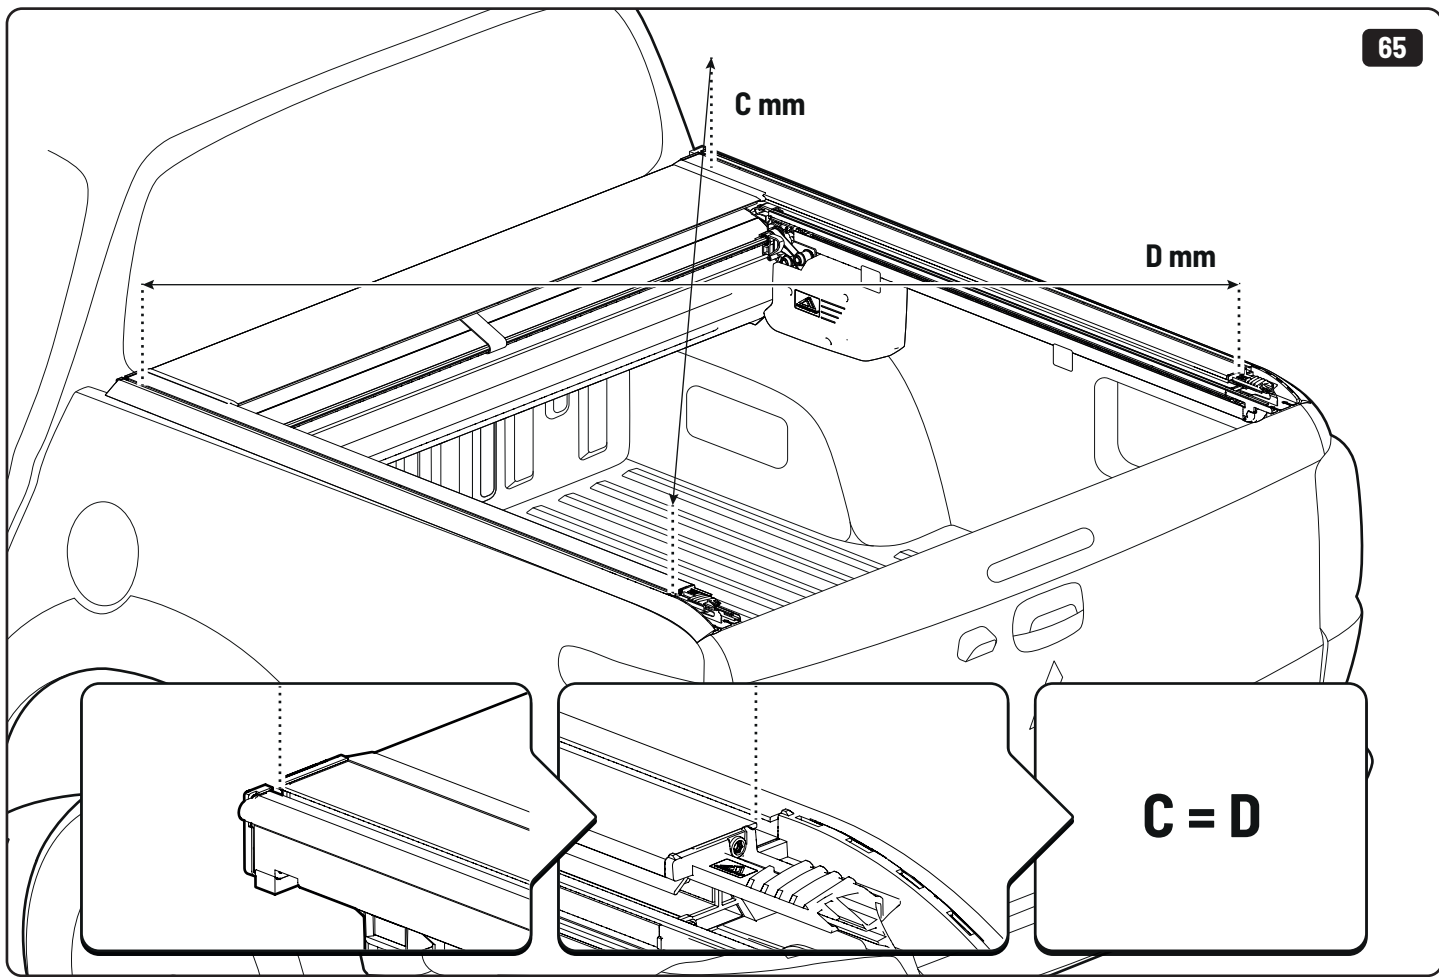


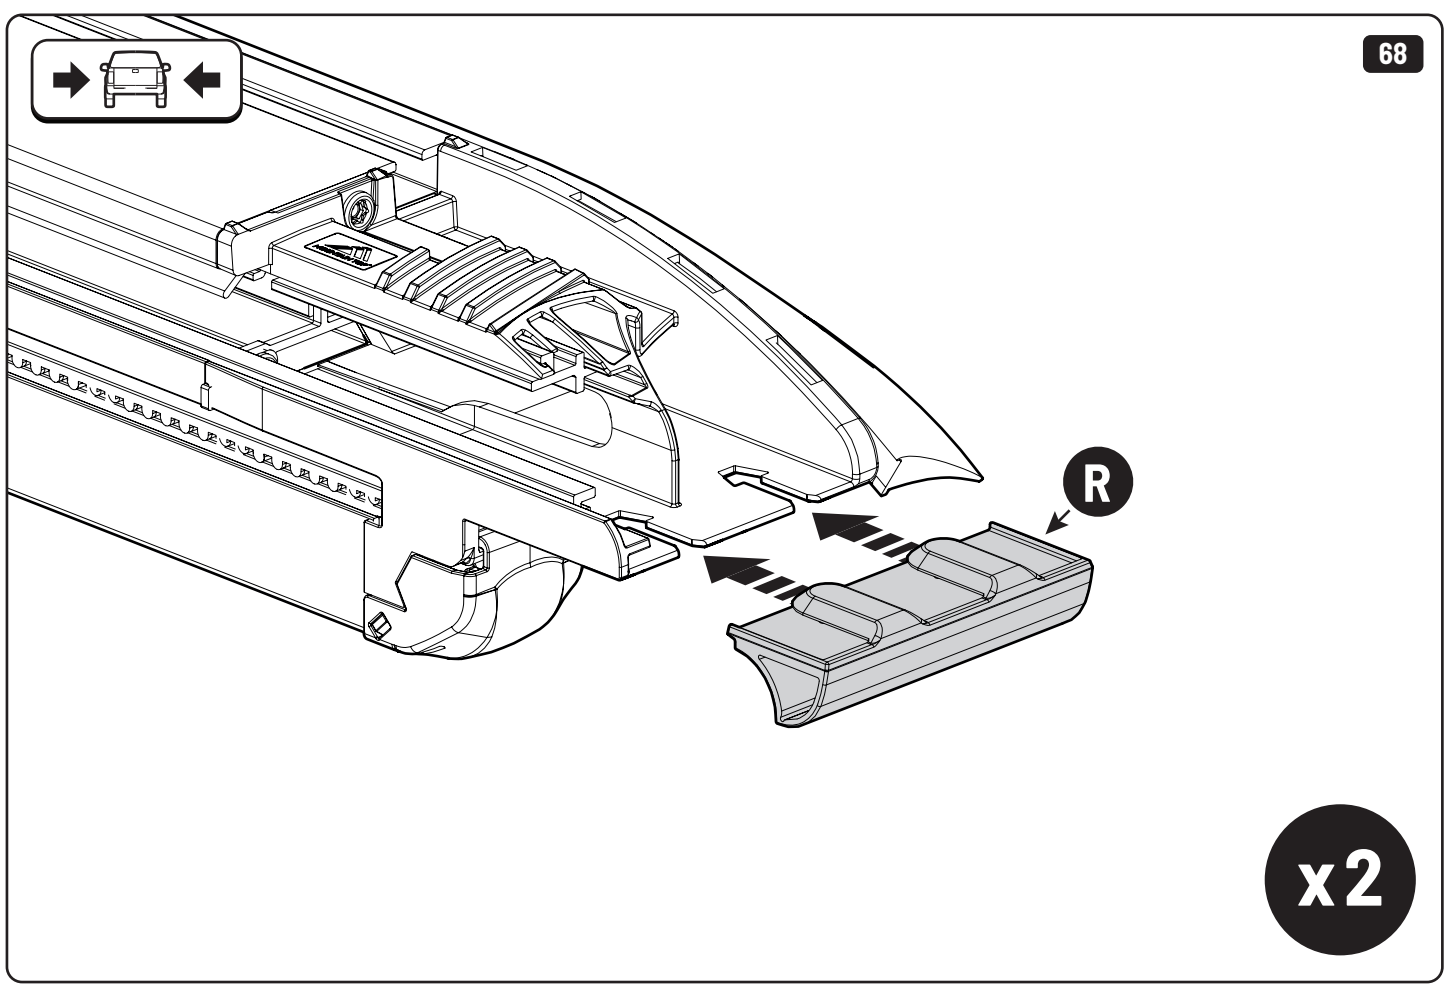
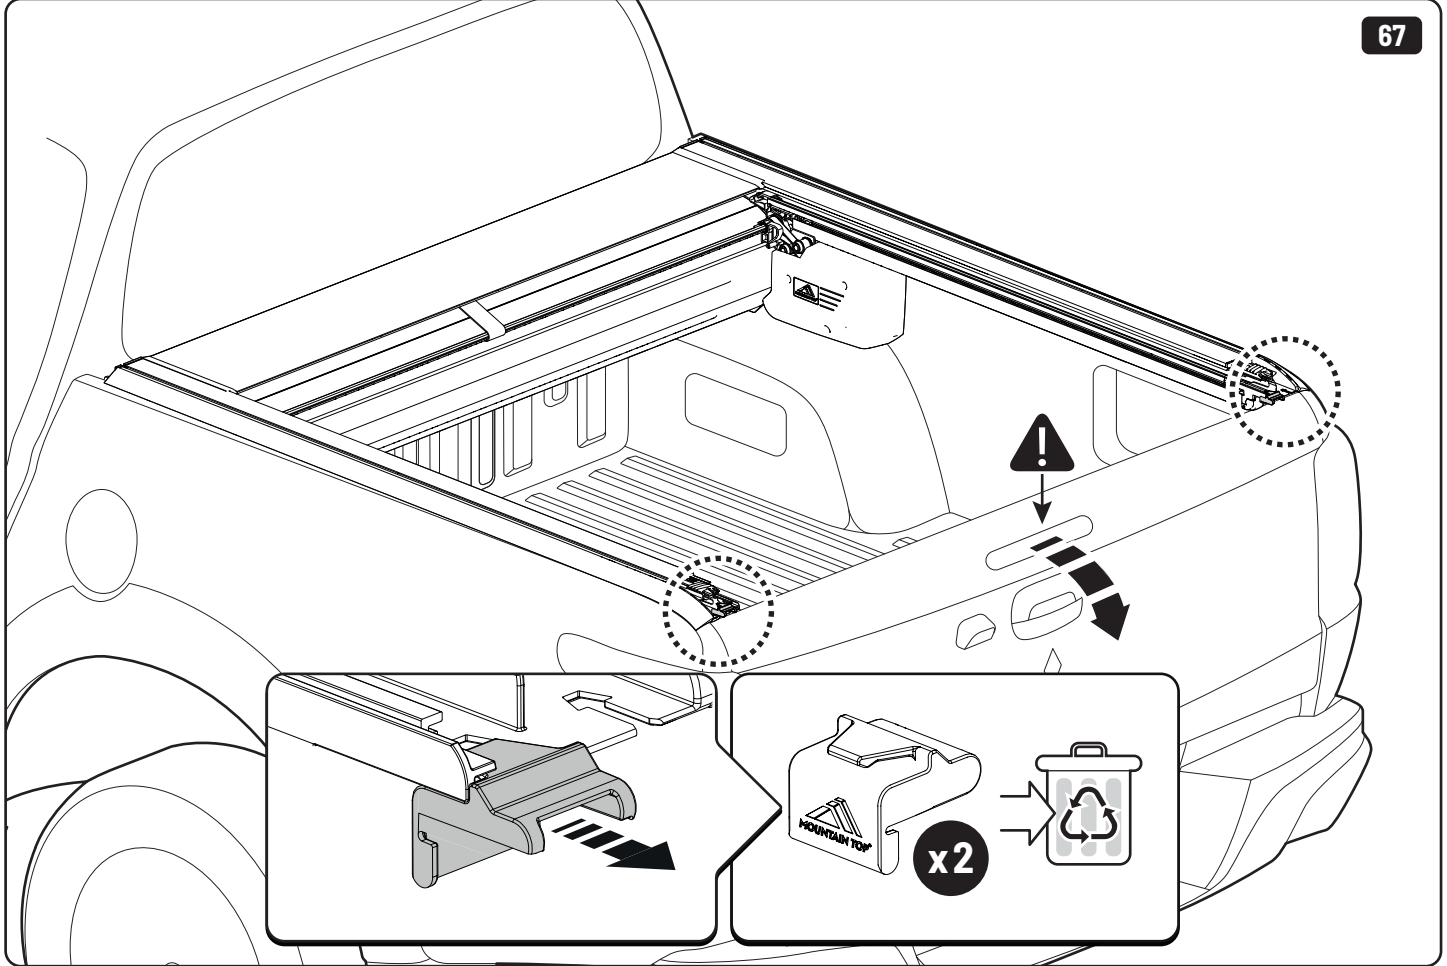


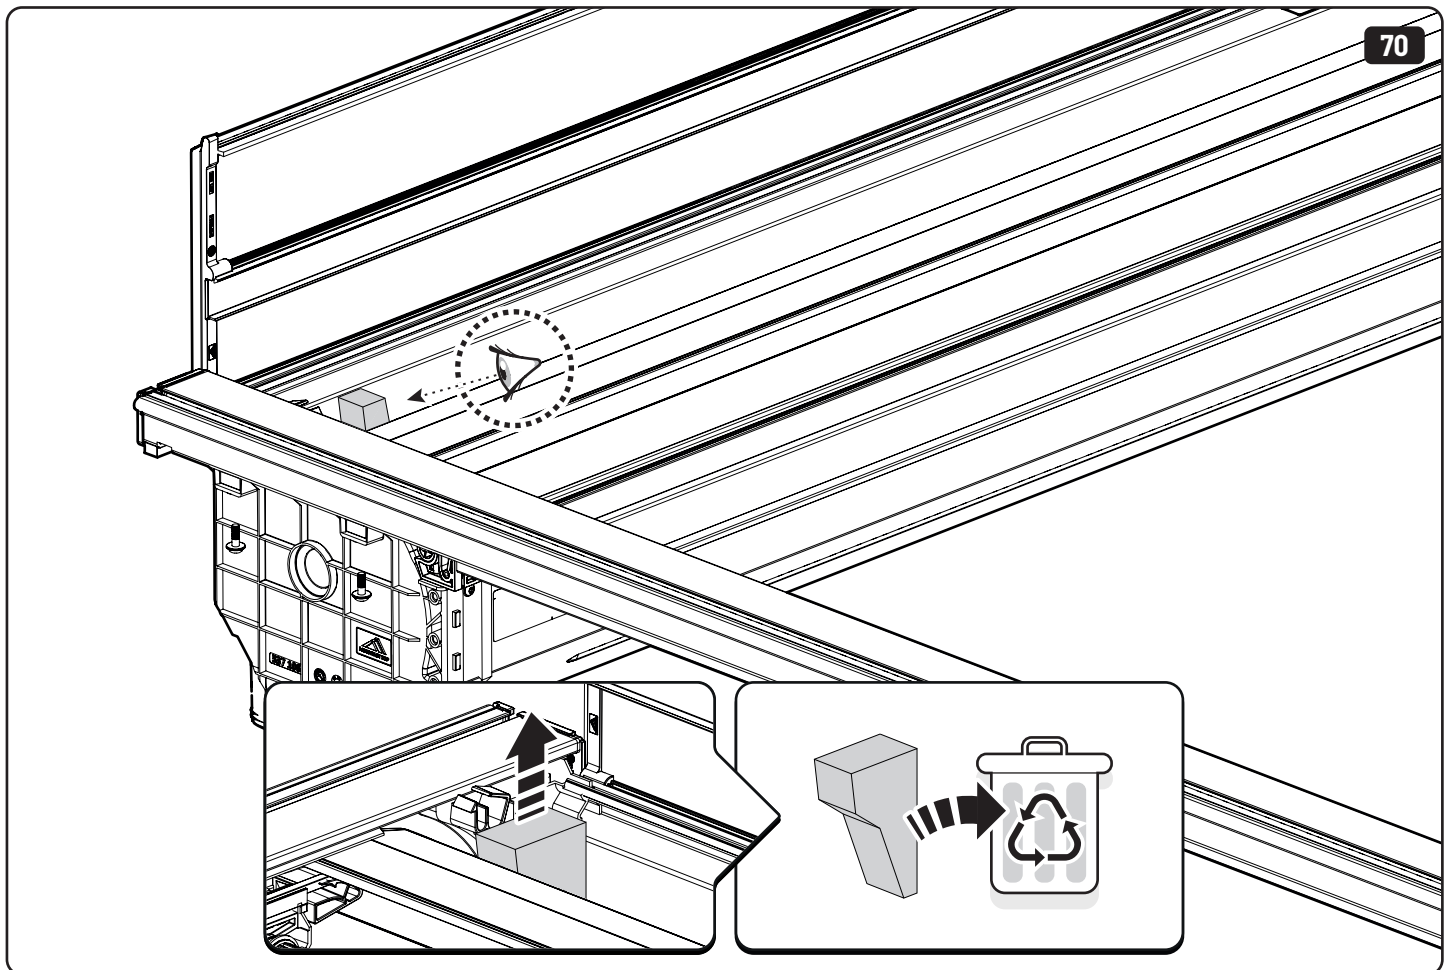
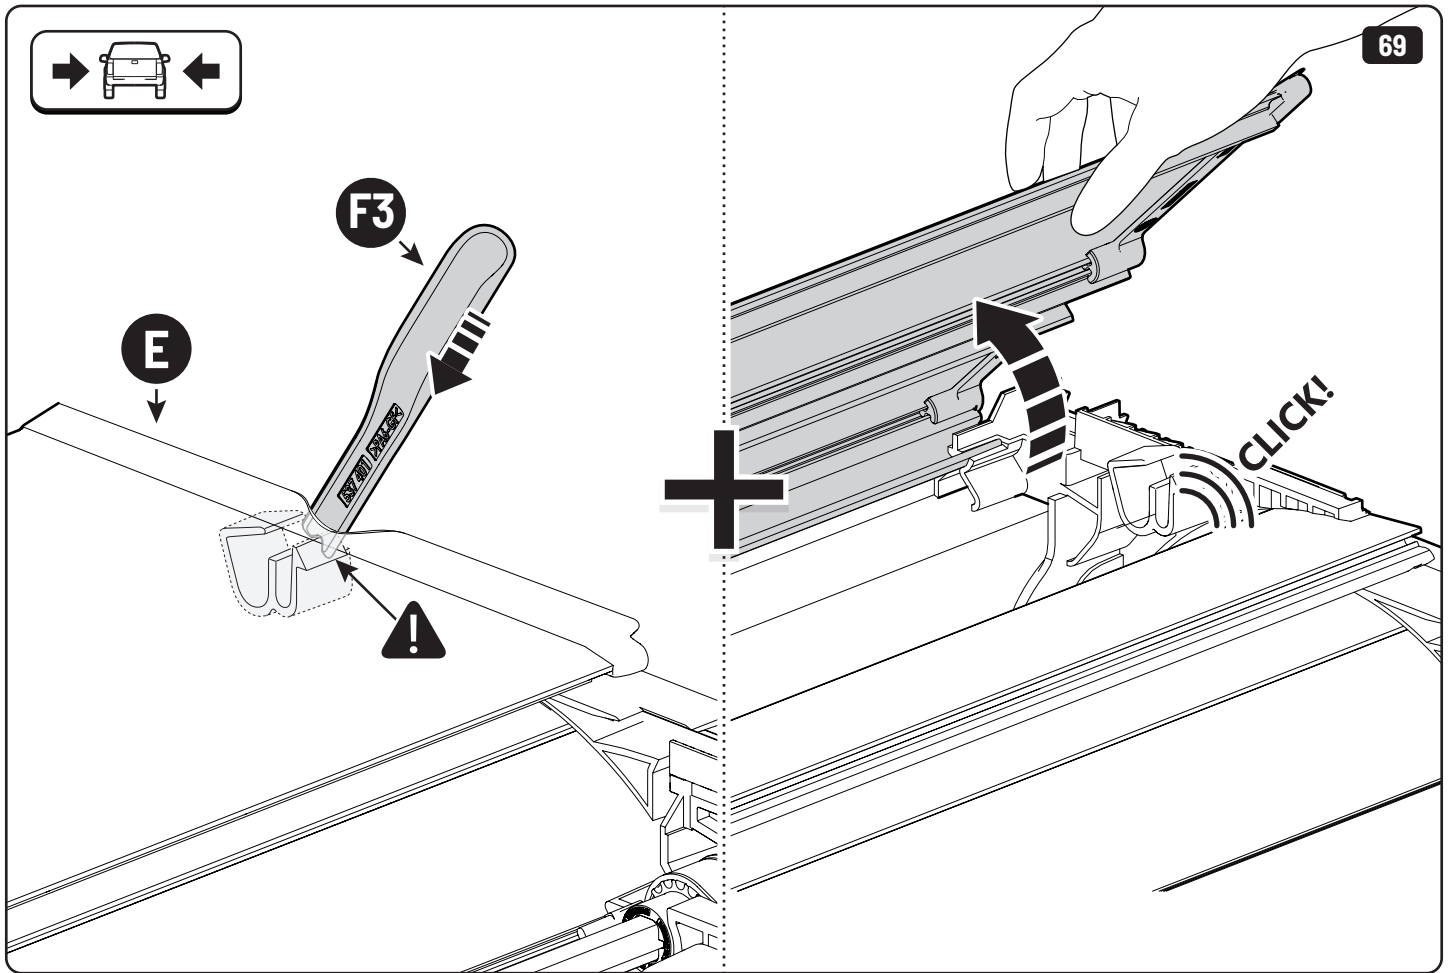








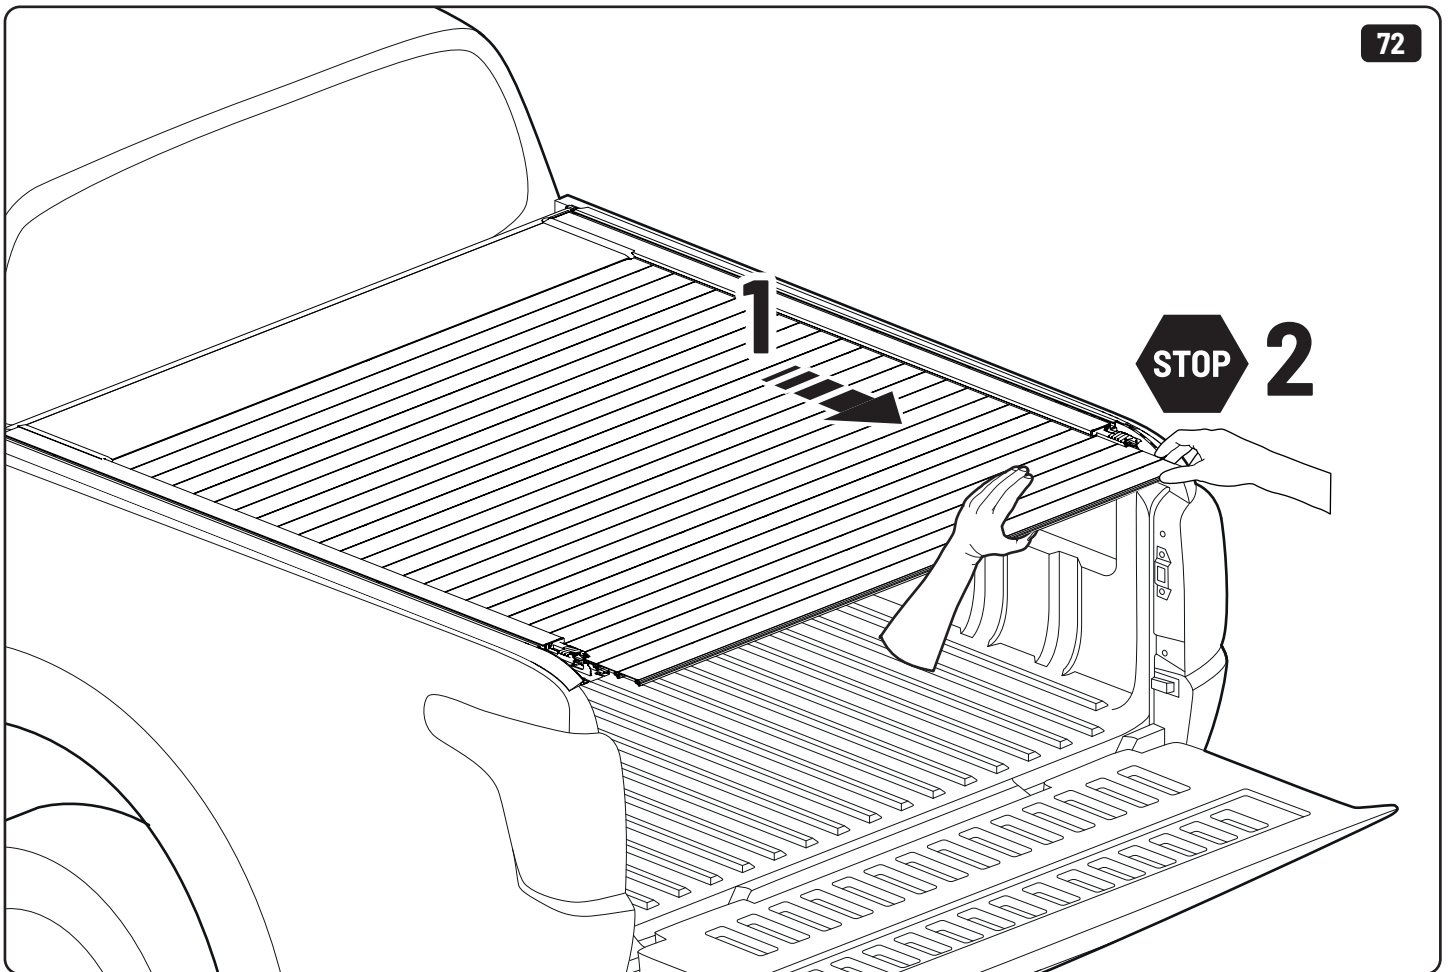
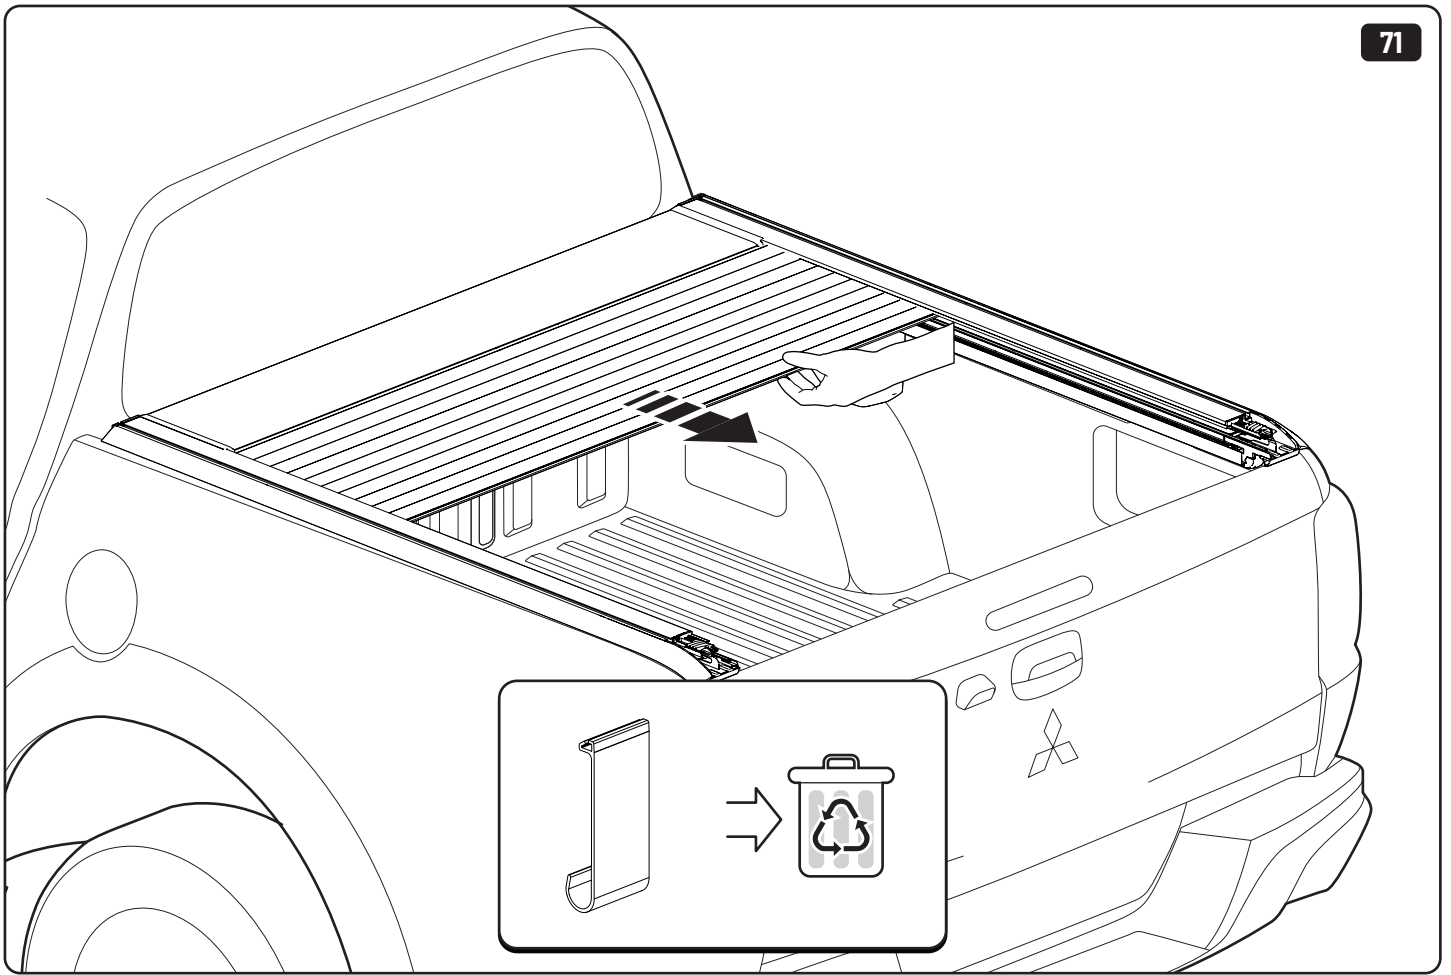


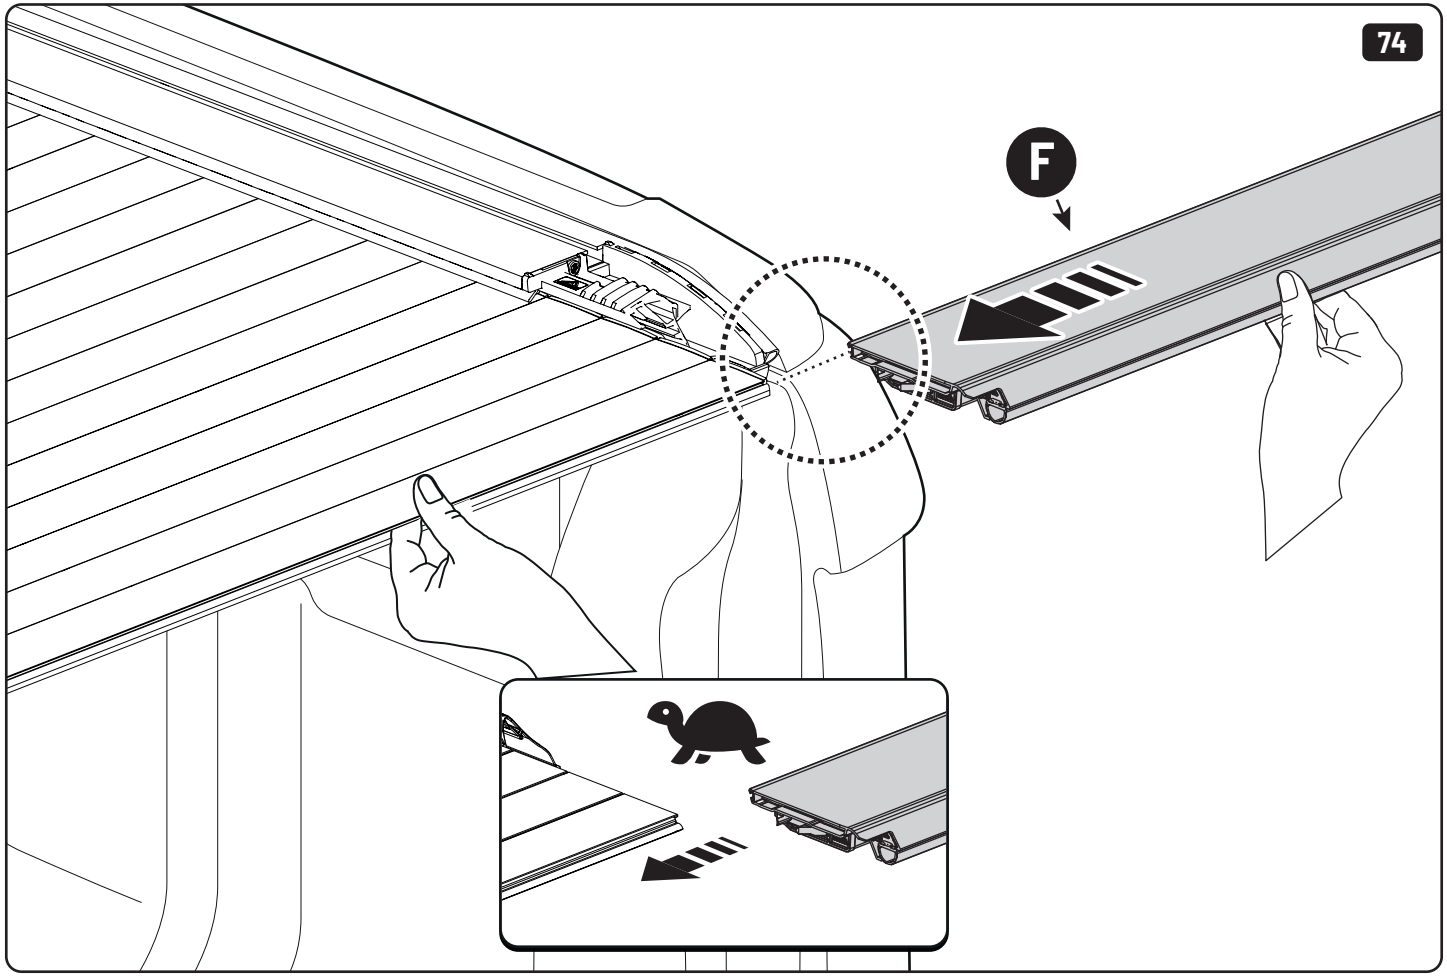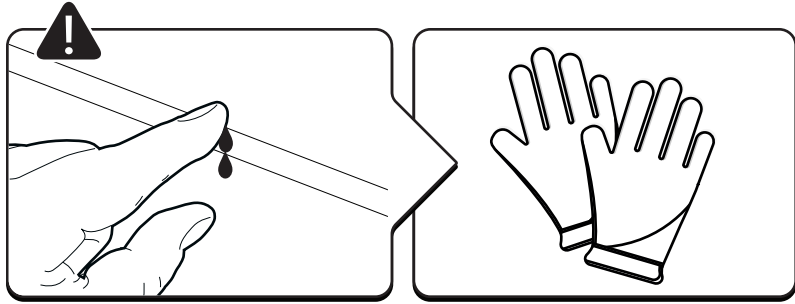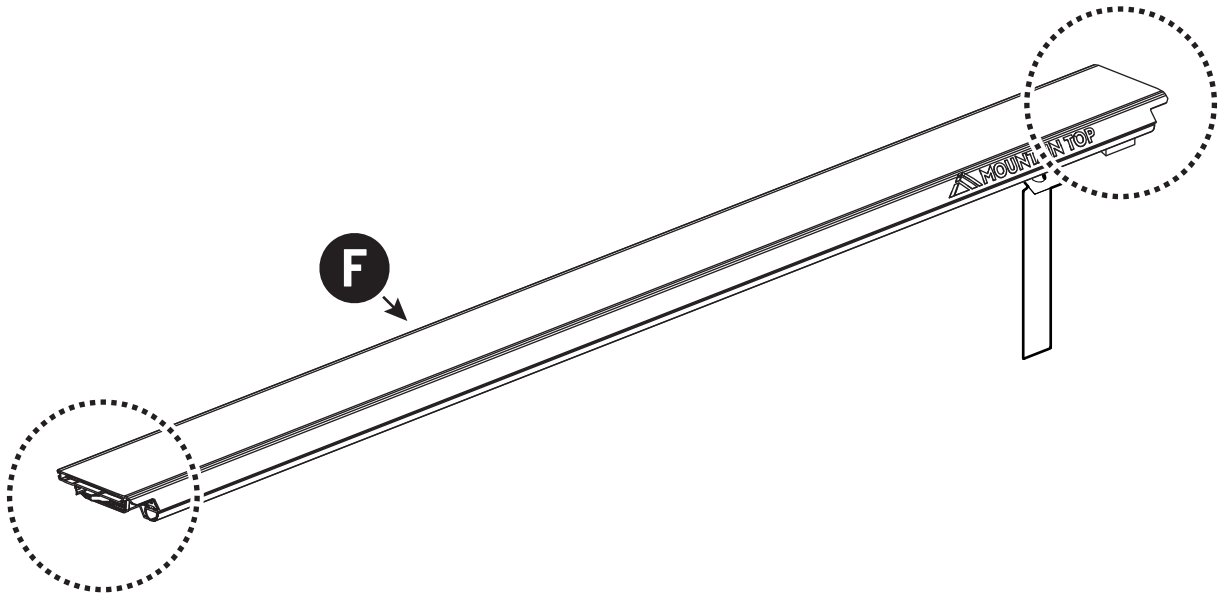


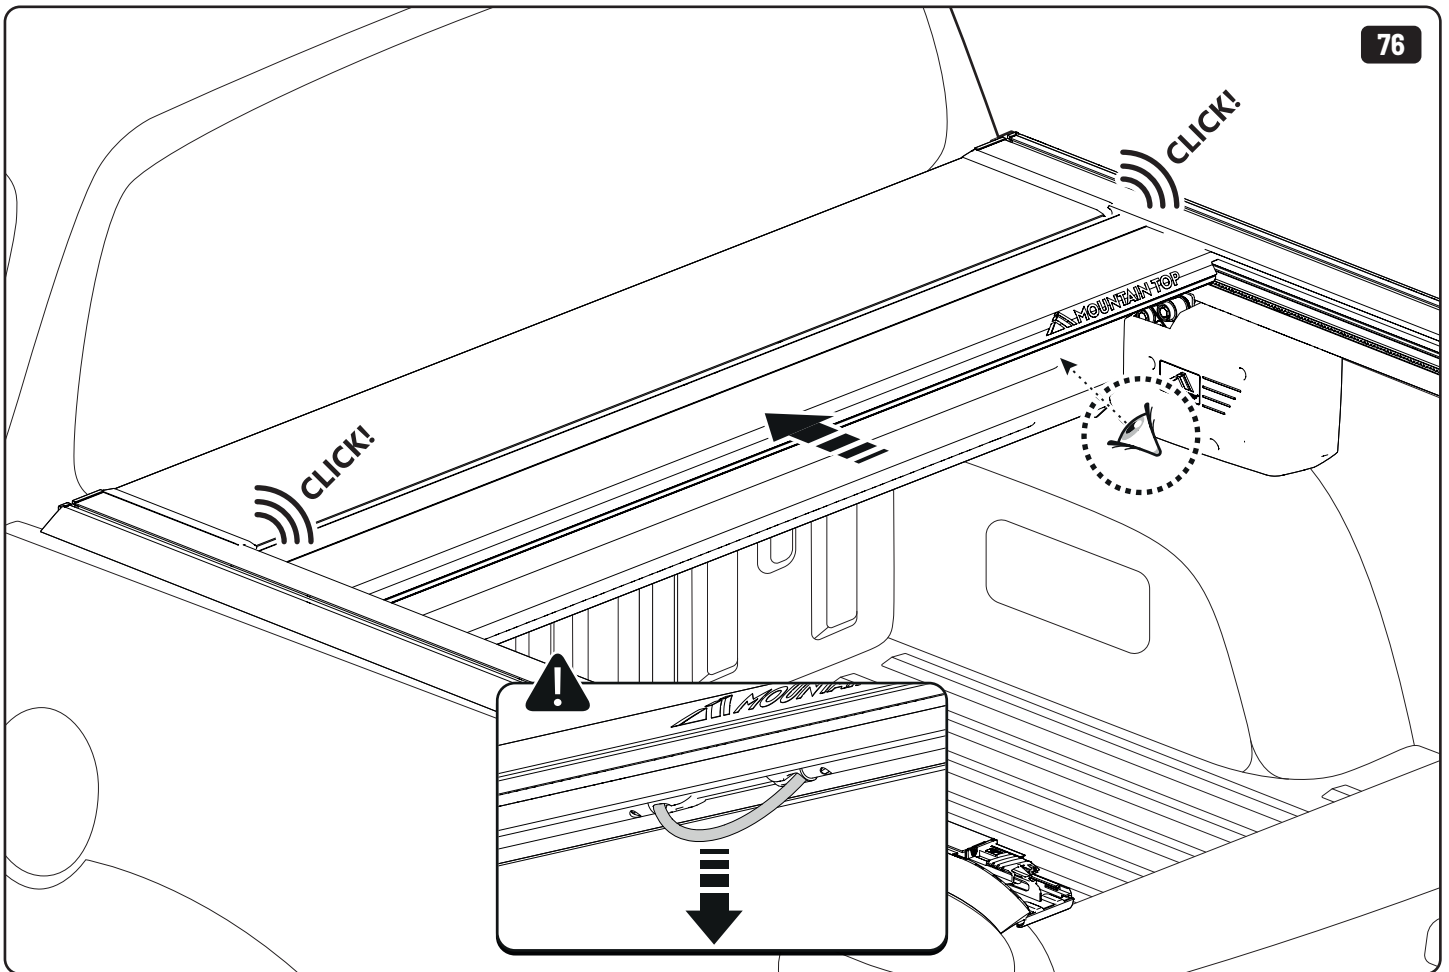
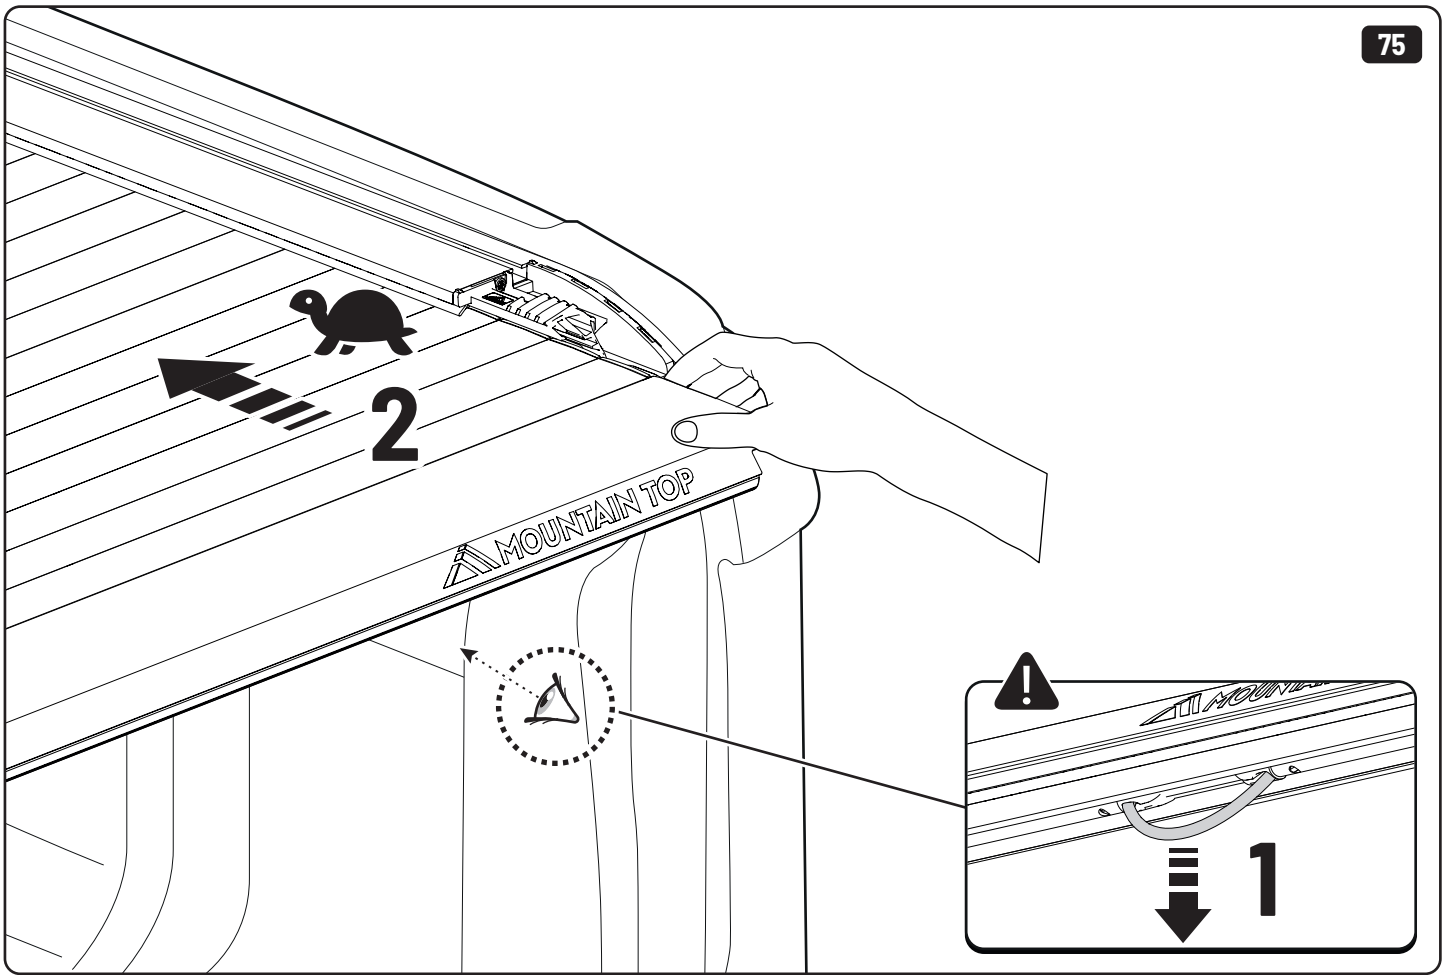


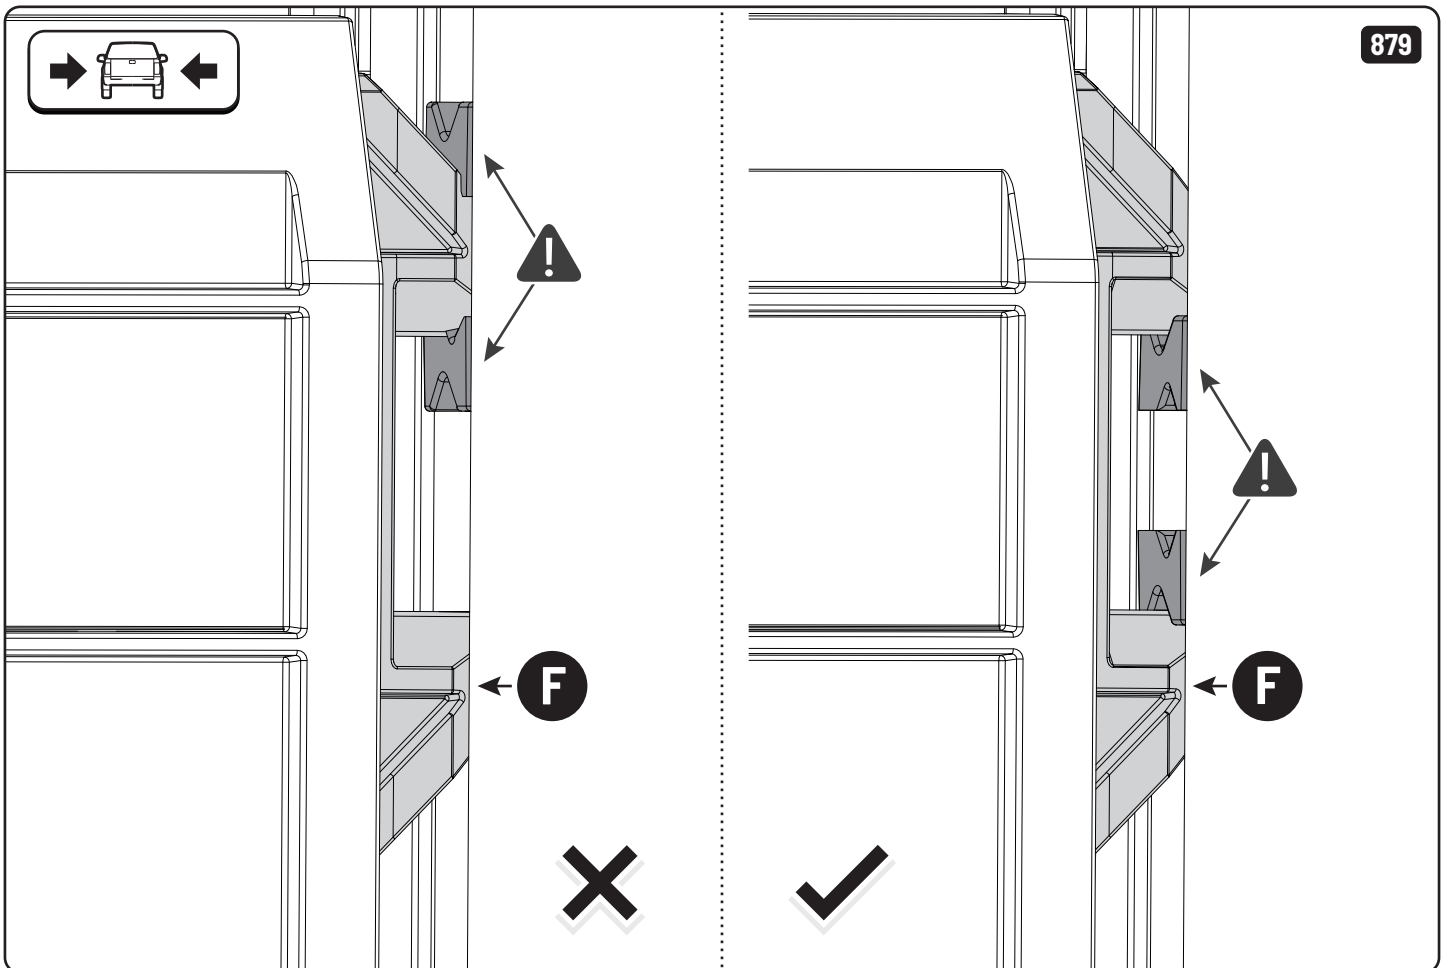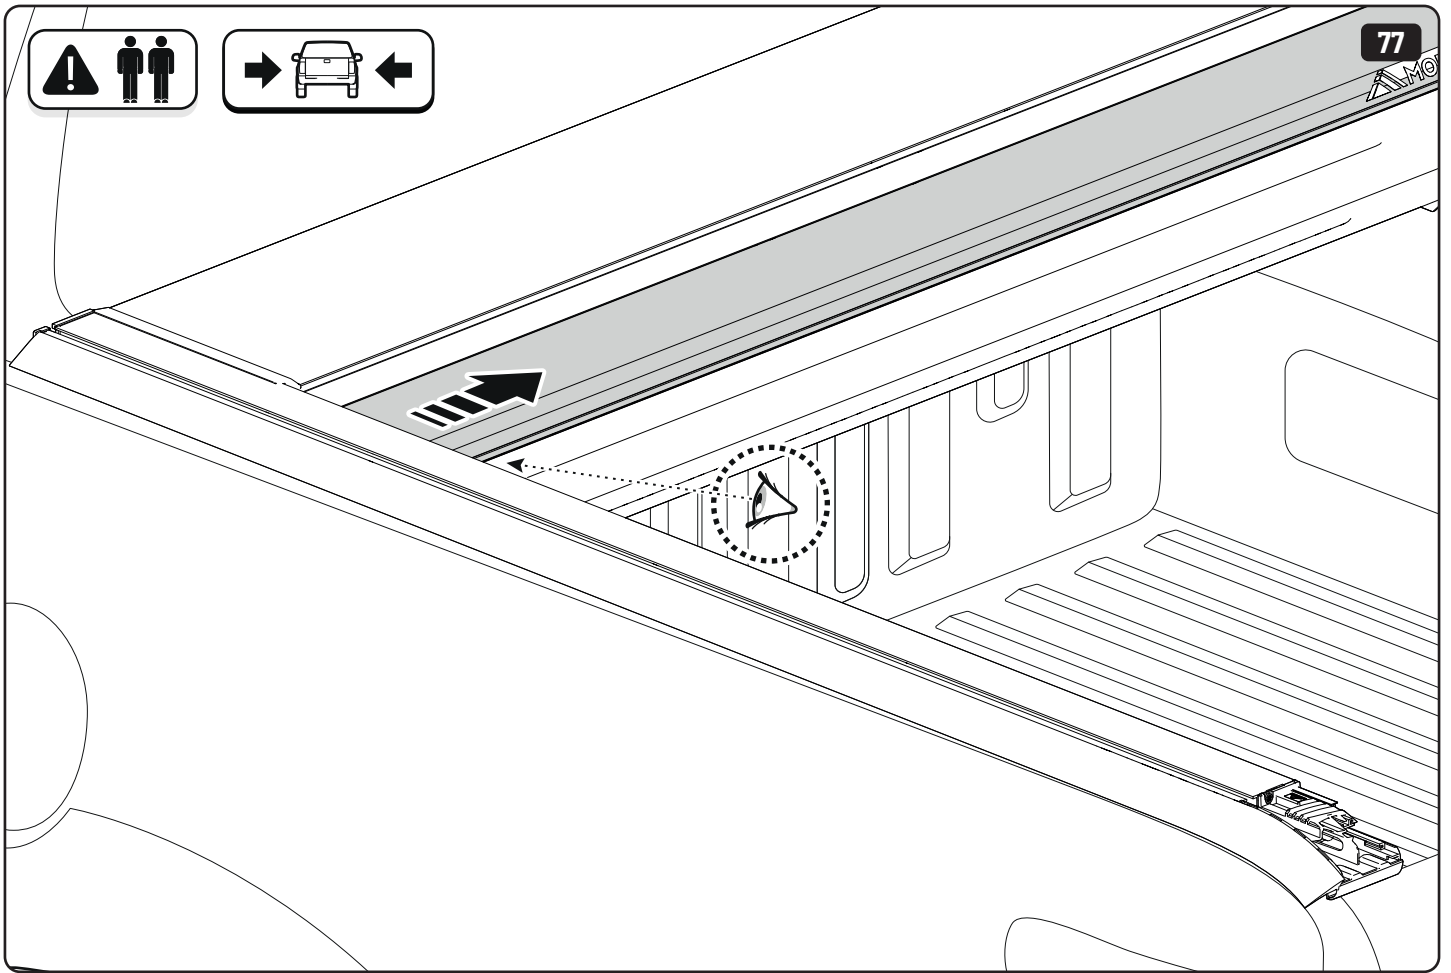

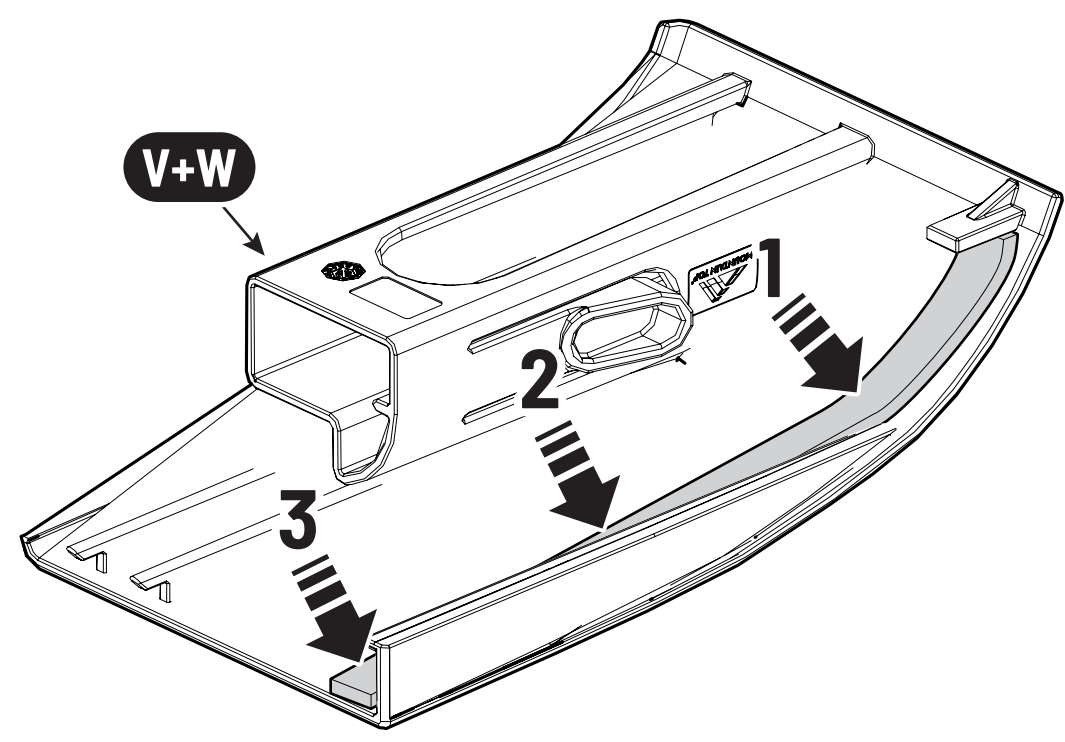
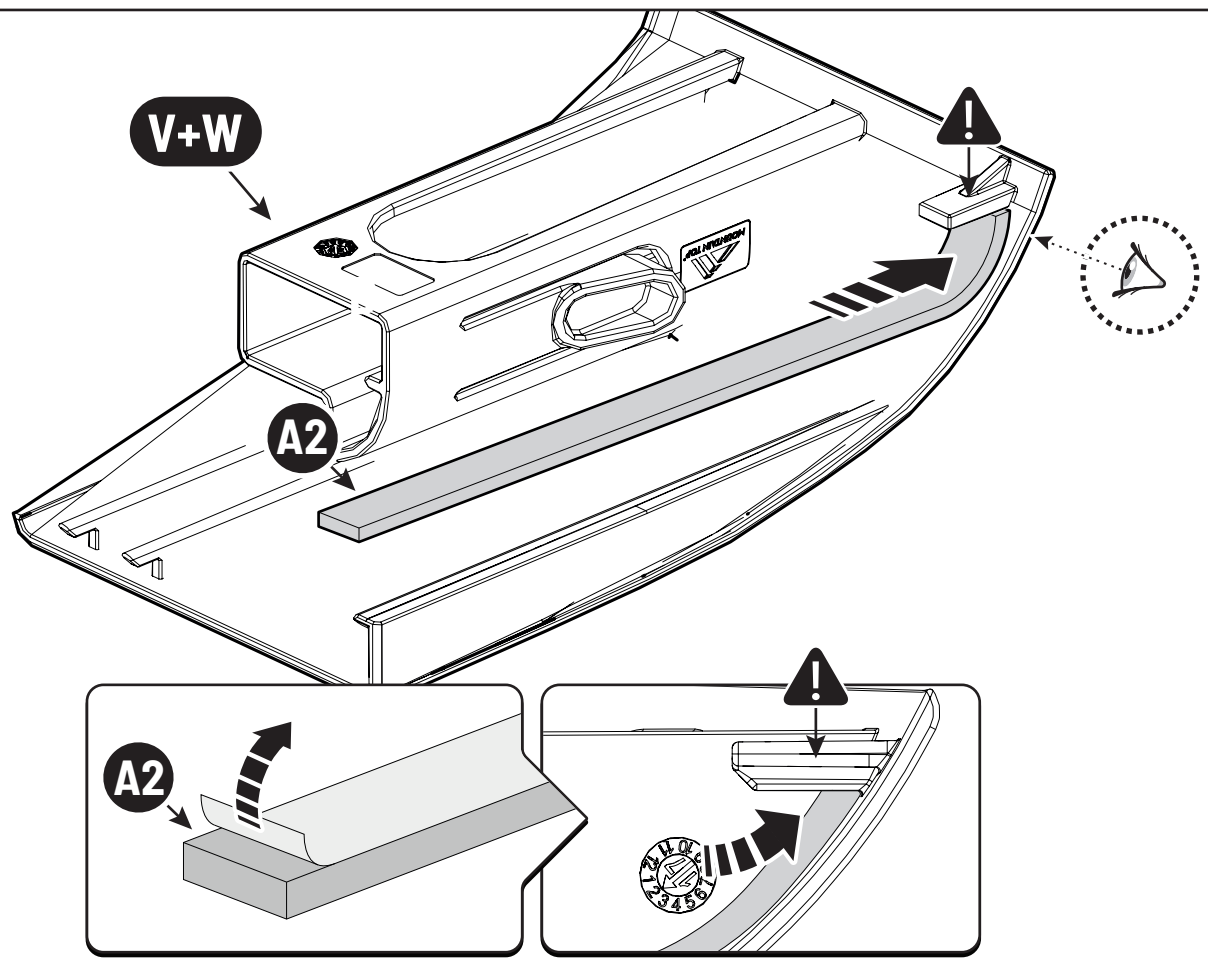


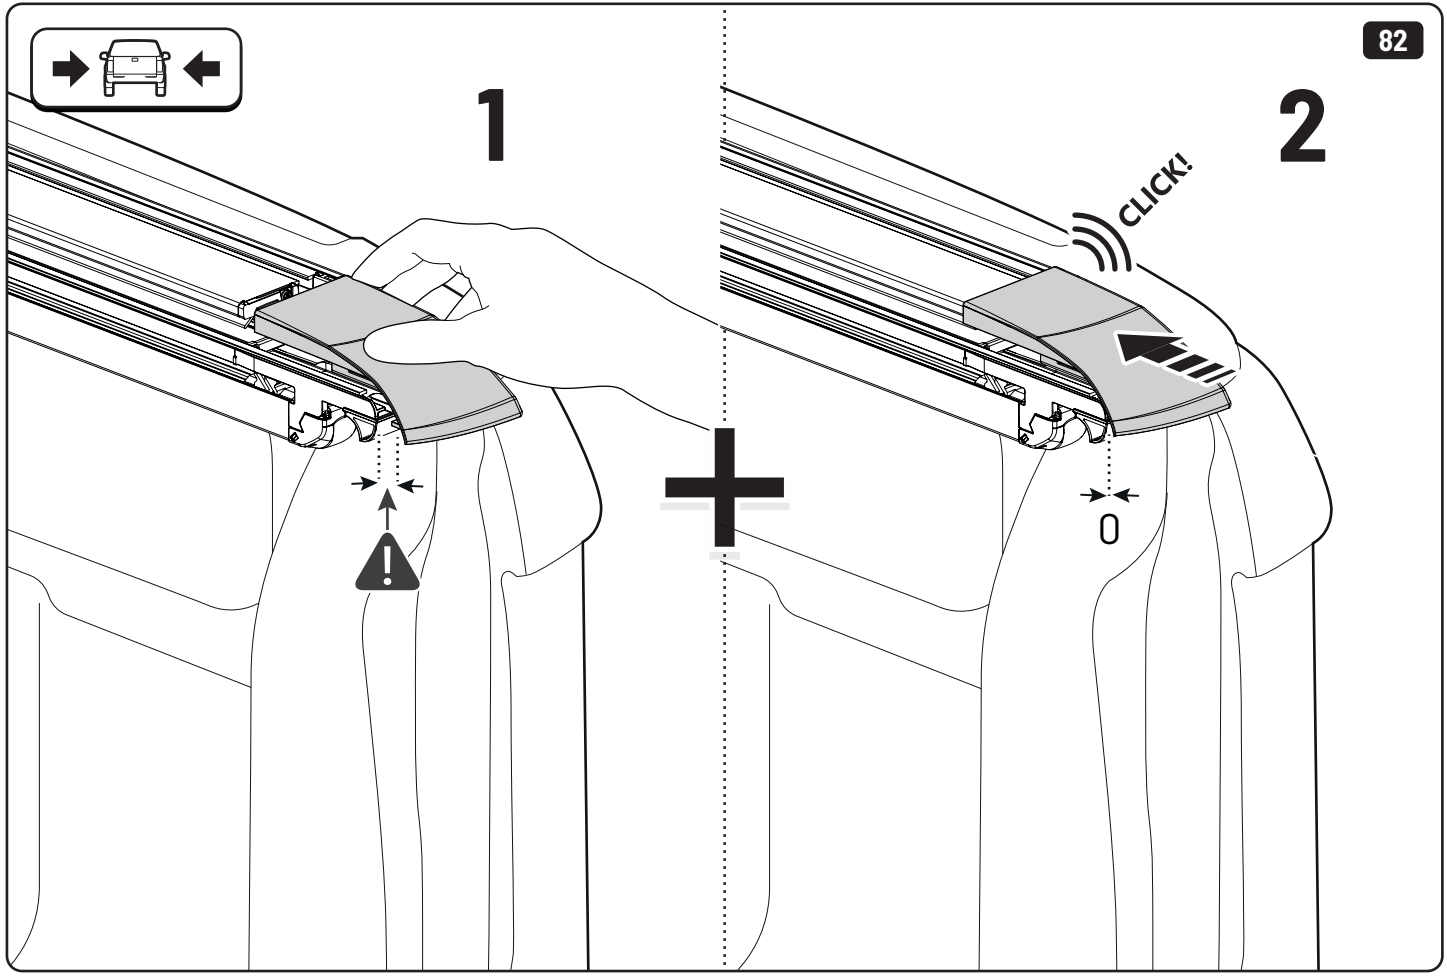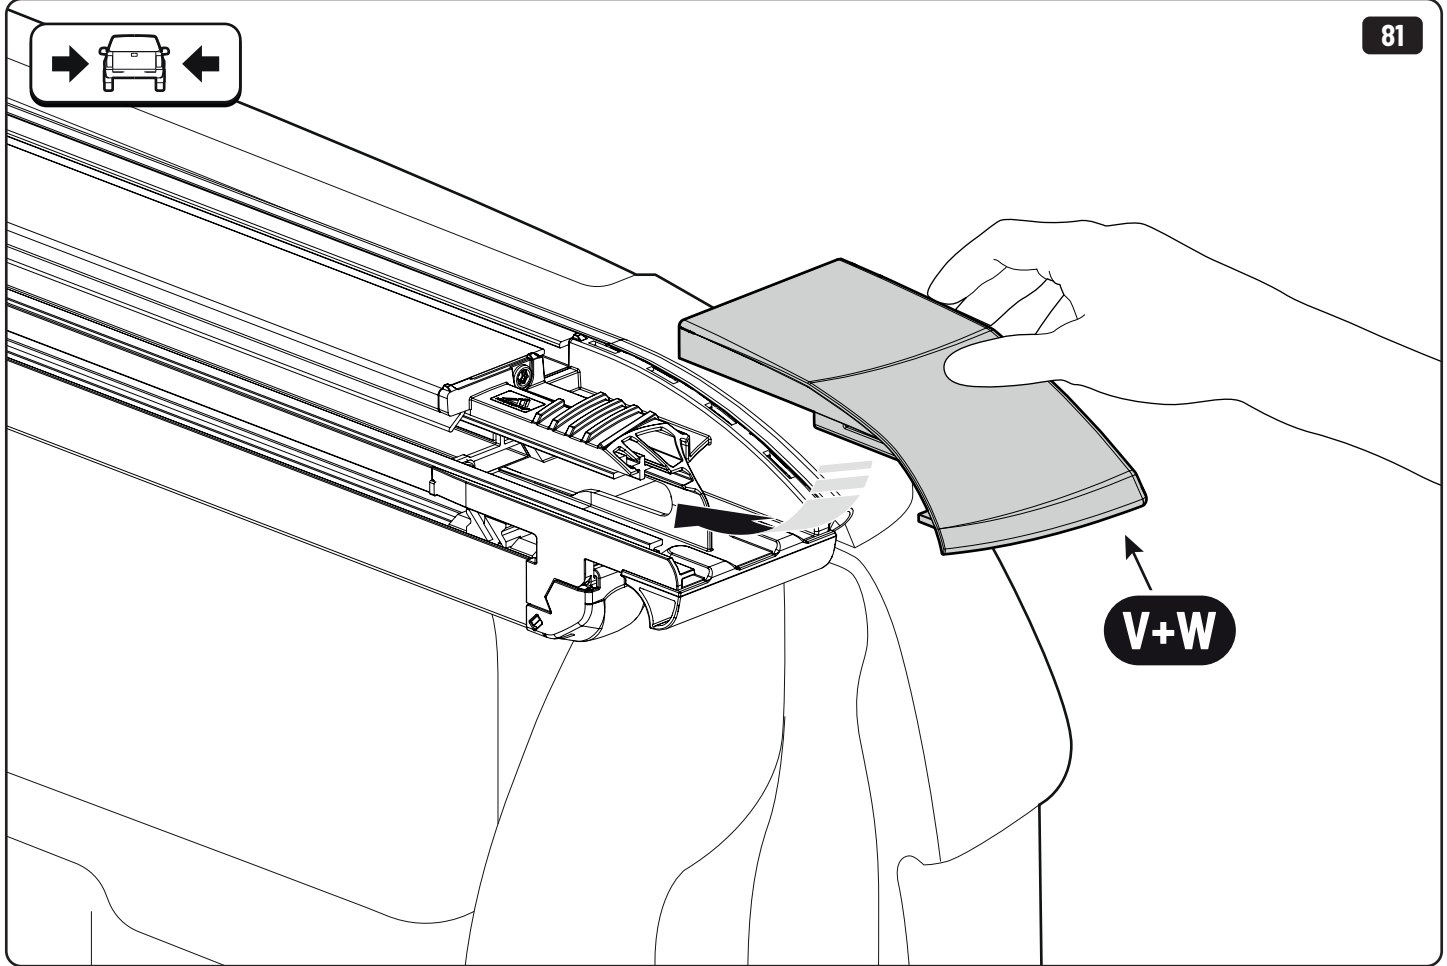

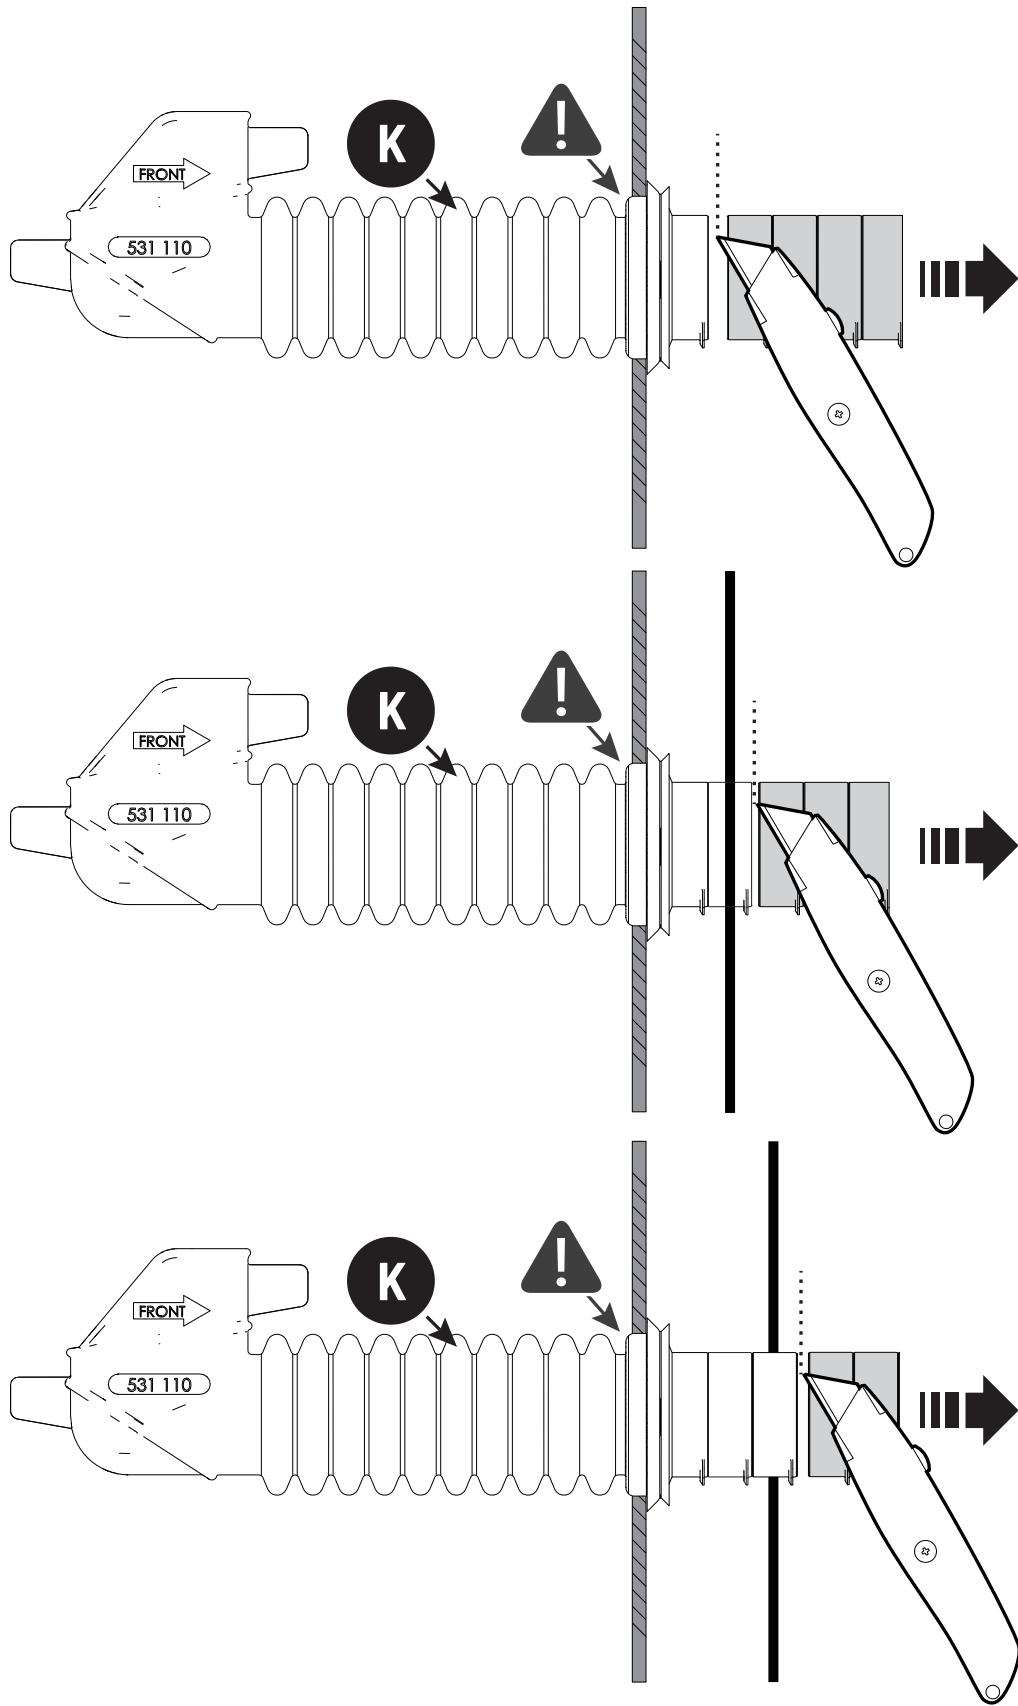

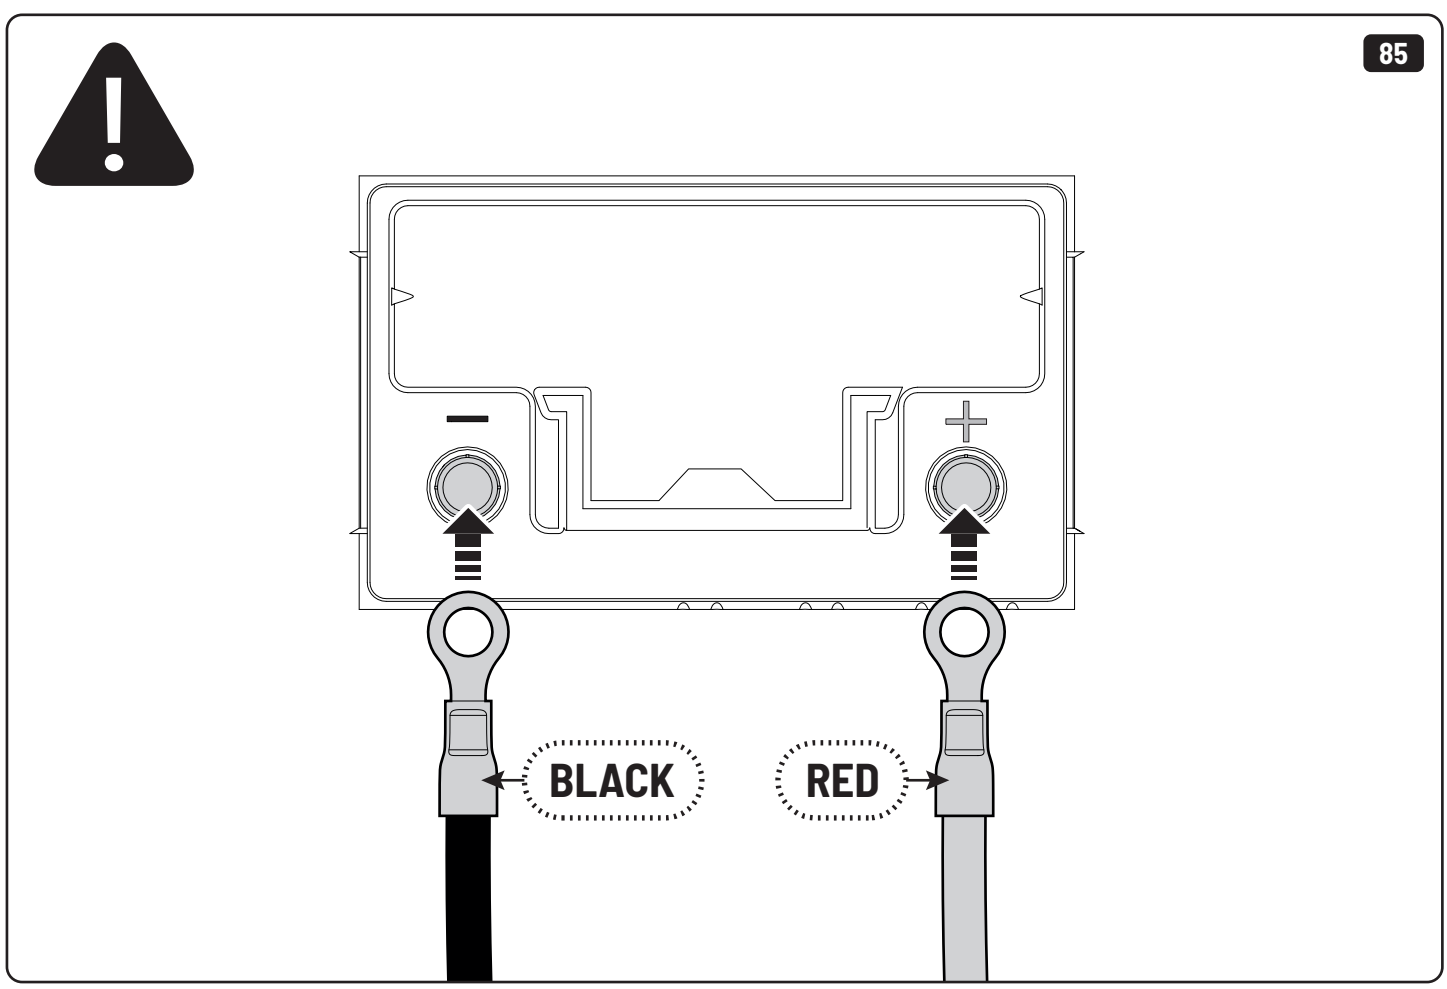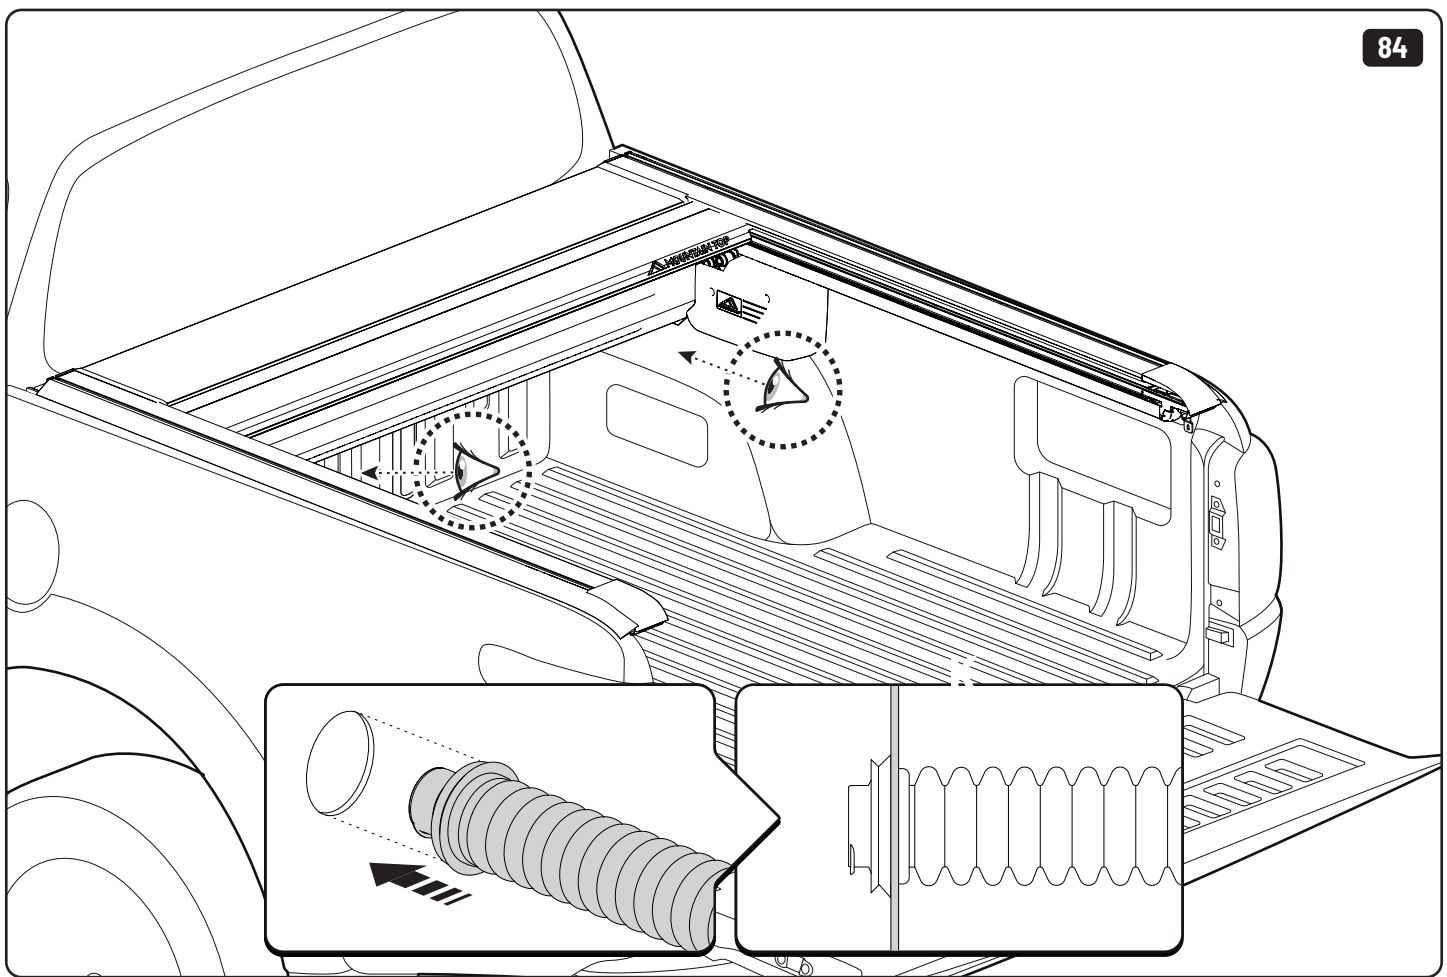




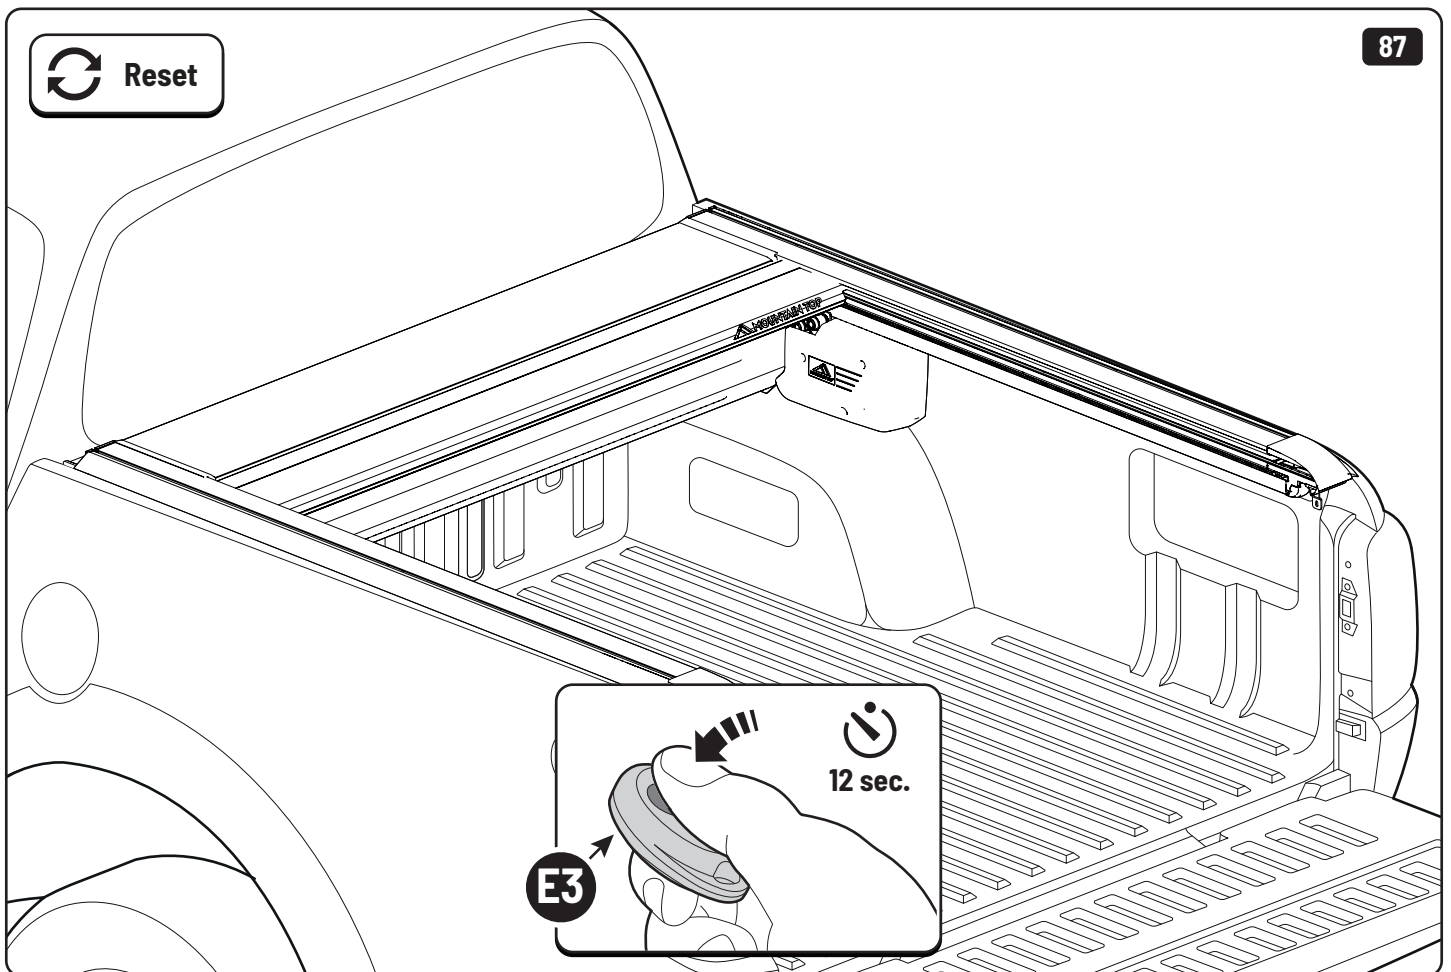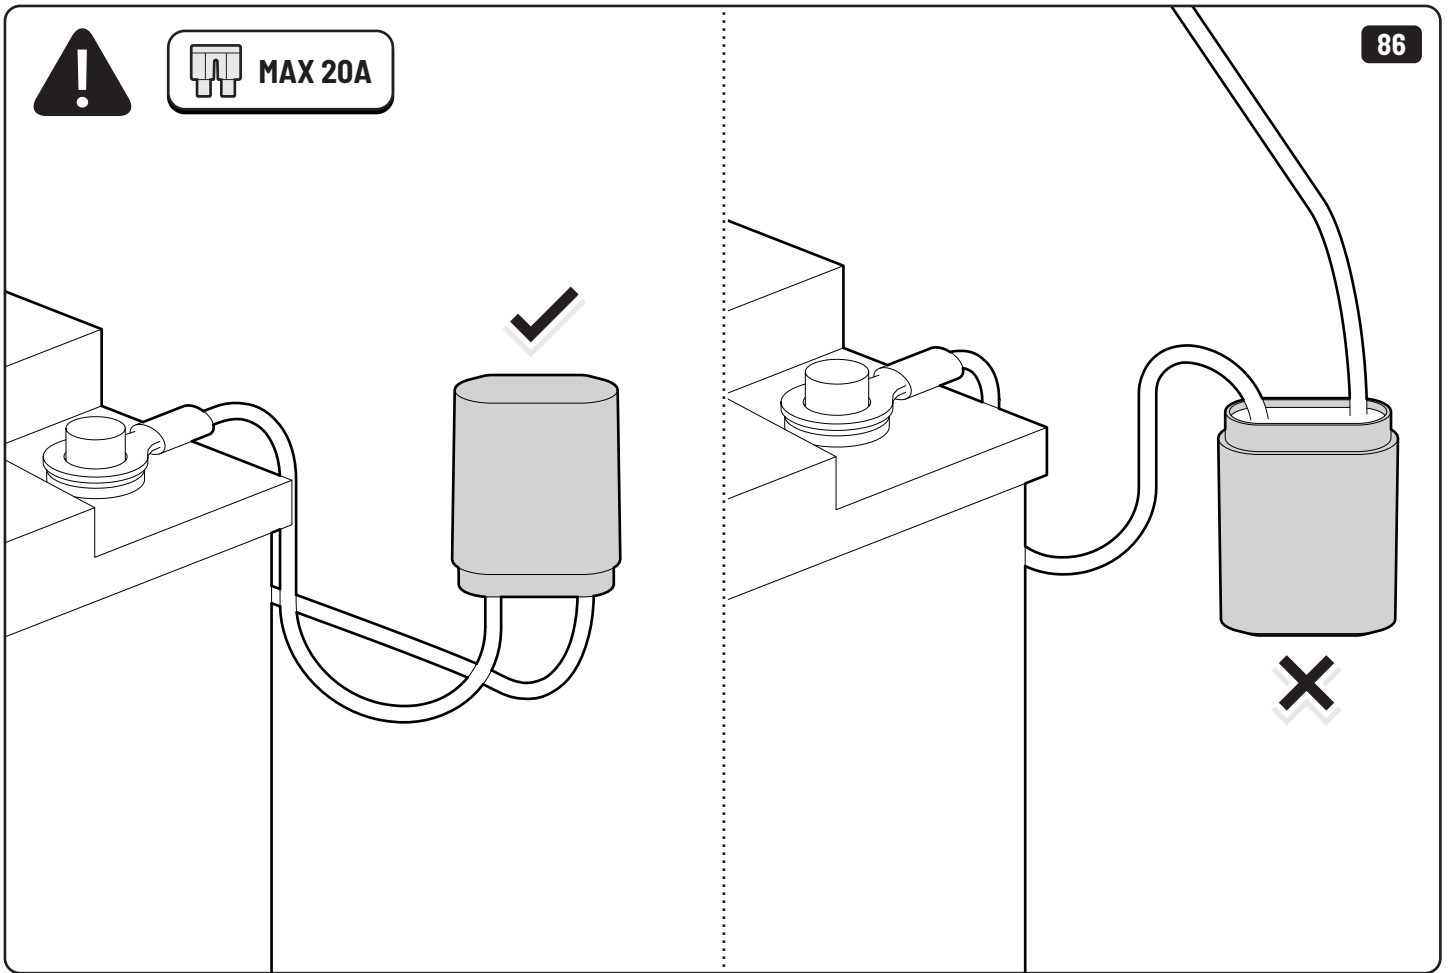


 Reset

88

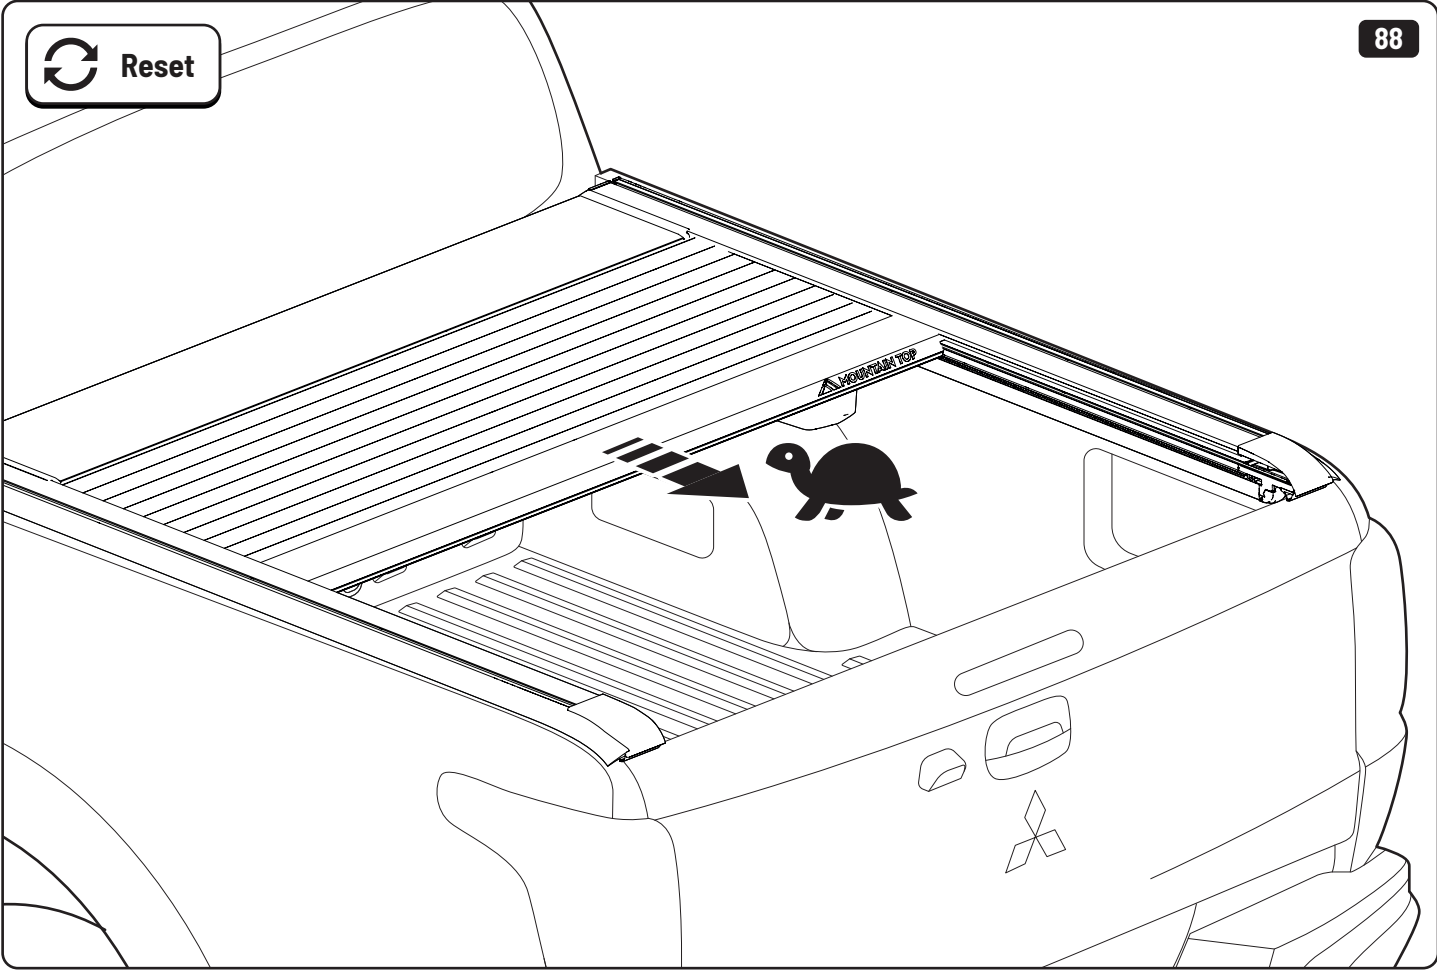

89

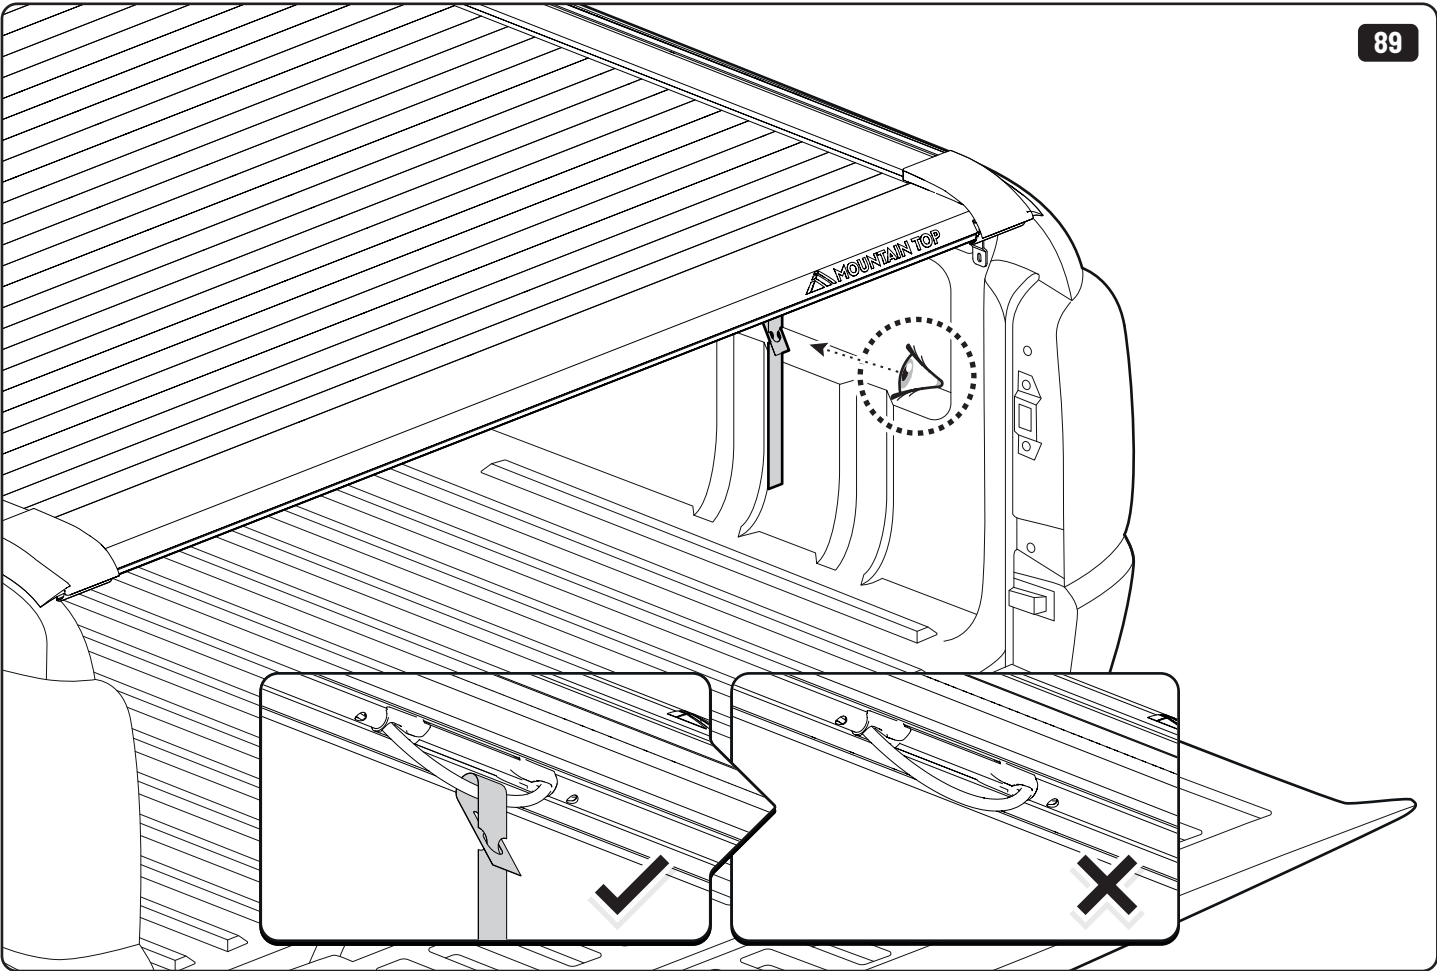



<b>Steps</b>	<b>Page</b>	<b>Done by</b>
Mounting rubber cross	6	
Mounting gliding rail in canister	12	
Holes for drain	20	
Width + Cross measurement	37-38	
Tightening bolts	37-38	
Mounting drain	47-48	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EVOe MI10 HB01	L200 / 2019 ->	Double Cab	1 hour (s)	43 kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni di montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare